

This is a digital copy of a book that was preserved for generations on library shelves before it was carefully scanned by Google as part of a project to make the world's books discoverable online.

It has survived long enough for the copyright to expire and the book to enter the public domain. A public domain book is one that was never subject to copyright or whose legal copyright term has expired. Whether a book is in the public domain may vary country to country. Public domain books are our gateways to the past, representing a wealth of history, culture and knowledge that's often difficult to discover.

Marks, notations and other marginalia present in the original volume will appear in this file - a reminder of this book's long journey from the publisher to a library and finally to you.

Usage guidelines

Google is proud to partner with libraries to digitize public domain materials and make them widely accessible. Public domain books belong to the public and we are merely their custodians. Nevertheless, this work is expensive, so in order to keep providing this resource, we have taken steps to prevent abuse by commercial parties, including placing technical restrictions on automated querying.

We also ask that you:

- + *Make non-commercial use of the files* We designed Google Book Search for use by individuals, and we request that you use these files for personal, non-commercial purposes.
- + Refrain from automated querying Do not send automated queries of any sort to Google's system: If you are conducting research on machine translation, optical character recognition or other areas where access to a large amount of text is helpful, please contact us. We encourage the use of public domain materials for these purposes and may be able to help.
- + *Maintain attribution* The Google "watermark" you see on each file is essential for informing people about this project and helping them find additional materials through Google Book Search. Please do not remove it.
- + *Keep it legal* Whatever your use, remember that you are responsible for ensuring that what you are doing is legal. Do not assume that just because we believe a book is in the public domain for users in the United States, that the work is also in the public domain for users in other countries. Whether a book is still in copyright varies from country to country, and we can't offer guidance on whether any specific use of any specific book is allowed. Please do not assume that a book's appearance in Google Book Search means it can be used in any manner anywhere in the world. Copyright infringement liability can be quite severe.

About Google Book Search

Google's mission is to organize the world's information and to make it universally accessible and useful. Google Book Search helps readers discover the world's books while helping authors and publishers reach new audiences. You can search through the full text of this book on the web at http://books.google.com/





Digitized by GOOgle

LIBRARY

UF THE

UNIVERSITY OF CALIFORNIA.

Class






Digitized by Google



SELF-HELP MECHANICAL DRAWING

AN EDUCATIONAL TREATISE

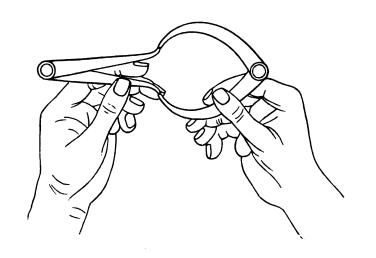

3.

"LEARN TO DO A THING BY DOING IT."-OLD PROYERB

SELF-HELP MECHANICAL DRAWING

AN EDUCATIONAL TREATISE





N. HAWKINS, M. E.

Author of Handbook of Calculations, etc.

New York: THEO. AUDEL & CO., Publishers



Copyrighted
by
Theo. Audel & Co.
New York
1902

This work

is

most kindly and
respectfully dedicated to

THE COMING MAN

who at the present time
is undoubtedly devoting a goodly share of
his spare time to
the study of
drawing.





Digitized by Google

Preface.

It is because of a personal and practical experience of the advantage to be gained by the possession of a knowledge of drawing, that the author is prompted to undertake the rather pleasant task of producing a self-help book relating to the subject.

Since the days of youthful endeavor, the author has passed through an extended experience of mechanical life, and scarcely ever without chalk, pencil or instrument in hand, to illustrate by sketch or drawing, the tools to be employed, or to picture the finished product; accordingly, throughout this work, words of explanation and the drawings will go together to aid the diligent student.

It has been said by an eminent writer, that "one workman is superior to another—other circumstances being the same—directly in proportion to his knowledge in drawing, and those who are ignorant of it must in many respects be subservient to others who have obtained that knowledge."

It has been also said that no man is fitted to be foreman of a shop who cannot draw, and it is generally true that no one will be appointed to that position, except temporarily, who does not possess some knowledge of the art, either "freehand" or instrumental.

It is a question how far a good working knowledge of drawing can be attained without a teacher; it is true that but few have become proficient without such aid, but it is equally true that "self-help" has been the key note to all advancement.

The author received personal instruction in several ways and times, at home, in school, in an architect's office, and under an experienced mechanical engineer, but it was in the early morning hours of a bright summer time—lang syne—that he made his first serious attempt to master the art of mechanical drawing. It was a struggle and a battle to hold himself down to "the board" to the finish, but it was a victory—one, won over slothfulness and impatience, and of such a nature as to warrant the use of the term "self-help" to the encouragement of others.

In conclusion two sentiments may be added; if a good working knowledge of drawing is "worth the while," then, I, the student should be thoroughly in earnest in acquiring it; 2, he should be willing to take sufficient time and give much hard study to gain the skill necessary for success.

This persistence is not irksome. It carries its own reward, and the results are definite and sure.

"One step and then another, and the longest walk is ended;
One stitch and then another, and the largest rent is mended.
One brick upon another, and the highest wall is made;
One flake upon another, and the deepest snow is laid."





Introduction.

Drawing is one of the arts; art relates to something to be done, and art in the industrial and mechanical sense aims chiefly at utility, and is governed by exact rules; hence mechanical drawing—so-called—tends first to be useful and helpful, and second to accuracy in execution, including most minute details; it aspires to the perfection of nature in adaptability of the means to the end.

Drawing constitutes a universal language, to acquire which is a matter of importance, for by its use one is able to illustrate the form and dimensions of an object, device, or utility, in very much less time, and far more clearly, than by a verbal description.

To a person who may not be able perfectly to understand the language of a country, to be able to draw is an aid and a safeguard; to use the words of Sir Joshua Reynolds, "the pencil speaks the language of every land."

In extensive iron works and metal-working establishments the designer and draughtsman is always in demand. His services are indispensable and his position is a highly responsible one. It becomes his special

province to design improvements, to furnish sketches and to make finished drawings; to calculate strains, strength, power, motion, weight, friction and durability. All this and much more is the professional draughtsman's work.

In "directory" classification, he who accomplishes such comprehensive results as above described is termed a "Draughtsman," but the word has as wide a meaning as "Engineer," which takes in civil, mechanical, naval, sanitary, steam and other engineering specialists. So, in drafting, it includes the office boy employed in making blue prints, it embraces the copyists, tracers and assistants, as well as the head draughtsman and chief engineer.

Consequently the range is wide, and the line hard to draw between draughtsmen who work with their hands, and those who work with their brains. It may be added that the best men are too frequently undervalued, owing to the unavoidable difficulty in distinguishing the difference in true worth, between the two widely separated classes.

It may be remarked that they only draw well who draw intelligently; aptness in this, as in many other virtues, is a matter of slow growth, "here a line and there a line"—it's the proper direction, not the rate of progress, that counts in the end.

There are several methods of drawing—1, Free-hand; 2, Instrumental; 3, Geometrical; 4. Perspective. In the first the work, also termed sketching, is executed by pencil, pen, crayon, or even paint-brush; in the second the result is attained by the use of rule, tee-square, drawing pen, etc.; this method is also denominated mechanical drawing, and suggests the title of this volume.

The great usefulness, not to say necessity, of readiness in executing accurately, drawings "to scale," is



emphasized by the fact that now, more than ever, is all machinery designed, and it may almost be said, is "built," in the draughting room—this is a valuable hint relating to "reading" drawings.

It is wise, as well as easy, to begin at the beginning of things; thus, it is altogether the good part to mount a ladder by the first and second rounds rather than to attempt it by taking the third, sixth, ninth, etc.—especially are first and second rounds the very best to start upon; "Chalk-work," is the first subject introduced, next, that of "Free-hand." These are the first steps leading upward in this most agreeable attainment—skill in illustrating and designing of objects, tools, and utilities.

A single word of advice before introducing the elementary work connected with mechanical drawing: if the student should experience difficulty in mastering the diagrams and curves abounding in this book, let him consult an experienced draughtsman or teacher, who, by a few strokes of a lead pencil, can easily make them plain; that knowledge—which cannot be printed or self-taught—termed the Craftsman's Art, is communicated largely by personal telling and showing, from man to man; in drawing, this help should be thankfully availed of, when necessity arises.

Note—Sketching is often in demand because there is no time for finished or careful drawings, and the one who can draw a few lines in a moment to let a sudden necessity be known, is the man of the hour. All candidates for First Class Engineer's Certificates in marine service in the navy have to undergo an examination in rough drawing; this is intended not so much as a proof of the applicant possessing the capability of a draughtsman, but in the event of any injury to the engines in his charge, so that he may be able to send to his Superintendent a rough drawing of the particular part, properly dimensioned, so that it could be worked from, and time saved on the arrival of the ship at the port where the repairs are to be done.







Digitized by Google

"No matter how thorough our education may have been at the first, rules and formulas will slip from the memory, and every day's experience gives additional evidence of the truth of the old adage that 'THE KEY THAT RESTS, RUSTS.'"—SIMPSON BALLARD.

The Plan of the Work.

The purpose or scope of this work may be briefly stated: It is to aid the aspiring student in making the first advance towards a thorough and useful knowledge of drawing in its several divisions, as elsewhere defined.

The method to be followed in presenting the subject will be the natural order clearly and simply defined, as "from the less to the greater."

The first subject to be discussed comes under the heading of chalk-work, i. e., such drawings as can be executed on a blackboard, a floor, or even on more primitive surfaces, such as a smooth stone or board.

This is indeed a lowly beginning, but the author is quite confident it will awaken as much interest as any part of the book—even in the most experienced in the art of drawing, as to them it will revive the ambitions and first crude attempts made in the golden days of their youth.

Let it be clearly understood by all, and especially by those who wish to learn drawing, that the study of this delightful art does not require any special qualification. We need only ask one question: Have you learned to write? If so, be assured you may learn to draw, but to all the same rule applies, first the elements of the art, and afterwards the more advanced study.

It is not expected that all should exhibit a decided taste for drawing, for the possession of this is rather a gift of nature than the result of education; but a knowledge of principles and a certain amount of executive ability



may be obtained by every one of average capacity, and whatever the natural power may be, it will be increased and developed by exercise; if the progress is steady and continuous and in the right direction, success is sure to crown the work.

The second division of the book will be free-hand drawing, i. e., that which is executed without instruments. Nothing to instruct has been spared in this important step in the path of advancement.

The illustrations accompanying the two opening sections have been made designedly elementary, for there are many who have a taste for drawing and who have a desire to learn, who from place of residence or other circumstances have not the opportunity of receiving the assistance of a master. To such this book presents itself as a friend directing to the right road, talking, reasoning, and explaining by the way.

The "chalk-work" and "free-hand" sections of the book relate to the foundations upon which all must rest who seek the aid to be derived from the art; hence, the following pages are written with a view to encourage all, and those who are prepared to follow the directions given in them may look forward to the possession of sufficient drawing power to add to their usefulness in after life.

At this point of attainment there arises a need to know the meaning of many words and phrases used by draughtsmen; these are grouped alphabetically from A to Z under the heading of,——

Useful Terms and Definitions: Memorizing these few pages will be of benefit, as an intimate knowledge of the language of the drawing office stamps a man as worthy of a hearing, and assures attention to anything which he may write or say pertaining to the art.



After the Definitions the subject explained will be the Instruments and Materials used in mechanical drawings; following in due course appear Geometrical and Mechanical Drawing Gearing, Linear Perspective, Projection, Shading, Tracing, Lettering, Drawing Office Rules, Reading Drawings, Useful Tables and a General Index, to which the student is referred. A careful reading is requested to the following helpful note.

Grateful acknowledgment is made to George Perrott, Esq., M. E., for practical and technical assistance throughout the work, and to Theo. Lucas, Engineer, for text and illustrations in the portions of the book relating to Linear Perspective and Projection.

NOTE.—In MACHINERY Prof. Chas. H. Benjamin says, referring to drawing, under heading "How and what to study," ". . . I have so far said nothing about drawing, for I do not think it of much use to learn that, until you know what you want of it. All this time that you have been studying mechanism you should have had a sketch book or pad of note paper, and made free hand sketches of mechanical movements which interested you and of various machine details. You should accustom yourself to use drawing as a means of expressing ideas, just as you use written words, so that it becomes a second nature to you to sketch anything you wish to remember or describe. If you work from blue-prints in the shop, or if you can borrow some to study, this will help you to understand how a drawing is made. You can get some drawing instruments at any time and begin to practice on drawing straight lines and circles, so as to become familiar with the instruments. And here it will be of great benefit to you if you can attend an evening drawing school for one night in the week at least.

"When you have become sufficiently familiar with the principles of drawing, a book on mechanism will tell you how to draw gear teeth and cams, and how to design various link motions. Make up your own problems from what you see in the shop and make your drawing a means to an end and not the principal thing; it is of little use to be able to make a nice drawing unless you know what to draw and why.

"Drawing is a convenient tool as an aid in expressing to others the ideas which you wish to convey; in all cases take the problems and the ideas from your every-day work and that which is around you; your success will depend upon the close connection which you keep at all times between your acquired knowledge and your practical work."




General List of Contents.

Introduction, .						1-24	SECTION LINING AND COLORS, .	182-185
CHALK WORK,						25-38	REPRODUCING DRAWINGS,	186-188
PRELIMINARY TERMS AND	Di	EFIN	ITIC	NS,		39-52	Drawing Office Rules,	189-195
FREEHAND DRAWING, .						53-78	Gearing,	197-208
GEOMETRICAL DRAWING,						79-100	DESIGNING GEARS,	209-216
DRAWING MATERIALS AND	11	NSTR	UM	ENTS	s,	101-134	WORKING DRAWINGS	219-227
MECHANICAL DRAWING,						135-188	READING WORKING DRAWINGS, .	228-230
Penciling,						139-147	PATENT OFFICE RULES FOR DRAWINGS, .	231-236
Projection,						148-164	USEFUL HINTS AND "POINTS," .	237-244
INKING IN DRAWINGS,					•	167-1 <i>7</i> 0	LINEAR PERSPECTIVE,	245-265
LETTERING DRAWINGS, .		. •				171-175	Personal, by the Editor,	281
DIMENSIONING DRAWINGS						176-179	USEFUL TABLES,	269-280
SHADING DRAWINGS, .		•				180-181	REFERENCE INDEX,	



Digitized by Google

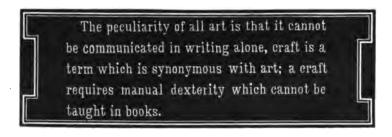

Ghalk Work.

The blackboard has been well called the great weapon of the modern educator; this is especially true in reference to instruction in an art dealing with lines, curves and figures.

Many a man can chalk out on a blackboard, or on a piece of sheet-iron, or on the floor, just what he wants to show, and make his meaning very plain; hence, in every workshop, and many other places, a blackboard



Fig. 6.

is more than useful, and it has been said that no draughting office is complete without one.

Fig. 6 represents a chalk-crayon.



Fig. 7.



Fig. 8.

Figs. 7 and 8 need no explanation, as they represent two forms of the well-known blackboard.


Chalk lines have this advantage—they are easily altered or rubbed out when not needed any longer. The work executed upon a blackboard is mostly done by hand, without aid from instruments; a few tools, however, are useful—such as, I, large wooden blackboard compasses holding a crayon, which are made and sold by the trade in size twelve inches to thirty inches in length; 2, a straight-edge; and 3, some crayons. With the compasses circles and part of the circle can be made, and with the straight-edge the larger lines can be drawn.

These instruments are shown on page 29, and are, 1, compasses, for holding chalk for making circles; 2, a tee-square; 3, a straight-edge; 4, a protractor for measuring angles; 5, a triangle 60° and 30°; 6, a brass holder for crayons.

Blackboard Drawing.—The use of a blackboard comes principally and properly under the head of



Hawkins' Mechanical Drawing.

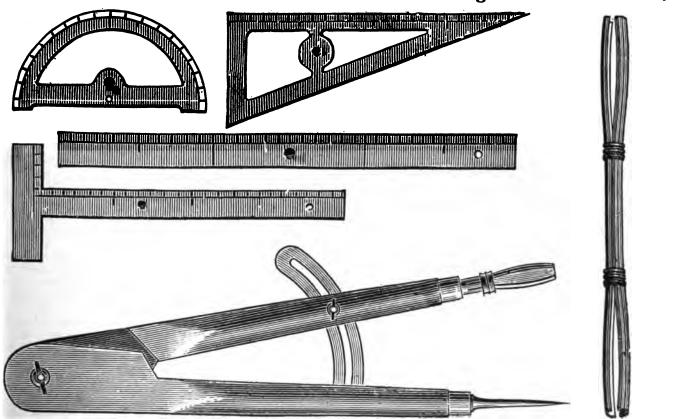

Digitized by Google

free-hand drawing, but its importance is such that a separate division of the volume is assigned to it.

Thus, chalk-work may be considered the first lesson in "free-hand," as all the examples can also be most profitably practiced with pencil and paper.

Very rapid drawing upon the board should not be encouraged, as it is likely not to be accurate enough; again, the board should be entirely free from grease. Cloths, sponges or chamois skin rubbers may be used to erase or change the chalk marks. Vertical lines should be drawn from above downward; short lines should be drawn with the fingers alone, those somewhat longer with the hand, using the wrist-joint; the still longer lines with the forearm, using the elbow-joint; those longer yet with the whole arm, using the shoulder-joint; lines should always be drawn with a uniform motion, slow enough for the eye to follow.

Practice in chalk-work should alternate with sketching in a sketchbook and with geometrical drawing—to be hereafter described. The student should

practice a short time on the board, at least once a week; large sizes are the most profitable for the representations to be made; when drawing in different directions the hand should be turned, not the paper or board; the hand should never be allowed to obstruct the sight, hence the hand and fingers should be held in a position of freedom—with fingers not nearer than 1½ or 2 inches from the board.

PREPARATORY PRACTICE IN DRAWING.

Every visible object is bounded by lines which enable the observer to determine its shape. If these

NOTE.—The first lesson of any kind the author received in drawing was to make a straight line; this was effected by holding the pencil nearly erect and guiding it along by the aid of the little finger held pressed against the edge of a board; this was a useful item of knowledge, as proved by passing years.

A well-known artist, in telling his early experience, said: "The first thing I was taught was to draw a line, divide it, erect a perpendicular from its center, and afterwards to divide the angle made by the perpendicular." In answer to a question asking how long he was kept at the lines, he replied, "about two months—or a month or two," indicating that even the longer time would have been well spent in learning to draw a straight line.




lines are straight or curved, the shape of the object is regular; if broken, the shape of the object is irregular.

The elements, then, of form are lines, straight, curved, or broken, and these, therefore, furnish the beginning of all instruction in free-hand or mechanical drawing.

PERPENDICULAR LINES.

Fig. 15 shows six lines—upright and perpendicular, with points or "dots" indicated at the top and bottom of each line; to draw these, proceed thus:

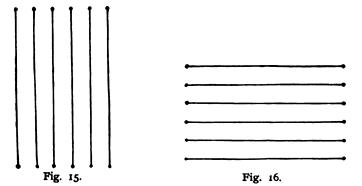

The learner should stand with his right shoulder opposite the board, and the weight of the hand and the arm should be allowed to fall naturally; now, make on the board two points, one being six inches above the other, these being merely "dots," shown at the ends of the lines, figs. 15, etc., and made with two motions; the line between the points should now be drawn not too quickly from the upper to the lower point; three movements of the hand and arm complete the line; to draw the other five lines the movements have simply to be repeated.

If the student pronounces to himself "one," "two," "three," at each motion, it will be helpful; in this exercise, fig. 15, the aim is to make six lines, each line being parallel to the first. Again, in the example, it is intended that the lower point should be made first, next the upper, and lastly the line drawn from the upper to the lower point, but the order may be reversed; at one the upper point, at two the lower, at three the stroke upwards to complete the line.

HORIZONTAL LINES.

To make these as shown in fig. 16, proceed as follows: With the word one make a point, with two another point six inches at the left, with three draw a straight line from the left point to the right. All added lines should be parallel: for practice, reverse the process thus, one, make a "point," at two another point at the right, at three draw line to the left.


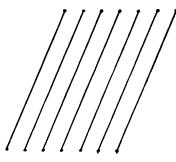


Fig. 17.

The student will note that the two motions--at the words one and two—are to fix the positions of the

ends of the lines; this practice will be found useful in the most advanced examples and an item of elementary practice never to be forgotten—like the help to be derived by the first round of a ladder.

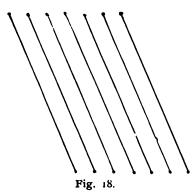


OBLIQUE LINES.

In drawing oblique straight lines as shown in fig. 17, at the word one let the student make the lower point; at the word two the upper, a little to the



right of the lower; at the word three draw a line quickly from the upper to the lower point. In pronouncing the words one, two, three, let the student make the additional parallel lines.

As shown in fig. 18, at the word one make the lower point; at the word two the upper point, a little to the left; at the word three draw a line rapidly from the upper to the lower point, and "timing" the process by repeating one, two, three, make the additional parallel lines.

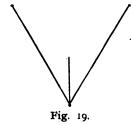

BROKEN LINES.

A broken line is composed of two or more straight lines at angles to each other (see fig. 19). To draw them begin (saying) one, make a point; two a point

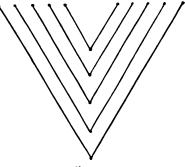


Fig. 20.

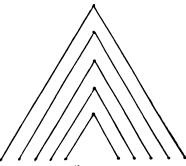


Fig. 21.

Hawkins' Mechanical Drawing.

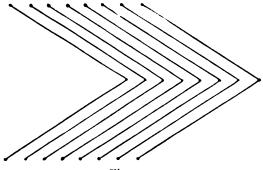


Fig. 22.

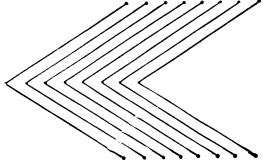
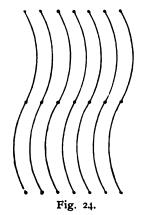


Fig. 23.



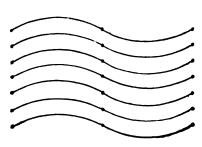


Fig. 25.

below at the left; three, a point above at the left; four, draw a line from the left hand point to the lower point; at the word five, from the lower point to the upper right hand point. For practice draw numerous lines in the same way, keeping them parallel to each other, as shown in fig. 20.


In example, fig. 21, the arrangement of the points is changed—let the student draw at the words, as follows: One, a point; two, a point above at the left; three, a point below at the left; four, draw from the point at the left to the upper point; five, from the upper point to the lower right hand point; continue to add parallel lines to complete the figure as shown.

Figs. 22 and 23 are given as examples to practice, making first the points and then the connecting lines and afterward the parallel lines to complete the figures.


CURVED LINES.

To draw curved lines, as shown in fig. 24. At the word one, point; at the word two, point three inches

directly above; three, at the same distance above again make a point; now draw a curve as shown, joining the middle point and the upper point; now draw the curve as shown below it; finally complete figure as shown.

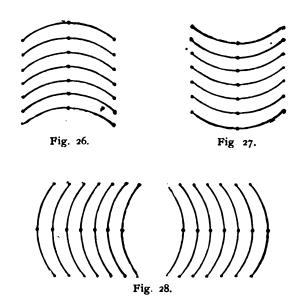



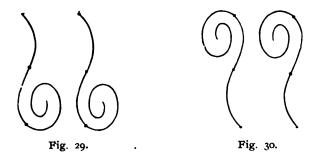

Figs. 25 to 30 are to be practiced, making first the points and then connecting them by the curves to complete the figures.

When two or more students are working together, with each having a blackboard, the counting may be in concert—or a teacher could count for a class. In these line examples care should be used in making them of uniform length. There is a difference to be noted between a crooked line and a broken line, the latter being a straight line and the former deviating from it.

Square chalk crayons are the best for hand work, as lines of an even or uniform width can be drawn with them.

A very fine effect is produced by using two thicknesses of chalk, one being double the thickness of the other: the heavy lines being used on the shade side of objects will produce a good effect, giving thickness and body to the object.

Round chalk crayons are used in the compasses to draw circles, but hand lines drawn with them are not so neat as those produced with the square-shaped chalk.

To obliterate or remove the construction, or false lines made on the blackboard, a wooden handle two inches in diameter with a cone end 3 or 4 inches long, covered with chamois skin or soft cloth tightly wrapped round the cone and fastened with a tack or drawing pin, makes the best implement to erase lines not required, the point of the cone will remove these without destroying the lines or curves which meet them.



Sponges, chamois skin or cloth rubbers are used to rub out the chalk drawings and clean the blackboard.

The best height for a diagram on the blackboard is not higher than the head, nor lower than the elbow.

Horizontal lines should be made from the left to the right; the body and arm being moved with the hand, and kept in the same relative position with it, will steady the hand. Curved lines to the left should be drawn first, enabling the eye to take in not only the curve in process of formation but that already made.

Passing the crayon in the hand, over the intended curve previous to marking it, will guide the eye and give confidence to the hand in chalking the curve.


A proper distance from the blackboard is essential, the face being about two feet away from it.

Draw with the whole arm extended from the shoulder-joint, not from the elbow or wrist.



Fig. 31.

"There are more ways than one of telling things; by speech, by writing, by printing, also by pictures and drawings." Knowles.

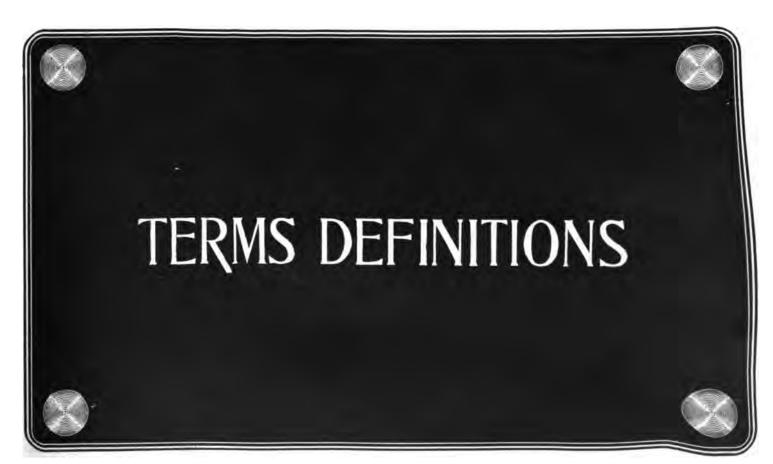

Digitized by Google



Digitized by Google

Preliminary Terms and Definitions.

Like all the arts, drawing has a nomenclature of its own, and nothing can be more helpful to the beginner than to know the name of things relating to the art of drawing. This is a language almost peculiar to itself, and used daily and hourly by many thousands of superintendents, foremen and master mechanics, as well as by owners, designers and draughtsmen, hence its introduction at this early stage.

ALTITUDE.—This is the elevation of an object above its base, or the perpendicular distance between the top and bottom of a figure.

ANGLE is the difference in the direction of two lines which meet or tend to meet. The lines are called the sides and the point of meeting, the vertex of the lines.

ANGLE.

To make an angle apparent, the two lines must meet in a point, as AB and AC, which meet in the point A, as shown in fig. 33.



Fig. 33.

Angles are measured by degrees.

A Degree is one of the three hundred and sixty equal parts of the space about a point in a plane.

Angles are distinguished in respect to magnitude by the terms Right, Acute and Obtuse Angles.

ANGLE.

A Right Angle is that formed by one line meeting another, so as to make equal angles with that other.



Fig. 34.

The lines forming a right angle are perpendicular to each other.

An Acute Angle is less than a right angle. See fig. 35.



An Obtuse Angle is greater than a right angle. See fig. 36.

Fig. 35.

Obtuse and acute angles are also called oblique

angles; and lines which are neither parallel nor perpendicular to each other are called *oblique lines*.



Fig. 36.

The *Vertex* or *Apex* of an angle is the point in which the including lines meet.

ANGLE.

An angle is commonly designated by a letter at its vertex; but when two or more angles have their vertices at the same point, they cannot be thus distinguished.

For example, when the three lines A B, A C, and A D in fig. 37 meet in the common point A, we designate either of the angles formed, by three letters, placing that at the vertex

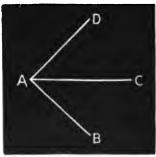


Fig. 37.

between those at the opposite extremities of the including lines. Thus, we say, the angle BAC, etc.

APEX.—The summit or highest point of an object.

ARC.—See circle.

AXIS OF A SOLID.—An imaginary straight line passing through its center.



AXIS OF A FIGURE.—A straight line passing through the center of a figure, and dividing it into two equal parts.

BASE.—The base of a solid figure is that on which it stands—the lowest part.

BISECT.—To divide into two equal parts.

BISECTOR.—A line which bisects.

figure bounded by one uniformly curved line, all of the points in which are at the same distance from a certain point within, called the Center.

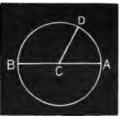


Fig. 38.

The *Circumference* of a circle is the curved line that bounds it.

The *Diameter* of a circle is a line passing through its center and terminating at both ends in the circumference, as $A \subset B$.

CIRCLE.

The *Radius* of a circle is a line extending from its center to any point in the circumference. It is one half of the diameter. All the diameters of a circle are equal, as are also all the radii CD, CB and CA.

An Arc of a circle is any portion of the circumference, as B D and A D.

Semi-Circle.—Half a circle formed by bisecting it with a diameter, as A C B. Fig. 38.

An angle having its vertex at the center of a circle is measured by the arc intercepted by its sides. Thus, the arc AD measures the angle ACD, and in general, to compare different angles, we have but to compare the arcs, included by their sides, of the equal circles having their centers at the vertices of the angles.

CIRCUMSCRIBE.—To draw a line of figures about or outside, such as a circle drawn around a square touching its corners or angles.

CIRCUMSCRIBE.

Inscribe.—To draw a line or figure inside or on the interior, such as a circle drawn within a square touching its sides.

CONCAVE.—Curving inwardly.

CONE.—A solid body or figure having a circ! for its base, and its top terminated in a point or vertex.

CONSTRUCTION.—The making of any object.

CONTOUR.—The outline of the general appearance of an object.

CONVERGENCE.—Lines extending towards a common point.

CONVEX.—Rising or swelling into a round form—the opposite to concave.

CORNER.—The point of meeting of the edges of a solid, or the two sides of a plane figure.

cross-hatches.—In free-hand drawing the use of lines crossing each other to produce light and shade effects.

CURVE.—A line of which no part is straight.

Reversed Curve.—One whose curvature is first in one direction and then in the opposite direction.

Spiral Curve.—A plain curve which winds about and recedes, according to some law, from its point of beginning, which is called its center.

CYLINDER.—A solid bounded by a curved surface and by two opposite faces called bases; the bases may be any curved figures and give the name to the cylinder; thus a circular cylinder is one whose bases are circles.

CYLINDRICAL.—Having the general form of a cylinder.

DEGREE.—The 360th part of a circle.

DESCRIBE.—To make or draw a curved line; to draw a plan.

DESIGN.—Any arrangement or combination to produce desired results in industry or art. To delineate a form or figure by drawing the outline—a sketch.



DEVELOP.—To unroll or lay out.

DIAGONAL.—A right line drawn from angle to angle of a quadrilateral or many angled figure and dividing it into two parts.

DIAMETER.—A right line passing through the center of a circle or other round figure terminated by the curve and dividing the figure symmetrically into two equal parts.

EDGE.—The intersection of any two surfaces.

ELEVATION.—The term elevation, vertical projection and *front view*—applied to drawings—all have the same meaning.

FACE.—One of the plane surfaces of a solid; it may be bounded by straight or curved edges.

FINISHING.—Completing a drawing whose lines have been determined by erasing unnecessary lines and strengthening and accentuating where this is needed.

FORESHORTENING.—Apparent decrease in length, owing to objects being viewed obliquely; thus a wheel, when seen obliquely, instead of appearing round, presents the appearance of an ellipse.

FREE-HAND.—Executed by the hand unaided by instruments.

GENERATED.—Produced by.

GEOMETRIC.—According to geometry.

HALF-TINT.—The shading produced by means of parallel equidistant lines.

HEMISPHERE.—Half a sphere obtained by bisecting a sphere by a plane.

HORIZONTAL.—Parallel to the surface of smooth water. In drawing, a line drawn parallel to the top and bottom of the sheet is called horizontal.

INSCRIBE.—See circumscribe—its opposite.

INSTRUMENTAL.—By the use of instruments.

LINE.—A line has length, only, as A C; a right line is a straight line, the shortest line that can be drawn between two points, A——C.

Straight. One which has the same direction throughout its entire length.

Curved. One no part of which is straight.

Broken. One composed of different successive straight lines.

Mixed. One of straight and curved lines.

Center. A line used to indicate the center of an object.

Construction. A working line used to obtain required lines.

Dotted. A line composed of short dashes. -----

Dash. A line composed of long dashes. — —

Dot and Dash. A line composed of dots and dashes alternating.

Dimension. A line upon which a dimension is placed.

LINE.—Full. An unbroken line, usually representing a visible edge.

Shadow. A line about twice as wide as the ordinary full line.

A straight line is often called simply a line, and a curved line a curve.

LONGITUDINAL.—In the direction of the length of an object.

MODEL.—A form used for study.

OBLIQUE.—Neither horizontal nor vertical.

OBLONG.—A rectangle with unequal sides.

OVAL.—A plane figure resembling the longitudinal section of an egg; or elliptical in shape.

OVERALL.—The entire length.

PARALLEL.—Having the same direction and everywhere equally distant.

PATTERN.—That which is used as a guide or copy in making things.

Flat. One made of paper or other thin material.



PATTERN.—Solid. One which reproduces the form and size of the object to be made.

PERIMETER.—The boundary of a closed plane figure.

PERPENDICULAR.—At an angle of co°.

PERSPECTIVE.—View; drawing objects as they appear to the eye from any given distance and situation, real or imaginary.

PLAN.—Plan, horizontal projection and top view have the same meaning.

PLANE FIGURE.—A part of a plane surface bounded by straight or curved lines, or by both combined.

POLYGON.—A plane figure bounded by straight lines

called the sides of the poly-The least number of sides that can bound a polygon is three. Polygons bounded by a greater number of sides than four are denominated only by the number of sides.



Fig. 39.

POLYGON.—A polygon of five sides is called a Pentagon; of six, a Hexagon; of seven, a Heptagon; of eight, an Octagon; of nine, a Nonagon, etc.

Diagonals of a polygon are lines joining the vertices of angles not adjacent.

The *Perimeter* of a polygon is its boundary considered as a whole.

The Base of a polygon is the side upon which the polygon is supposed to stand.

The Altitude of a polygon is the perpendicular distance between the base and a side or angle opposite the base.

A Quadrilateral is a polygon having four sides and four angles.

A Parallelogram is a quadrilateral which has its opposite sides parallel.



The side upon which a parallelogram stands and the opposite side are called respectively its lower and upper bases.

POLYGON.—A *Rectangle* is a parallelogram having its angles right angles.

A Square is an equilateral rectangle, fig. 41.

A *Rhomboid* is an oblique-angled parallelogram.

A Rhombus is an equilateral rhomboid, fig. 42.

A *Trapezium* is a quadrilateral having no two sides parallel, fig. 43.

A *Trapezoid* is a quadrilateral in which two opposite sides are parallel, and the other two oblique, fig. 44.



Fig. 41.



Fig. 42.



Fig. 43.



Fig. 44.

A POLYHEDRON is a solid bounded by planes. There are five regular solids which are shown in figs. 45, 46, 47, 48 and 49. A regular solid is bounded by similar and regular plane figures.

Fig. 45.—The *tctrahedron*, bounded by four equilateral triangles.

Fig. 46.—The hexahedron, or cube, bounded by six squares.

Fig. 47.—The octahedron, bounded by eight equilateral triangles.

Fig. 48.—The *dodccahcdron*, bounded by twelve pentagons.

Fig. 49.—The *icosahedron*, bounded by twenty equilateral triangles.





PRISM.—A solid whose bases or ends are very similar plane figures, and whose sides are parallelograms; prisms are called triangular, square, etc., according as the bases are triangles, squares, etc.

PRODUCE.—To continue or extend.

PROFILE.—An outline or contour.

PROJECTION.—The view of an object obtained upon a plane by projecting lines perpendicular to the plane.

QUADRANT.—The fourth part; a quarter; the quarter of a circle.

QUADRISECT.—To divide into four equal parts.

SECTION.—A projection upon a plane parallel to a cutting plane which intersects any object. The section generally represents the part behind the cutting plane, and represents the cut surfaces by diagonal lines.

SECTIONAL.—Showing the section made by a plane.

SHADOW.—Shade and shadow have about the same meaning.

SOLID.—A solid has three dimensions—length, breadth and thickness.

SPHERE.—A solid bounded by a curved surface every point of which is equally distant from a point within called the center.

SURFACE.—The boundary of a solid. It has but two dimensions—length and breadth. Surfaces are plane or curved.

A *Plane Surface* is one upon which a straight line can be drawn in any direction.

A Curved Surface is one no part of which is plane.

The surface of the sphere is curved in every direction, while the curved surfaces of the cylinder and cone are straight in one direction.

The surface of a solid is no part of the solid, but is simply the boundary of the solid. It has two dimensions only, and any number of surfaces put together will give no thickness.





SYMMETRY.—Design. A proper adjustment or adaptation of parts to one another and to the whole.

TRISECT.—To divide into three equal parts.

TRIANGLE.—A triangle is a polygon having three sides and three angles. Tri is a Latin prefix signifying three; hence a Triangle is literally a figure containing three angles.

A Scalene Triangle is one in which no two sides are equal. See. fig. 50.



Fig. 50.

An *Isosceles Triangle* is one in which two of the sides are equal. See fig. 51.



Fig. 51.

TRIANGLE.

An Equilateral Triangle is one in which the three sides are equal. An Equiangular Triangle is one having its three angles equal. An Acute-Angled Triangle is one in which each angle is acute.



Fig. 52.

A Right-Angled Triangle is one which has one of the angles a right angle. See fig. 53.



Fig. 53.

An Obtuse-Angled Triangle is one having an obtuse angle. Fig. 54.

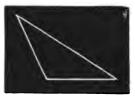


Fig. 54.

Equiangular triangles are also equal sided, and vice versa.



- **VERTICAL.**—Upright or perpendicular. Vertical and perpendicular are not synonymous terms.
- VERTEX.—See Angle, Quadrilateral, Triangle. The vertex of a solid is the point in which its axis intersects the lateral surface.
- VIEW.—See Elevation. Views are called front, top, right or left side, back, or bottom, according as


they are made on the different planes of projection. They are also sometimes named according to the part of the object shown, as edge view, end view, or face view.

WORKING DRAWING.—One which gives all the information necessary to enable the workman to construct the object.





Digitized by Google

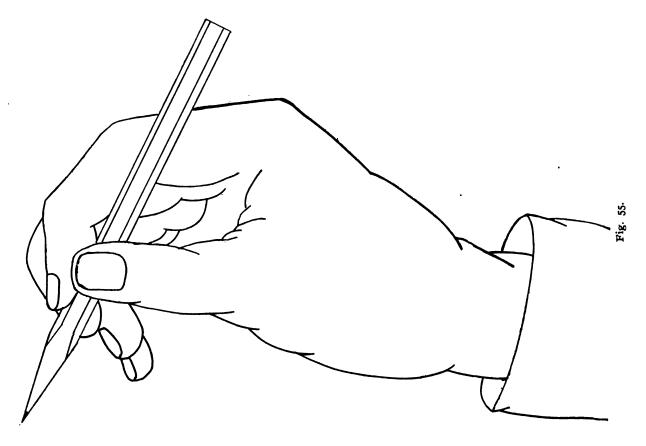

Free-Hand Drawing.

A free-hand drawing is executed with the unaided hand and eye, without guiding instruments or other artificial help. It is necessary to be known that all drawing required cannot possibly be done by rule and compass, but that some portions must be drawn "free-hand," trusting to the eye alone.

Hence, it is important that the student should be able to sketch at sight from objects he may see, or to draw roughly, with a piece of chalk or a pencil, pieces of mechanism required to be represented.

Practice in free-hand should go along with mechan ical drawing as progress is made, and thus cultivating both branches equally. "A simple sketch will often," as has been rather roughly said, "express more than yards of talk."

Even a slight sketch refreshes the memory, and in the case of the preparation of a complete set of drawings, with a view to the making of a thoroughly finished mechanical drawing, the proper course to pursue is, to make a general sketch, letter the various parts for reference, and then prepare a series of detailed sketches, similarly lettered, and diffuse with dimensions.

Everyone, whatever his specialty, feels to-day that the ability to sketch rapidly and clearly is among the absolute necessities for correct and prompt transactions of business, in giving and executing orders and doing business with persons outside his profession.



Mistakes and misunderstandings may be averted by means of rough sketches taken at the time and shown for confirmation; this also saves assistants from getting into trouble, especially if they pin the sketch to the order, for reference, in case of the arising of any dispute. These are a few of the advantages of knowing how to sketch quickly and correctly.

In "free-hand" any sort of pencil is better than none, but there is a considerable advantage in having a good serviceable article—a pencil not too soft nor too hard, and one which will retain its point for some little time.

Fig. 55 shows the approved position in which the pencil should be held while sketching. The pencil should be held firmly between the thumb and first finger of the right hand; press the second finger against the pencil at the opposite side to the thumb pressure, so that the pencil is firmly held by the contact of the thumb and two fingers—the third and fourth fingers just coming into easy reach of the paper surface—the

wrist or ball of the hand resting lightly on the surface of the work—the arm resting on the desk or drawingboard for steadiness.

The motion of the pencil is produced from the movement of the fingers and thumb, principally in the vertical strokes, and the horizontal strokes are produced by fingers and thumb, combined with a wrist or elbow motion; the oblique lines and curves are produced with a free movement, with nothing cramped or confined about the finger joints.

POSITION.

It should be observed that nothing is more prejudicial to good execution than the habit of leaning over the paper, which ought to be placed on a surface sufficiently inclined to bring every portion equally under the eye, thus obviating the necessity of leaning forward. All support to the figure should be obtained by resting on the left arm, the right being left free for work. By attention to these rules that awkwardness of position,



so detrimental to a good figure, will be avoided. It is better to have the light on the left hand, as in this direction the shadow of the pencil does not interfere with the view of the drawing.

Fig. 56.

HOW TO CUT A PENCIL.

Hold the pencil firmly in the left hand, as in the drawing, allowing about an inch to project beyond the fingers, and turn it gradually as the knife removes the wood. The knife should be held so that the blade alone projects beyond the fingers, and the part of it nearest the handle used for cutting. The pencil should be placed against the inside of the thumb of the right hand, as in

the drawing (fig. 56), and the wood removed by slight

shaving. The lead should not be cut at the same time as the wood, but rested on the thumb and pared gently afterwards; by attention to these directions the pencil will be economized.

HOW TO DRAW STRAIGHT LINES.

Before a line is drawn, the point at which it is to commence and the point where it is to end, should be known; and let it be distinctly understood that this judgment of the cye, and placing of points, should invariably precede the drawing of every line.

The first effort should, therefore, be to produce a line of points exactly parallel with the upper edge of the paper, and at equal distances from each other. Commence with point A and place the point B carefully level with it, now place a slip of paper against these points in the original, mark their distance apart, and see if the same proportion has been given in your copy; if not, make the necessary correction. Proceed with the next point, examine it, and so on to the end of


the line. When this is complete, examine each point in succession, to try if it is at the same distance from the top of the paper; when this is correct, proceed to draw the first level line. Hold the pencil as in the drawing, fig. 57, keeping the elbow near the side; join A to B by one light, steady stroke, produced by a movement of the wrist, and add stroke upon stroke until the line is of the required depth. Continue this process to the end of the line of points. Now place the point D at the right distance below the A, proceed with the points for another line as before, and continue the lines until the paper is covered. In producing the stroke the pencil should not be jerked, or any stop be made between the points, but the movement should be even throughout, and it is much better to produce each line by several soft strokes, as the repetition of delicate lines induces lightness of touch and freedom of hand; and it is also no small advantage that lines thus produced are more easily removed by the India rubber, should they require correction.

TO DRAW THE FIRST OBLIQUE LINE.


Prepare three rows of points down the side of the paper, on the left hand; examine them to see that they are at equal distances from the side and from each other; hold the pencil as in the drawing, fig. 58, move the elbow a little from the side, and join the points A and B with one light line, produced by a movement of the fingers and thumb, repeating the strokes until the line is of the requisite depth; proceed to join B to C, taking care previously to bring the hand a little down the paper, as the line from A to C is too long to be produced from one position. When the three rows of points are filled, make another set, examine them and proceed as before. By these means the paper will be covered with oblique lines, and if the points have been placed exactly, the sheet will have a neat and regular appearance.

NOTE.—The drawings of hands are introduced to show the positions for holding the pencil, and are not intended for copying.



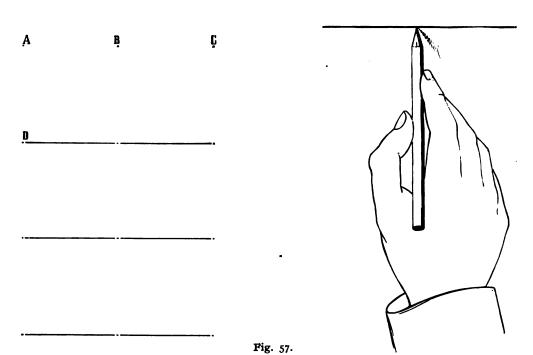

Hawkins' Mechanical Drawing.

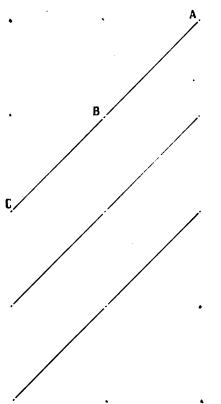

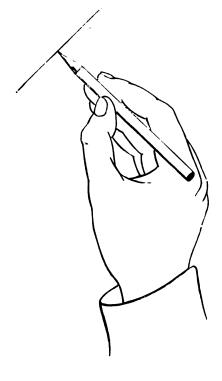


Fig. 58.

It is a common, and at the same time highly injurious habit, to draw this line by a movement of the wrist, the fingers remaining rigid. This may be detected by watching the action of the thumb; if it bends as the line is produced, all is right; but if it does not the wrist is at work.

TO DRAW THE UPRIGHT OR PERPENDICULAR LINE.

This line demands the greatest attention, and any care bestowed upon it will be amply repaid in the atter studies.

Commence by placing a line of points down the side of the paper, examine them very carefully to see that they are all the same distance from its edge, hold the pencil as in the drawing, fig. 59, move the elbow well out from the side, and join the points by a movement of the fingers and thumb. When one line is complete, place the points for the next, and examine them from the edge of the paper, not from the line just

drawn. Proceed in this manner until the paper is covered.

There is in most cases a tendency to place the points for this line in a slightly inclined direction, as in writing, though in some instances the tendency is the opposite, a thoroughly correct eye in this respect being a rare gift: and it may be useful to suggest that the paper be so placed that the line of points to be produced may be exactly in front of the eye.

TO DRAW THE SECOND OBLIQUE LINE.

Prepare three rows of points down the side of the paper, examine them for correctness of position, hold the pencil as in the drawing, fig. 60, remove the elbow as far as possible from the side, and join the points by a movement of the fingers and thumb, and continue the exercise until the paper is covered.

It will be noticed that each change in direction of the line to be drawn, has been accompanied with a





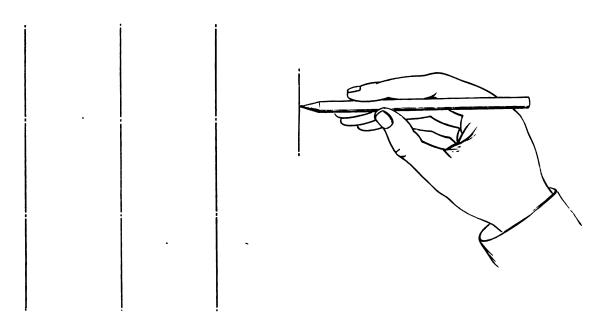


Fig 59.

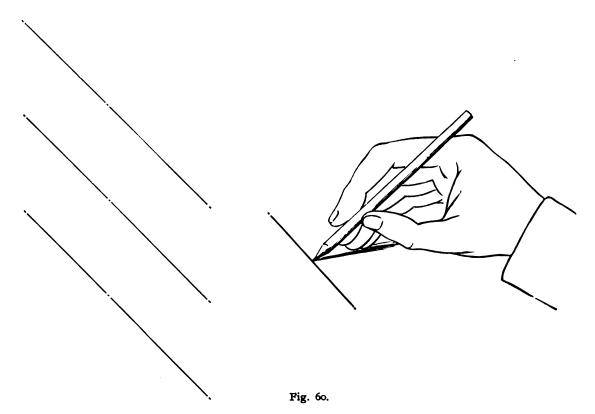


Digitized by Google

corresponding change in the position of the elbow and wrist. The following simple rule will assist the memory when placing the hand for any given line; the pencil should be held so that it may form a T with the line to be drawn:

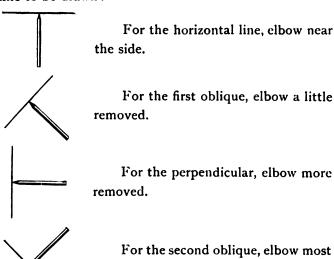

removed.

It may also be interesting to notice, with regard to the movements by which lines are produced, that they are divided into two systems; the first is that of the wrist, which includes the horizontal, and lines in nearly

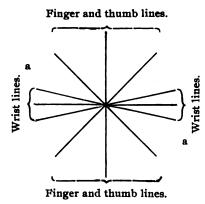

the same direction; the second is that of the second is that of the fingers and thumb, by which all other lines are formed. The following diagram exhibits the two systems and their various lines grouped, and it will be observed that

there is a space marked (a) between the two sets, which may be considered neutral ground. Lines in this direction may be produced by either movement, as may be most convenient, but it will always be found that these lines are the most trying to the hand.

ON FIGURES FORMED OF STRAIGHT LINES.

Before commencing this subject, let it be clearly understood that future success will, in a great measure, depend upon the amount of care bestowed upon it. The aim should be to obtain absolute accuracy, and for this end the copies should be tested by the most careful measurements, and corrected until they are true with the originals, but it should be distinctly understood that these measurements are only to be made after the eye and hand have done their best.

Fig. 66: Place the points A, B. Examine them to see that they are the same distance apart as in the original, and that they are level; place the point C exactly under A, and make A C equal in distance to A B;

Note.—To some it may appear that too much time and care has been bestowed on mere lines, but let it be understood that a good system of line drawing is the basis of all education—the slightest outline by a hand thus trained has a bold, free and masterly character; and with regard to shading, which is simply an aggregation of good lines, it is only by such a practiced hand its most charming effects can be produced.

now place the point D opposite C and under B; try the distances between each point to see that they are the same; divide each side by a point half way, and then draw the lines.


Fig. 67: Repeat the last figure and add the lines A and B, taking great care that the points for them are correctly placed.


Fig. 68: Commence with the square as before; then join the half-way points.

Fig. 69: After the square is drawn, place the points A and B at the right height above the half-way points, and C, D at the proper distance from the corners, then draw the figure.


Fig. 70: The greatest care should be taken with the squares for this and the following figure, as the slightest error in them will destroy the symmetry of the drawing within; when the square is completed, join the opposite corners, and place on the crossed lines the points B, C, D, E; examine these to see that they are

Hawkins' Mechanical Drawing.

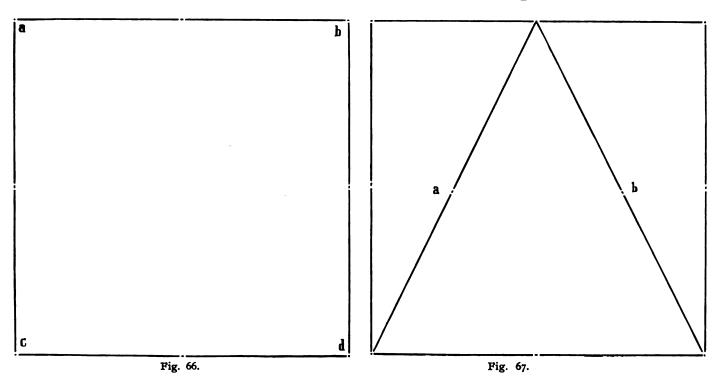

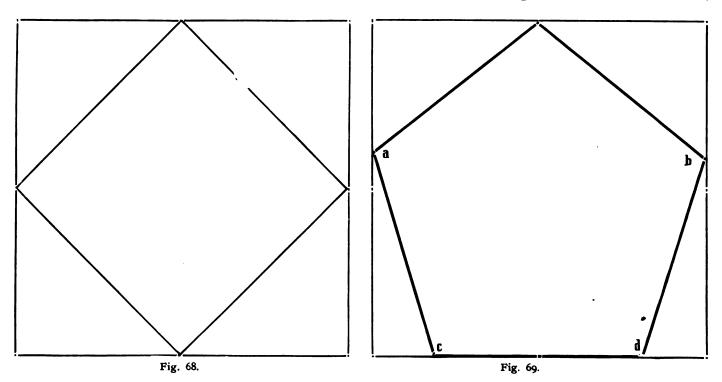

Hawkins' Mechanical Drawing.

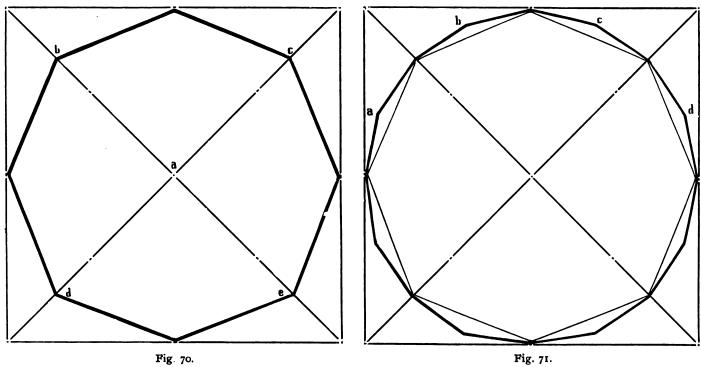

Digitized by Google

each at the same distance from the centre A, and that this distance is equal to the space from A to the sides of the square; when all are proved to be correct, complete the figure.

Fig. 71: Repeat the last drawing with, if possible, greater exactness, and outside the octagon place the points A, B, C, D, etc.; examine each of these points to see that they are all at the same distance from the centre, and then complete the figure.

ON CURVED LINES.

The right position of the hand for drawing any curved line is that required for a straight line which



would touch the extremities of the curve. The straight lines given in the exercises are valuable, not only as a guide to the

position of the hand, but as an assistance to the eye when forming the curves or examining them after they are produced.

The direction given for drawing a straight line was to form it by one steady movement from point to point, without any jerk or stop by the way. This instruction requires to be changed for the curve, which is better produced by several short strokes, thus:




or by overlapping lines, any outside bits being cleared away with India rubber.

These exercises will test the drawing power and try the patience of the pupil, but they are worthy of all the care which can be bestowed, which in future efforts will meet with its full reward.

Fig. 76: Draw first the square as directed in the previous lesson, join the points A, B, C and add the short lines at E and F, proceed with the curve A B, drawing it with faint lines at first, and adding stroke upon stroke until the required depth is obtained; the curve A C is more difficult to produce, in consequence of the formation of the hand; it should, therefore, be



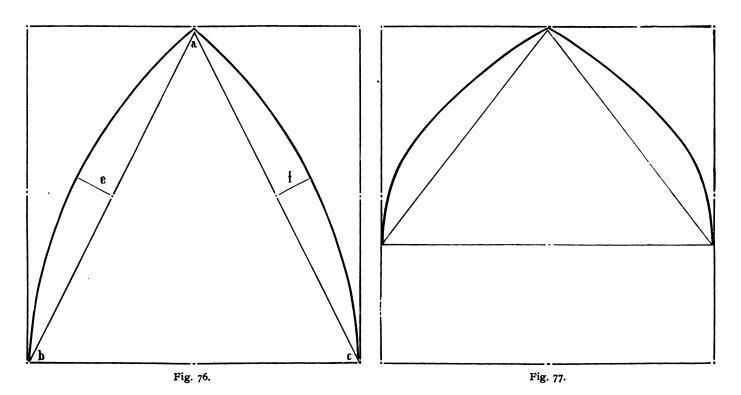

drawn in shorter pieces, joining them together afterwards by over strokes.

Fig. 77: Draw the square and straight lines first, then add the curves, taking care to give the greatest fullness at the right place.

Fig. 78: Draw the square and straight lines, proceed with the curves, taking care to make each of the same proportion.

Figs. 79 and 80: The ovals contained in these figures are simply foreshortened circles, and as such forms are of frequent occurrence in sketching from objects, in bridges, wheels, ends of timber, etc., they should be carefully studied; the greatest difficulty is to turn the narrow ends, and prevent their looking like corners. For this purpose it is better to draw the short curves first, thus: and then join the longer sides to them.


Fig. 81: If this figure can be drawn correctly, a great success has been achieved; the circle is a most

difficult form to delineate, and without system could not be accomplished. Draw the square and straight lines within it with great care, examine each point of the octagon to see that it is at the same distance from the centre, and then draw the circle.

EXAMPLES FOR PRACTICE.

Several figures 83 to 96, representing more or less familiar parts of machines, utilities, etc., are introduced for practice in free-hand, but—

It must be noted that even in free-hand the wise student will occasionally use the straight edge and compasses, so as to make his first attempts fairly creditable. Many good draughtsmen have begun by simply copying such figures and illustrations as are used throughout this volume and other similar sources; perhaps there is nothing better for practice or training than the copying and reproducing of samples of good mechanical drawings, yet it must always be remembered that advancement in free-hand must be made in

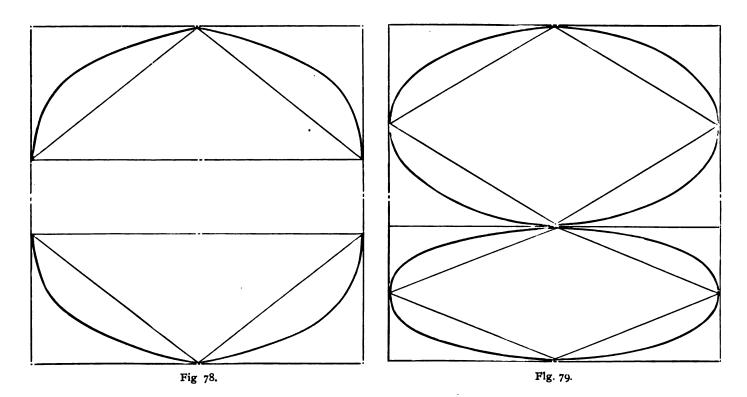



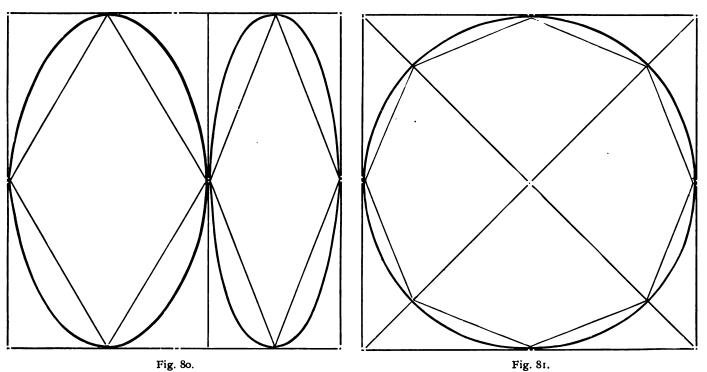


Fig. 81.

the line of less to greater efforts, and that the why and wherefore will be constantly asked by the aspiring student; that good and correct drawings are to be aimed for at all times in every line and dimension—never forgetting the law of proportion in the smallest outlines of objects to be represented.

Fig. 83 is a section, or end view of a bar of angle iron; the student will find helpful practice in attempting this figure; he may be allowed to use a straightedge in drawing the lines, but no measurements; the work should be tested on completion by a rule, or better by penciling from the original on tracing paper, and comparing the free-hand with the copy, when the defective proportions, if any, will be clearly exhibited.

Fig. 84 is a section of tee iron, and fig. 85 is a section of channel iron. These three figures on page 75 should be practiced alternately, although seeming similar in shape.

Fig. 86 is a side and end view of an angle plate shaded. Fig. 87 is a wrench shaded.


Examples of bolt ends are shown in the two next numbers; fig. 88 exhibits the common square-head bolt, and fig. 89 the hexagon or six-sided bolt-head; these are also examples of *straight-line shading*. Fig. 90 is a lathe dog, and shows an example of *curved shading*; fig. 92 is an engine crank, and an example of *straight and curved shading*; fig. 91 is a screw clamp.

Fig. 93 is a section of boiler plates riveted together; a caulking tool is also shown.


In the example, fig. 94—a hand-wheel—the principal difficulty, even for the most advanced student in free-hand, will be in drawing the circles; a coin, if convenient, can be used to scribe about, in drawing these; the other parts can afterwards be filled in around the circle. Fig. 96 is introduced for practice in penciling and shading; the figure represents a water-wheel on a stone pier.

The familiar oil can is shown in fig. 95. These all are excellent objects for practice.



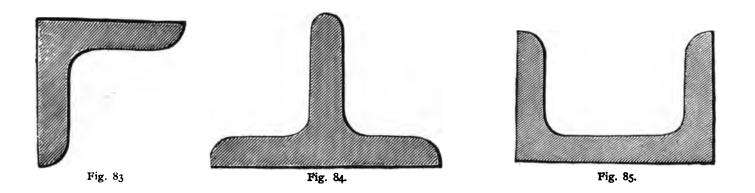




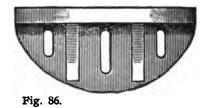



Hawkins' Mechanical Drawing.

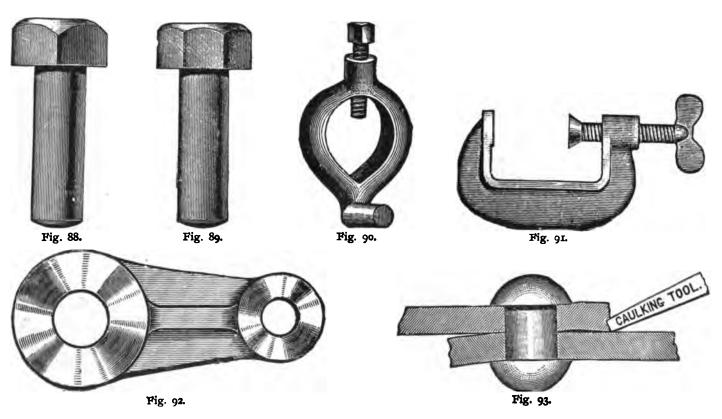

Digitized by Google

Hawkins' Mechanical Drawing.





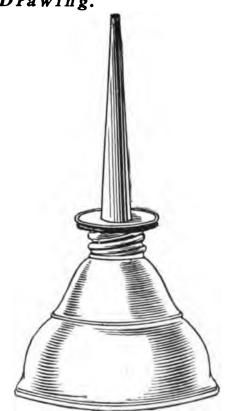


Fig. 95.



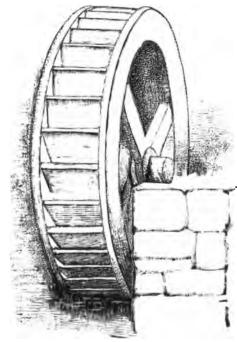


Fig. 96.

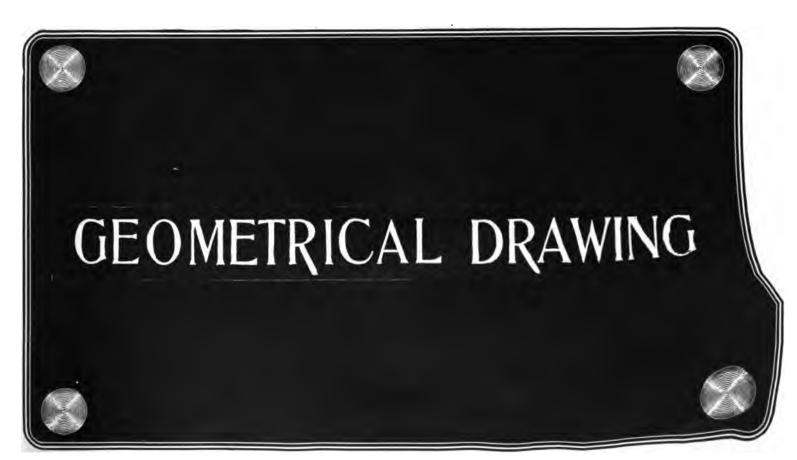

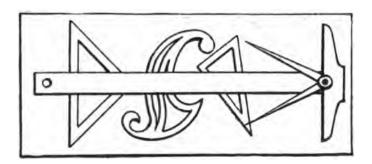

Geometrical Drawing.

Geometry is the science of measurement; it has been known for more than three thousand years; many lives have been devoted to its development, and it exists to-day as the foundation of all mathematics.

Geometrical drawing is the art of representing, to the eye, the problems "worked out" by geometricians, and the importance of a knowledge of geometrical drawing is paramount. The student will find that the figures delineated and explained in the next few pages constantly occur in mechanical drawing. Says Walter Smith, State Director of Art Education in Massachusetts, "I have never known a case where a student did not progress more satisfactorily in his studies after a course of practical geometry."

The elementary conceptions of geometry are few:

All of which elements are used in mechanical drawings.

From these, as data, a vast number of mathematical problems have been deduced; of which a few of the most elementary will be illustrated in this work; but these few will repay the attention of the student.

In "freehand" drawing the crayon and pencil are used; in geometrical drawings the dividers, as

shown in illustration, fig. 97, together with a rule, are all that is necessary to accomplish the work.

A problem is something to be done, and geometry has been defined as the science of measurement; the relation between geometry and mechanical drawing is very close, hence the term "geometrical problem."

Before proceeding with the examples, a few



Fig. 97.



Fig. 98.

elementary statements belonging to the science of geometry are presented; these will be useful to the student, not only while "doing" the problems, but in many cases of every-day—future—experience.

Geometry is one of the oldest and simplest of sciences; it may be defined as the science of measurement; geometry is the root from which all regular mathematical calculations issue. It has claimed the best thought of practical men from the times of the Greeks and Romans two thousand years ago; they derived their knowledge of the science from the Egyptians, who in turn were indebted to the Chaldeans and

Hindoos in times beyond any authentic history; hence it was under the operations of the laws explained in geometry, that the pyramids of Egypt and the temples of Greece were constructed, as well as the engines of war and appliances of peace of ancient times.

A point is mere position, and has no magnitude.

A line is that which has extension in length only. The extremities of lines are points.

A surface is that which has extension in length and breadth only.

Digitized by Google

A solid is that which has extension in length, breadth and thickness.

An angle is the difference in the direction of two lines proceeding from the same point.



Lines, Surfaces, Angles and Solids constitute the different kinds of quantity called *geometrical* magnitudes.

Parallel lines are lines which have the same direction; hence parallel lines can never meet, however far they may be produced; for two lines taking the same direction cannot approach or recede from each other.

An Axiom is a self-evident truth, not only too simple to require, but too simple to admit of demonstration.

A *Proposition* is something which is either proposed to be done, or to be demonstrated, and is either a problem or a theorem.

A Problem is something proposed to be done.

A *Theorem* is something proposed to be demonstrated.

A *Hypothesis* is a supposition made with a view to draw from it some consequence which establishes the truth or falsehood of a proposition, or solves a problem.

A Lemma is something which is premised, or demonstrated, in order to render what follows more easy.

A Corollary is a consequent truth derived immediately from some preceding truth or demonstration.

A Scholium is a remark or observation made upon something going before it.

A *Postulate* is a problem, the solution of which is self-evident.

Let it be granted—

I. That a straight line can be drawn from any one point to any other point;



- II. That a straight line can be produced to any distance, or terminated at any point;
- III. That the circumference of a circle can be described about any center, at any distance from that center.

The common algebraic signs are used in Geometry, and it is necessary that the student in geometry should understand some of the more simple operations of algebra. As the terms circle, angle, triangle, hypothesis, axiom, theorem, corollary and definition are constantly occurring in a course of geometry, they are abbreviated as shown in the following list:

Addition is exp	ressed	by							+
Subtraction	"	"							_
Multiplication	"	"	•						×
Equality and E	quival	ency	are	exp	ress	ed	by		=
Greater than, is	expre	ssed	by						>
Less than,	46		"						<
Thus B is greater than A , is written .							B	> A	
$m{B}$ is les	s than	\boldsymbol{A}	**		"			B	< A

A circle i	s expressed	bу	•	•				. 0
An angle	"	46		•				L
A right a	ngle is expr	essed	by					R. L
Degrees, minutes and seconds are expressed by								
A triangl	e is expresse	ed by	•	•				. Δ
The term	Hypothesis	is ex	press	ed by				(Hy.)
"	Axiom		44	**				(Ax.)
46	Theorem		"	"				(Th.)
46	Corollary		"	"				(Cor.)
44	Definition		46	44				(Def.)
"	Perpendicu	lar is	expre	essed b	y Y			. +
The difference of two quantities, when it is not								
known	which is the	grea	ter, i	s expi	ess	ed l	οу	
the syn	nbol .			•				~
Thus, the	difference b	etwee	en $m{A}$:	and B	is w	vritt	en .	$A \sim B$

GEOMETRICAL AXIOMS.

- 1. Things which are equal to the same thing are equal to each other.
- 2. When equals are added to equals the wholes are equal.



Hawkins' Mechanical Drawing.

- 3. When equals are taken from equals the remainders are equal.
- 4. When equals are added to unequals the wholes are unequal.
- 5. When equals are taken from unequals the remainders are unequal.
- 6. Things which are double of the same thing, or equal things, are equal to each other.
- 7. Things which are halves of the same thing, or of equal things, are equal to each other.

- 8. The whole is greater than any of its parts.
- 9. Every whole is equal to all its parts taken together.
- 10. Things which coincide, or fill the same space, are identical, or mutually equal in all their parts.
 - 11. All right angles are equal to one another.
- 12. A straight line is the shortest distance between two points.
 - 13. Two straight lines cannot enclose a space.



Problems in Geometrical Drawing.

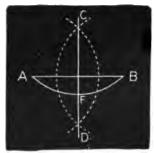


Fig. 99.

EXAMPLE 1.—To bisect (cut in two) a straight line or an arc of a circle, Fig. 99. From the ends of A B as centers, describe arcs cutting each other at C and D, and draw C D, which cuts the line at E or the arc at F.

Ex. 2.—To draw a perpendicular to a straight line, or a radial line to a circular arc, Fig. 99. Operate as in the foregoing problem. The line CD is perpendic-

ular to A B; the line C D is also radial to the arc A B.

Ex. 3.—To draw a perpendicular to a straight line, from a given point in that line, Fig. 100. With any radius from any given point A in the line B C, cut the line at B and C. Next, with a longer radius,

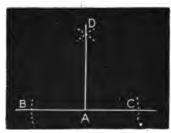


Fig. 100.

describe arcs from B and C, cutting each other at D, and draw the perpendicular D A.

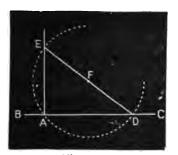


Fig. 101.

Second Method, Fig. 101. From any center F above B C, describe a circle passing through the given point A, and cutting the given line at D; draw D F, and produce it to cut the circle at E; and draw the perpendicular A E.

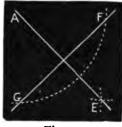


Fig. 103.

Ex. 4.—To draw a perpendicular to a straight line from any point without it, Fig. 103. From the point A with a sufficient radius cut the given line at F and G; and from these points describe arcs cutting at E. Draw the perpendicular A E.

Third Method, Fig. 102. From A describe an arc E C, and from E, with the same radius, the arc A C cutting the other at C; through C draw a line E C D and set off C D equal to C E, and through D draw the perpendicular A D.



Fig. 102.

If there be no room below the line, the intersection may be taken above the line; that is to say, between the line and the given point. Second Method, Fig. 104. From any two points B C at some distance apart, in the given line, and with the radii B A, C A, respectively, describe arcs cutting at A D. Draw the perpendicular A D.

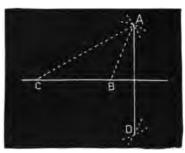


Fig. 104.



Fig. 105.

Ex. 5.—To draw a parallel line through a given point, Fig. 105. With a radius equal to the given point C from the given line A B,

describe the arc D from B, taken considerably distant from C. Draw the parallel through C to touch the arc D.

Second Method, Fig. 106. From A, the given point, describe the arc FD, cutting the given line at F; from F, with the same radius, describe the arc EA, and set off FD,



Fig. 106.

equal to EA. Draw the parallel through the points AD.

When a series of parallels are required perpendicular to a base line A B, they may be drawn as in fig.

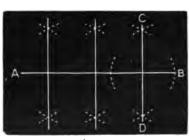


Fig. 107.

107 through points in the base line set off at the required distances apart. This method is convenient also where a succession of parallels are required to a given line $C\ D$, for the perpendicular may be

drawn to it, and any number of parallels may be drawn on the perpendicular.

Ex. 6.—To divide a line into a number of equal parts, Fig. 108.

To divide the line A B into, say, five parts. From A and B draw parallels A C, B D on opposite sides; set off any



Fig. 108.

convenient distance four times (one less than the given number), from A on A C, and on B on B I; join the first on A C to the fourth on B D, and so on. The lines so drawn divide A B as required.


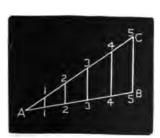


Fig. 109.

Second Method, Fig. 109. Draw the line at A C, at an angle from A, set off, say, five equal parts; draw B 5, and draw parallels to it from the other point of division in A C. These parallels divide A B as required.

Ex. 7.—Upon a straight line to draw an angle equal to a given angle, Fig. 110. Let A be the given angle and F G the line. With any radius from the points A and F, describe arcs D E, I H, cutting the sides of the angle A and the line F G.

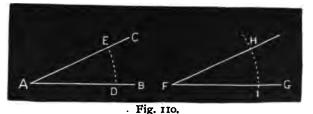

Set off the arc III, equal to DE and draw FII.

The angle F is equal to A as required.

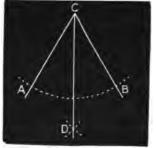


Fig. 111.

Ex. 8.—To bisect an angle, Fig. 111. Let A C B be the angle; on the center C cut the sides at A B. On A and B as centers describe arcs cutting at D dividing the angle into two equal parts.

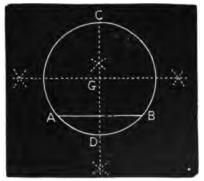


Fig. 112.

Ex. 10.—Through two given points to describe an arc of a circle with a given radius, Fig. 113. On the points A and B as centers, with the given radius, describe arcs cutting at C; and from C, with the same radius, describe an arc A B as required.

Ex. 9.—To find the center of a circle or of an arc of a circle. Fig. 112. Draw the chord A B, bisect it by the perpendicular C D, bounded both ways by the circle; and bisect C D for the center G.

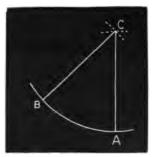


Fig. 113.

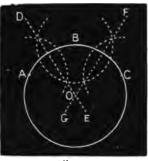


Fig. 114.

Second, for a circle or an arc, Fig. 114. Select three points A, B, C in the circumference, well apart; with the same radius describe arcs from these three points cutting each other, and draw two lines DE, FG, through their intersections according to Fig. 107. The point where


they cut is the center of the circle or arc.

Ex. 11.—To describe a circle passing through three given points, Fig. 114. Let A, B, C be the given points and proceed as in last problem to find the center O, from which the circle may be described.

This problem is variously useful; in finding the diameter of a large fly-wheel, or any other object of large diameter when only a part of the circumference is accessible; in striking out arches when the span and rise are given, etc.



Ex. 12.—To draw a tangent to a circle from a given point in the circumference, Fig. 115. From A set off

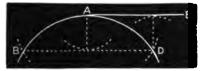

equal segments AB, AD, join BD and draw AE, parallel to it, for the tangent.

Fig. 115.

Ex. 13.— To draw tangents to a circle from points without it, Fig. 116. From A with the radius A C describe an arc B C D, and from C with a radius equal to the diameter of the circle, cut the arc at B D, join B C, C D, cut-

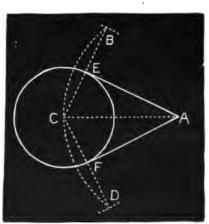


Fig. 116.

ting the circle at EF, and draw AE, AF, the tangents.

Ex. 14.—Between two inclined lines to draw a series of circles touching these lines and touching each other, Fig. 117. Bisect the inclination of the given lines AB, CD by the line NO. From a point P in this line draw the perpendicular PB to the line AB, and on P de-

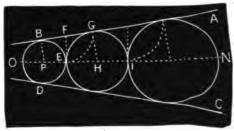


Fig. 117.

scribe the circle B D, touching the lines and cutting the center lines at E. From E draw E F perpendicular to the center line, cutting A B at F, and from F describe an arc E G, cutting A B at G. Draw G II parallel to B P, giving II, the center of the next circle, to be described with the radius II E, and so on for the next circle, I N.

Ex. 15.—To construct a triangle on a given base, the sides being given.

First. An equilateral triangle, Fig. 118. On the ends of a given base A B, with A B as a radius describe arcs cutting at C, and draw A C, C B.



Fig. 118.

Second. Triangle of unequal sides, Fig. 119. On either end of the base A D, with the side B as a radius describe an arc; and with the side C as a radius, on the other end of the base as a center, describe arcs cut-

ting the arc at E; join A E, D E.



Fig. 119.

This construction may be used for finding the position of a point C or E at given distances from the ends of a base, not necessarily to form a triangle

Ex. 16.—To construct a square rectangle on a given straight line.

First. A square, Fig. 120. On the ends BA as centers, with the line AB as radius, describe arcs cutting at C; on C describe arcs cutting the others at



Fig. 120.

DE; and on D and E cut these at FG. Draw AF, BG and join the intersections HI.



Fig. 121.

Second. A rectangle, Fig. 121. On the base EF draw the perpendiculars EH, FG, equal to the height of the rectangle, and join GH.



Ex. 17.—To construct a parallelogram of which the sides and one of the angles are given, Fig. 122. Draw the side D E equal to the given length A, and set off the other side D F equal to the other length B, form-

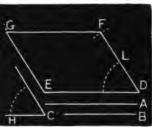


Fig. 122.

ing the given angle C. From E with D F as radius, describe an arc, and from F, with the radius D E cut the arc at G. Draw F G, E G. Or, the remaining sides may be drawn as parallels to D E, D F.

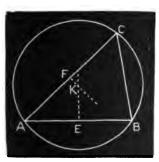


Fig. 123.

Ex. 18.—To describe a circle about a triangle, Fig. 123. Bisect two sides A B, A C of the triangle at E F, and from these points draw perpendiculars cutting at K. On the center K, with the radius K A draw the circle A B C.

Ex. 19.—To describe a circle about a square, and to inscribe a square in a circle, Fig. 124.

First. To describe the circle. Draw the diagonals A B, C D of the square, cutting at E; on the center E with the radius E A describe the circle.

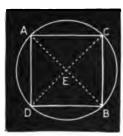


Fig. 124.

Second. To inscribe the square. Draw the two diameters A B, C D at right angles and join the points A B, C D to form the square.

In the same way a circle may be described about a triangle

Ex. 20.— To inscribe a circle on a square, and to describe a square about a circle, Fig. 125.

First. To inscribe the circle. Draw the diagonals A B, C D of the square, cutting at E; draw the perpendicular E F to one side, and with the radius E F describe the circle.

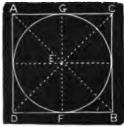


Fig. 125.

Second. To describe the square. Draw two diameters A B, C D at right angles, and produce them; bisect the angle D E B at the center by the diameter F G, and through F and G draw perpendiculars A C, B D, and join the points A D and B C where they cut the diagonals to complete the square.

Ex. 21.—To inscribe a circle in a triangle, Fig. 126. Bisect two of the angles A C of the triangle by lines cutting at D; from

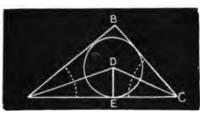


Fig. 126

D draw a perpendicular D E' to any side, and with D E as radius describe a circle.

Ex. 22.— To inscribe a pentagon in a circle, Fig. 127.

Draw two diameters A C, B D at right angles cutting at O; bisect A O at E, and from B with radius B E cut the circumference at G H and with the same radius step round the circle to I and K; join the points to form the pentagon.

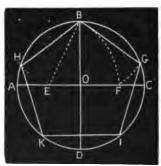


Fig. 127.



Ex. 23.—To construct a hexagon upon a given straight line, Fig. 128. From A and B, the ends of the given line, describe arcs cutting at G; from G with the radius G A describe a circle. With the same radius set off the arcs A C, C F and B D,

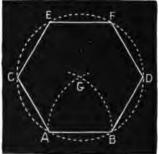


Fig. 128.

D E join the points so found to form the hexagon.

Ex. 24.—To inscribe a hexagon in a circle, Fig. 129.

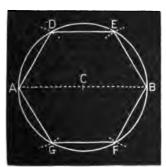


Fig. 129.

Draw a diameter $A \ C B$; from A and B as centers, with the radius of the circle $A \ C$ cut the circumference at D, E, F, G, and draw $A \ D$, $D \ E$, etc., to form the hexagon. The points $D \ E$, etc., may be found by stepping the radius (with the dividers) six times round the circle.

Ex. 25.—To describe an octagon on a given straight line, Fig. 130. Produce the given line A B both ways and draw perpendiculars A E, B F; bisect the external angles A and B by the lines A II, B C, which make equal to A B. Draw C D and H G parallel to A E and equal to A B;

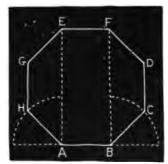


Fig. 130.

from the center GD, with the radius AB, cut the perpendiculars at EF, and draw EF to complete the hexagon.

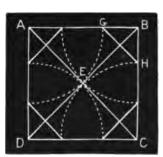


Fig. 131.

Ex. 26.—To convert a square into an octagon, Fig. 131.—Draw the diagonals of the square cutting at E; from the corners A, B, C, D, with A E as radius, describe arcs cutting the sides at G, H, etc., and join the points so found to complete the octagon.

96

Hawkins' Mechanical Drawing.

Ex. 27.—To inscribe an octagon in a circle, Fig. 132. Draw two diameters A C, B D, at right angles; bisect the arcs A B, B C, at E, F, etc., to form the octagon.

Ex. 28.—To describe

an octagon about a circle, Fig. 133. Describe a square

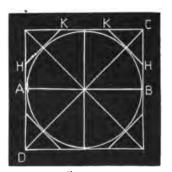


Fig. 133.

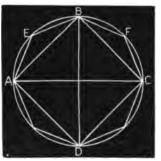


Fig. 132.

about the given circle A B, draw perpendiculars II and K, to the diagonals, touching the circle to form the octagon. Or, the points II, K, etc., may be found by cutting the sides from the corners, by lines parallel to the diagonals.

Ex. 29.—To describe an ellipse when the length and breadth are given, Fig. 134. On the center C, with AE as radius, cut the axis AB at F and G, the foci, fix a couple of pins into the axis at F and G, and loop on a

thread or cord upon them equal in length to the axis AB, so as when stretched to reach the extremity C of the conjugate axis, as shown in dot-lining. Place a pencil or drawpoint

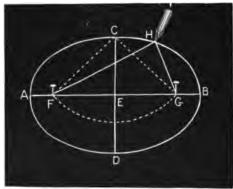


Fig. 134.

inside the cord, as at H, and guiding the pencil in this way, keeping the cord equally in tension, carry the pencil round the pins F, G, and so describe the ellipse.

NOTE.—The ellipse is an oval figure, like a circle in perspective. The line that divides it equally in the direction of its great length is the *transverse axis*, and the line which divides the opposite way is the *conjugate axis*.

Second Method. Along the straight edge of a piece of stiff pr per mark off a distance a c equal to A C, half the transverse axis; and from the same point a distance a b equal to C D, half the conjugate axis. Place the slip so as to bring the point b on the line A B of the transverse axis, and the point c on the line

D E; and set off on the drawing the position of the point a. Shifting the slip, so that the point travels on the transverse axis, and the point c on the conjugate axis, any number of points in the curve may be found, through which the curve may be traced. See fig. 135.

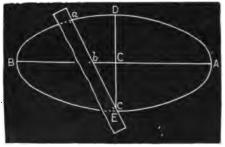


Fig. 135.

Trigonometry.

Trigonometry is that portion of geometry which has for its object the measurement of triangles. When it treats of plane triangles, it is called *Plane Trigonometry*; and as the engineer will continually meet in his studies of higher mathematics *the terms* used in plane trigonometry, it is advantageous for him to become familiar with some of the principles and definitions relating to this branch of mathematics.

The circumferences of all circles contain the same number of degrees, but the greater the radius the greater is the absolute measures of a degree. The circumference of a fly wheel or the circumference of the earth have the same number of degrees; yet the same number of degrees in each and every circumference is the measure of precisely the same angle.

The circumference of a circle is supposed to be

divided into 360 degrees or divisions, and as the total angularity about the center is equal to four right angles, each right angle contains 90 degrees, or 90°, and half a right angle contains 45°. Each degree is divided into 60 minutes, or 60'; and for the sake of still further minuteness of measurement, each minute is divided into 60". In a whole circle there are, therefore, $360\times60\times60=1,296,000$ seconds. The annexed diagram, fig. 136, exemplifies the relative positions of the

Sine, Co-sine, Versed Sine, Tangent,

Co-Tangent,


Secant and

Co-secant

of an angle.

These may be defined thus:



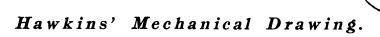

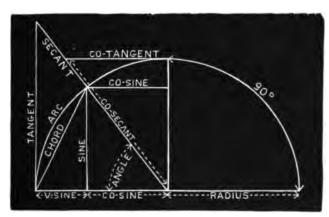


Fig. 136.

DEFINITIONS.

- 1. The Complement of an arc is 90° minus the arc.
- 2. The Supplement of an arc is 180° minus the arc.
- 3. The Sine of an angle, or of an arc, is a line drawn from one end of an arc, perpendicular to a diameter drawn through the other end.
 - 4. The Cosine of an arc is the perpendicular dis-


tance from the center of the circle to the sine of the arc; or, it is the same in magnitude as the sine of the complement of the arc.

- 5. The *Tangent* of an arc is a line touching the circle in one extremity of the arc, and continued from thence, to meet a line drawn through the center and the other extremity.
- 5. The *Cotangent* of an arc is the tangent of the complement of the arc. The Co is but a contraction of the word complement.
- 7. The Secant of an arc is a line drawn from the center of the circle to the extremity of the tangent.
- 8. The Cosecant of an arc is the secant of the complement.
- 9. The *Versed Sine* of an arc is the distance from the extremity of the arc to the foot of the sine.

For the sake of brevity, these technical terms are contracted thus: for sine AB, we write sin. AB; for cosine AB, we write cos. AB; for tangent AB, we write tan. AB, etc.





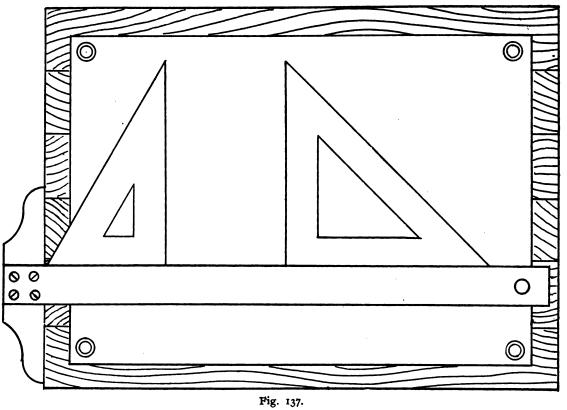

Drawing Materials and Instruments.

Drawing tools or instruments are contrived solely for mechanical drawing; aside from this use they are perfectly worthless, hence the quality of these special utensils is a matter of the first consideration to the earnest student.

There are several degrees of excellence to be found in the make-up of drawing instruments and materials; it may be remarked with truth that "any kind are good enough, and the best none too good," i. e., a learner in this delightful art should not stop at the lack of goodness or the low grade existing in his "tools," but rather do the best work possible with the means at hand.

However, in order that acceptable work may be accomplished, fairly good instruments should be pro-

cured. The advice of some one experienced in the use and care of draughting tools should be sought before purchasing. A drawing board, a single sheet of paper and a pencil is the simplest "outfit" to be thought of; to this small beginning may be added, soon afterwards, an inexpensive pair of compasses, a T-square and a couple of triangles; a vast range of work can be executed with these few tools.

Nothing else will be needed to do fine work except, perhaps, one or two pairs of better compasses and a few sweeps or means of drawing irregular curves; all these had best be purchased separately; for in buying a "box of instruments," it may contain some articles which are not desired, or that are of a wrong size, or even duplicates of those already possessed.



An outfit recommended by the author of "Reed's Hand Book" is as follows.



Fig. 138.

Large compasses with movable leg.

A pair of dividers.

Bow pencil.

Bow pen.

Pencil leg for large compasses.

Pen leg for large compasses.

Drawing pen.

Louis Rouillon, B.S., Instructor of Drawing in Pratt Institute, New York, recommends the following:

Compasses, 5½ inches, with needle point; pen pencil and lengthening bar.

Drawing pen, 4½ inches.

T-square, 24-inch blade.

45-degree triangle, 9 inches.

30 and 60 degree triangle, 9 inches.

1 Scroll.

Dixon's V. H. pencil.

12-inch boxwood scale, flat, graduated 1-16 inch the entire length.

Bottle of liquid India ink, four thumb-tacks, pen and ink eraser.

20 sheets drawing paper, 11×15 inches, and a drawing-board about 16×23 inches will also be necessary; students can usually make the board themselves for less money than it can be bought.

NOTE.—The purchasing of drawing tools is one of the most difficult points to settle that can present itself to a person about to buy a drawing outfit for the first time. Nothing can be so productive of distress to a person drawing as to have his tools getting out of order, joints one day too tight, next day too slack, points getting blunt or perhaps turning up altogether; if needle points, then the needles slip up, and drawing spoiled; in fact, the purchaser can be annoyed in numberless different ways.—W. H. THORN.


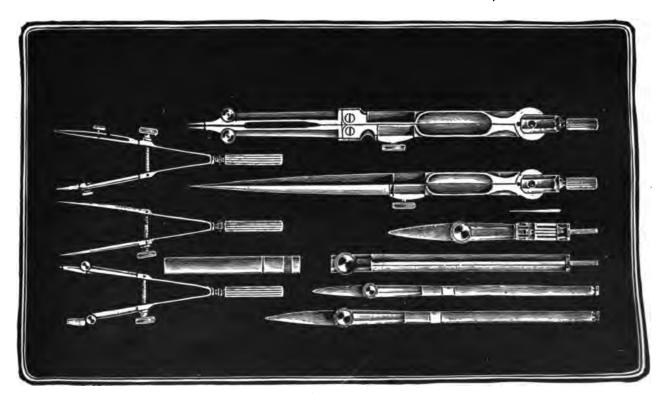


Fig. 139.

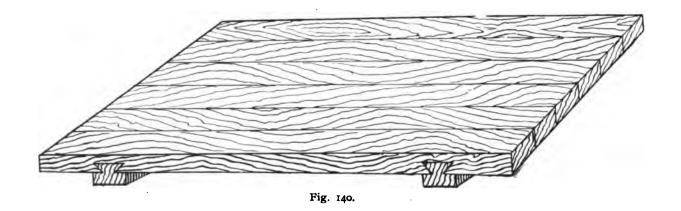

THE DRAWING BOARD.

A drawing-board should be made of well seasoned pine of a convenient size, say 23×16, which will take half a sheet of imperial paper, leaving ½-inch margin all around.

The working surface of the board—or its front side—should be perfectly smooth, but instead of being flat it should have a very slight camber, or rounding, breadthways, this latter feature in its construction being to prevent the possibility of a sheet of paper when stretched on its surface having any vacuity beneath it.

The four edges of the board need not form an exact rectangle, as much valuable time is often wasted in the attempts to produce such a board; but it will answer every purpose of the draughtsman so long as the adjacent edges at the lower left-hand corner of it are at right angles, or square to each other.

An English authority recommends the use of two drawing-boards, 42 inches long and 30 inches wide,

made of plain stuff, without cleets, 1½ inches thick—seasoned—with edges perfectly straight and at right angles to each other. With two boards, one may be used for sketching and drawing details and the other for the finished drawing.

The board should be ¾ inch in thickness, and fitted at the back, at right angles to its longest side, with a couple of hardwood battens, about 2 inches wide and ¾ inch thick; the use of these battens being to keep the board from casting or winding and to allow of its expansion or contraction through changes of temperature. This latter purpose, however, is only effected by attaching the battens to the back of the board in the following manner: . . At the middle of the length of each batten—which should be one inch less than the width of the board—a stout, well-fitted wood screw is firmly inserted into it, and made to penetrate the board for about ½ inch, the head of the screw being made flush with the surface of the batten. on either side of the central screw, two others, about

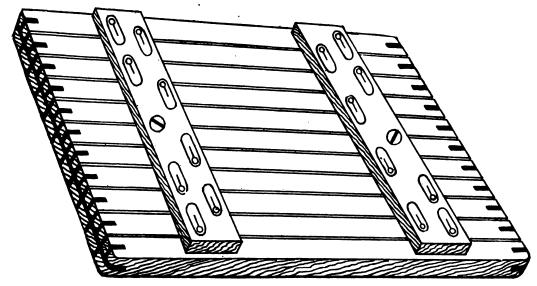


Fig. 141.

3½ inches apart, are passed through oblong holes in the battens, and screwed into the body of the board until their heads are flush with the central one; fitted in this way the board itself can expand or contract lengthwise or crosswise, while its surface is prevented from warping or bending.

A further improvement in such a drawing board as above shown is made by cutting lengthwise along its ends a narrow groove and inserting an ebony or hardwood strip; this is cut or sawn apart at about every inch to admit of contraction; this strip serves as a guide to the stock of the drawing square, allowing an easy sliding movement.

To produce really good work in the shape of a mechanical drawing, one perfect straight edge only is required on a drawing board, and that the left one, which is always known as the working-edge; but for the convenience of being able to draw a long line across the board at right angles to its lower edge, this edge is

made truly square with that on the left side of the board.

The details for building these drawing boards are given, because they are easy to be made by one who understands the use of a few wood-working tools; while the boards themselves are difficult of transportation—in case of the change of residence of their owners—quite unlike the instruments which are to accompany them.











Fig. 142.

Fig. 141 represents the board which has been described in the text, with provisions for the contraction and expansion; the very dark lines are intended to represent the ebony insertions—as described. Fig. 140 represents a plain pine board with dovetailed battens.

Fig. 142 represents the common means used to attach or secure slightly or temporarily the drawing paper



Fig. 143.



Fig. 144.

to the drawing board; these are called thumb-tacks, and are usually forced through the paper into the wood

by the hand, whence they are easily detached. These are made to have as slight a projection as may be, so as not to interfere with the free movement of the teesquare.

For mechanical drawing the invariable practice is to secure the paper on which the drawing is to be made to the drawing board by pinning it; this is effected by various kinds of *drawing pins* or *thumb-tacks*.

The best kind for this purpose have a head as thin as possible without cutting at its edges, slightly concave on the under side next the paper, and only so much convex on its upper side as will give it sufficient thickness to enable the pin to be secured to it; better use four or more small pins along the edge of a sheet of paper, than use one clumsy, badly made pin at each end.

Fig. 143 and fig. 144 represent a pair of plain trestles or horses in common use for supporting large size drawing boards. This pattern is found frequently in the laying-out shop. Fig. 145 and fig. 146 repre-

sent adjustable horses or trestles—these are designed, primarily, for office use. As will be seen by viewing the illustration, the upper part is supported by two hard-



wood sliding pieces; these are provided with strong pins and numerous holes, and pass through the frame of the trestle, as shown, so that the upper portions can be arranged at any angle convenient to the draughtsman, as he lies over his work or stands by it.

Fig. 137 is introduced to exhibit the paper attached to the drawing board with the thumb-tacks, and with the T-square and set-squares arranged to commence

work; the paper should not extend to the edges of the board; three, four or more tacks may be used on each edge of the sheet of paper, instead of two, as shown in illustration.


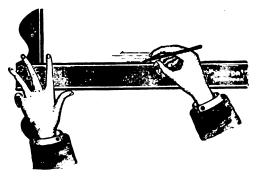


Fig. 147.

A most convenient—and except for its extreme lightness, which is not good in a drawing stand—a most admirable device is shown in fig. 138. The drawing table is simply a drawing board with folding legs; these are made from hard-wood, while the top is made

of soft, seasoned pine, with square corners; while the device is strong and well braced, it can be folded and easily carried about—all as shown in the illustration.

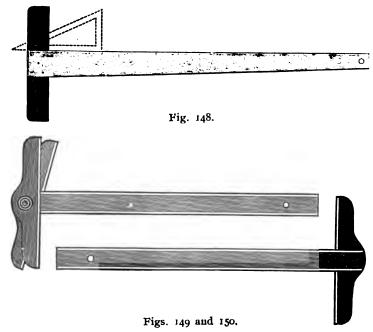

THE TEE-SOUARE.

This is an instrument in the form of a letter T, as shown in the figures 149 and 150; the two parts are known as stock and blade; the horizontal part of the letter (T) is the stock, and the vertical part the blade—hence the name, T-square; to form the square, the two parts are joined together in such a way as to make them exactly at right angles to each other; the stock, which is applied to the working edge of the drawing board, being about one-third the length of the blade, and about three times its thickness.


To be perfect in construction, a tee-square should be as light as is consistent with its necessary strength and stiffness of parts; it should be made of suitable material easily manufactured, put together, and repaired, and withal as truly correct as is possible to be made. Such a square is represented in fig. 148; it has a taper blade, which is generally about double the width where secured to the stock as it is at the end.

The manner in which the stock is united to the blade determines its adaptability or otherwise to the use made of it; in some the stock is rectangular in section, and the blade mortised into it; in others the blade is dovetailed and let into the stock for the whole of its thickness.

ADJUSTABLE BLADED SQUARE.

In cases where many parallel lines have to be drawn, of lengths beyond the capabilities of ordinary set-squares, and in directions other than square with or parallel to the working edge of the drawing board it is convenient to have for use an *adjustable* bladed tee-square, or one whose blade can be set at any desired angle. The blade of such a square should be tapered as in illustration, but shaped at its wide end as shown, and having a stock wide enough to allow for the surface required in the washers of the fittings necessary to make the blade adjustable. These fittings, though requiring to be well made and neatly finished, are not

expensive or difficult to make, as they consist merely of two washers, a square-necked bolt, and a fly nut.

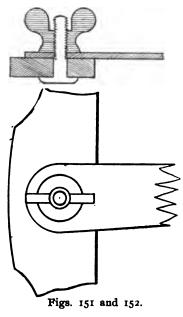


shown, has four parts: 1. blade; 2, fixed head; 3, shifting head; 4, swivel. The head is held firmly by the left hand to the left edge of the drawing board, and the blade serves as a straight-edge for horizontal lines that may extend the whole length of the paper. It can be used for either horizontal, or, by reversing to the bottom of the board, for vertical lines; and, by turning it over, so that the shifting

The tee-square, as

head is against the edge of the drawing board in.

stead of the fixed head, lines at different angles may be drawn. The length of the blade should be the length of the drawing board; if it is shorter, inconvenience will be experienced when lines the whole length of the board are wanted.

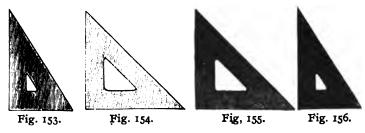

TRIANGLES, OR SET-SQUARES.

Set-squares are invariably used in connection with the tee-square, as shown in fig. 148. The illustrations below show several patterns of the device; by these, vertical lines, triangles, squares and hexagonal, octagonal and twelve-sided figures, diagonal section lines, etc., can be easily drawn. For ordinary purposes, a triangle or set-square with angles of 45° may be 4 inches long and the other 8 inches in length, but a six-inch set-square having angles 90°, 45° and 45°, and an eight-inch one having angles of 90°, 60° and 30°, will be found sufficient for all purposes; there are other triangles used specially for making letters.

In practice the triangles or set-squares are slid along the edge of the blade, and need not be any thicker than it.

PARALLEL RULE.

This instrument is used to mark lines which are neither horizontal nor vertical (usually these are drawn by the square and set-square), and which are parallel to one another; by adjusting the edge of the parallel ruler to a line, it can be extended or opened out (or



Fig. 157.



vice-versa closed), and the line or lines drawn will be parallel or equally distant from the base or first line it was set by. See fig. 157.

Fig. 158 is a parallel ruler, constructed with two rollers fixed on a rod so that they move the same distance, carrying the ruler parallel to the starting line.

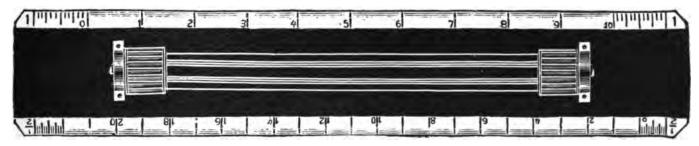


Fig. 158.

NOTE.—It has been said that "a workman may be known by his tools," but the statement must be taken with a good deal of allowance. Some workmen may possess a very fine set of tools and never use them, because they have not the ability or inclination to learn how; especially is this the case with drawing instruments.

If all the fine sets of drawing instruments that are owned by workmen were put to frequent use the owners would find a marked improvement in their abilities in other lines as well as drawing; for it is a noticeable fact that when a person's mind has been trained in a business that requires close calculation and a knowledge of materials, he is capable of showing good qualifications in other lines, and the more skilled he is in one the easier can he acquire skillfulness in another, if he applies the same amount of energy, thought and interest as he did to acquire skill in the first.

SECTION LINER.

Fig. 159 shows an improved section liner which can be adjusted to any angle, and will space the parallel lines at any desired regular distance.


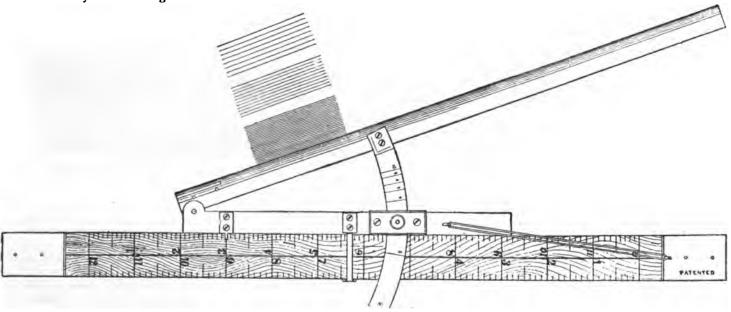


Fig. 159.

IRREGULAR CURVE OR SCROLL.

Irregular curves, or, as they are sometimes termed, sweeps, represented by figs. 160-166, are used for curves that cannot be put in by the other instruments. They

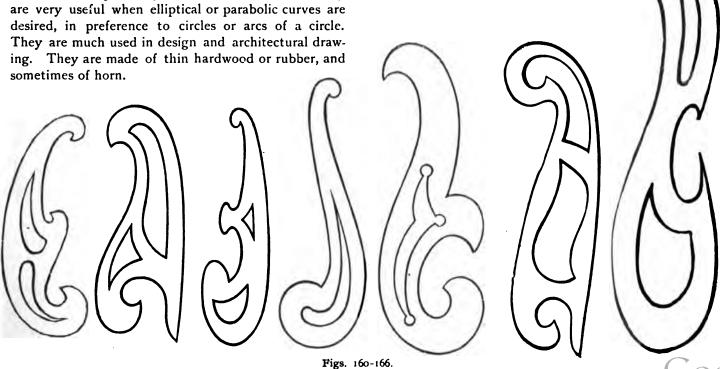

Curves are irregular lines; a circle is a regular line. If a curve is to be passed through a number of predetermined points it should be first sketched in lightly, free-hand; a section of the scroll is then applied to the curve so as to embrace as many points as possible; only the central points of those thus embraced should be inked in; this process is continued until the desired curve is completed.

Curves are made of various material, pearwood, cardboard, xylonite, hard rubber, and a strip of soft lead is sometimes used, which may be easily adjusted to the curve required.

The curves generally used in mechanical drawing are shown on previous page.

Fig. 208, page 134, is a logarithmic *spiral* curve. It is mathematically constructed and contains every curve within the limit of its size.

ELLIPSES.

An ellipse is a geometrical figure, and can be drawn as described in geometrical problem 29, page

96; many drawing offices keep sets of hard rubber ellipses, to economize time constructing them.

DRAWING PENCILS.

These are instruments for marking, drawing or writing, formed of graphite, colored chalk or materials of similar properties, and having a tapering end,

inclosed, generally, in a cylinder of softwood. Fig. 167 represents a ruling pencil; its point is a parallelogram or of a wedge shape. In ruling, the length view rests against the square; its shape gives considerable strength to the lead and allows the making of a very fine line. Fig. 168 differs in the point of the pencil shown, as may be observed in the illustration.

A pencil that is hard is best for mechanical drawing; one that will retain a good point for some

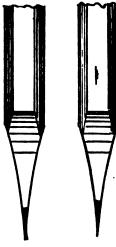


Fig. 167. Fig. 168.





considerable time. Pencil lines should be made as light as possible; the presence of lead on the surface of the paper tends to prevent the ink passing to the paper, and in rubbing out pencil lines the ink is reduced in blackness, and the surface of paper is roughened, which is a disadvantage. As little erasing or rubbing out as possible should be done.

DIVIDERS AND COMPASSES.

These instruments, while they appear alike, have a separate use; the dividers are used to space off distances and dimensions; especially are they necessary in reading drawings made to scale. Com- Fig. 169.

passes are used for describing circles, curves, etc., dividers are used for marking out spaces.

Two forms of the dividers are shown in figs. 169 and 170; the simplest, plainest form is shown in fig. 169; these are used for rough spacings; fig. 170 represents a pair of dividers fitted with an adjustable screw controlled by a steel spring in one leg; by this a very exact measurement can be made. Fig. 170 is intended to exhibit what is called a "hair-spring divider."


PROPORTIONAL DIVIDERS.

These dividers differ from the ordinary ones shown in figs. 169 and 170 in that they are provided with four steel points, one pair of which being set to the full dimension will be reproduced by the other pair, but in a smaller, or reduced size.

Fig. 171 are "bisecting" dividers, being proportional dividers, which, when open, one end measures double the distance of the other.

Fig. 172 are proportional dividers; the points at

Hawkins' Mechanical Drawing.

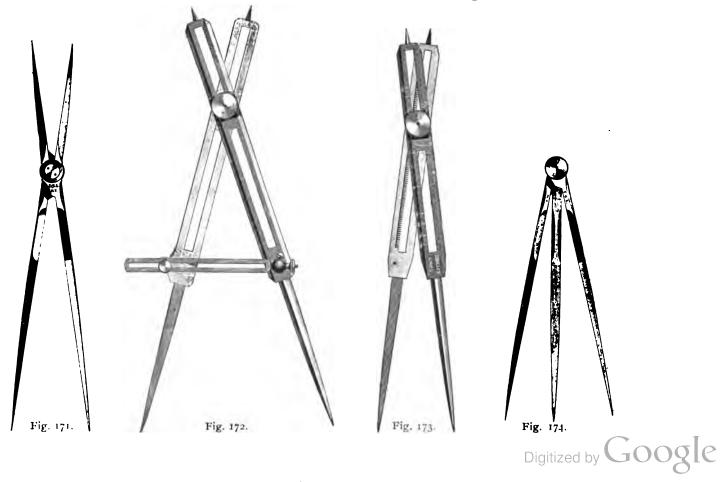

Hawkins' Mechanical Drawing,

one end are capable of being changed, to measure practically any desired proportion at the other end, by altering the position of the pivot where the legs cross one another. The lower connecting link is a micrometer adjustment, for minute $m_{easurements_*}$

Fig. 173 are proportional dividers which are marked for the proportions of lines and radii of circles, being provided with a rack movement for adjustment.

Fig. 174 represents three-leg div. iders, used for taking the position of Points; this instrument is very useful in finding the position of a point in a

COMPASSES.

Compasses con pointed legs; they are for describing circles sometimes-measuring absence of dividers. represents compasses (dividers.

Compasses should have legs, which will allow the to be placed at right angles t

Fig. 177. 178. paper, whatever the size of 179. circle to be drawn. Compa which are too large to allow the points to be th placed; a lengthening bar is generally provided, which

greatly increases the diameters of circles which may be drawn by this attachment; it is shown in fig. 176. One leg of the compasses is usually provided with a socket to which are fitted three points: a divider point, fig. 179; a pencil point, fig. Quant a point,




fig. 178, carrying a special pen for the inking of circles. Each of these points is generally provided with a joint, so that it may be placed at right angles to the paper.

The other leg should be jointed; it is often pro-

vided with a socket which receives two points, one a divider point, and the other carrying a needle point. Such an instrument may be used as dividers for spacing, or as compasses for penciling or inking circles.

The joint at the head of the compasses (see fig. 175) is the most important feature. It should hold the legs firmly in any position, so that in going over a circle several times only one line will result. It should allow the legs to move smoothly and evenly, and should be capable of adjustment.

As shown in fig. 174, one leg has Fig. 180. Fig. 181. a hinge or joint, and a needle point,

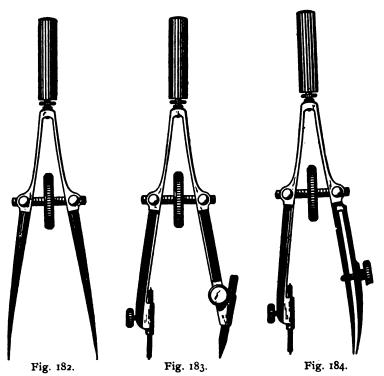



Hawkins' Mechanical Drawing.

which can be regulated by a thumb screw; the other leg has a socket or recess into which interchangeable parts can be inserted. The four figures to the right of the compasses show the parts which are provided with shanks or insertion pieces. Fig. 180 and fig. 181 represent compasses specially used for making small circles, and work too minute for the larger instruments de-

To do work of this nature easily a pair of spring dividers are frequently used. This instrument has one point attached to a spring, which is regulated by a screw, so that very slight changes in the space may be

Compasses specially used for putting in fine circles and dimensions are called "bows." When a pen point it is a "bow pen," with a pencil point a "bow pencil," and if with needle point a "bow dividers." Fig. 180 is a "bow dividers", this fitted with screw for fine adjustment in one leg, fig. 181, is called a "hair-spring bow dividers"; for small details, bows with steel spring

legs without any joint are used; these are called "steel-

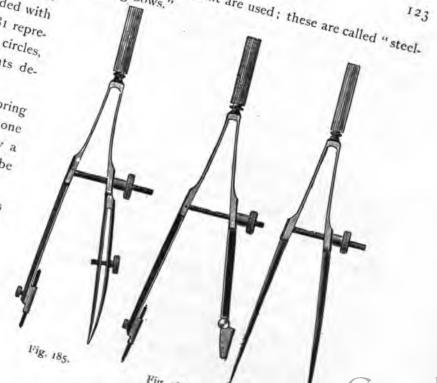


Fig. 186,

SPRING BOWS.

These were originally developed from the common form of compasses, with a single spring leg; later, the demand for smaller sizes made changes necessary, and spring bows are now made symmetrical, both sides of the bow being made to "spring."

Fig. 182 are spring dividers.

Fig. 183 is a spring pencil.

Fig. 184 is a spring pen.

In these figures it will be seen that the two threads, a right and a left, are moved with one central thumbscrew; in the figs. 185 to 187 a single screw is used.


In choosing spring bows, care must be exercised to select a sufficiently strong, stiff spring, as the relation between spring pressure and thumbscrew is important.

BEAM COMPASSES AND TRAMMELS.


In fig. 188 is shown a set of beam compasses, together with a portion of the wooden rod or beam on which they are used.

The latter, as will be seen by the section drawn to one side, A, is in the shape of a T. This form has considerable strength and rigidity. Beam compasses are provided with extra points for pencil or ink work, as shown.

While the general adjustment is effected by means of the clamp against the wood, minute variations are made by the screw, B, shifting one of the points, as shown in the figure.

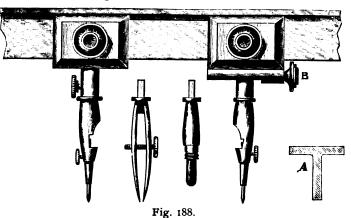



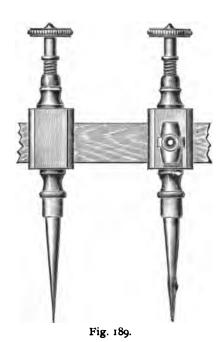

This instrument is quite delicate, and, when in good order, is very accurate. It should be used only for fine work on paper, and never for scribing on metal.

A coarser instrument, and one especially designed for use upon metal, is shown in fig. 189, and is called a trammel. There are various forms of this instrument, all being the same in principle. The engraving shows a form in common use. A heavier stick is used with it than with the beam compasses, and no other adjustment is provided than that which is afforded by clamping against the stick.

In the illustration, a carrier at the side is shown, in which a pencil may be placed. Some trammels are arranged in such a manner, that either of the points may be detached and a pencil substituted.

A trammel, by careful arrangement, can be made to describe very accurate curves, and hence can be used in place of the beam compasses in many instances. For all coarse work it is to be preferred to beam compasses. It is useful for all short sweeps upon sheets of metal, but for curves of a very long radius a strip of sheet iron or a piece of wire will be found of a more practical service than even this tool.

The length of rods for both beam compasses and tramels, up to certain limits, is determined by the nature of the work to be done. The extreme length is determined by the strength and rigidity of the rod itself. It is usually convenient to have two rods for each instrument, one about 1½ or 2 feet in length and the other considerably longer—as long as the strength of the material will admit.

DRAWING SCALES.

Scales are proportioned rules or mathematical instruments of wood, metal, etc., on which are marked lines and figures for the purpose of measuring sizes and distances. It is usual to make scales in the proportion of parts of an inch equalling a foot; the most generally adopted scale for machine drawing is one and a half

inches, equalling one foot; that is, twelve-eighths of an inch (each eighth of an inch representing one inch); there is no fixed rule in the choice of a scale, as they are varied according to the coarseness or fineness of the parts of the machine to be drawn and the space or surface of paper to be utilized.

When objects are of moderate proportions they may be represented full size; but when large, the drawings must be smaller. Standard scales for mechanical drawings are $\frac{1}{2}$, $\frac{1}{4}$, $\frac{1}{8}$ and $\frac{1}{16}$ full size. These scales are often written 6''=1 ft.; 3''=1 ft.; $1\frac{1}{2}''=1$ ft., and $\frac{3}{4}=1$ ft.

Instead of selecting one of the scales named or one found upon the ordinary scales used by draughtsmen, drawings may be made to any scale whatever. Thus, if any object is to be represented in a certain space, a scale should be constructed which will cause the whole of the object to be shown.

Drawing to Scale.—The meaning of this is, that the drawing when done bears a definite proportion to



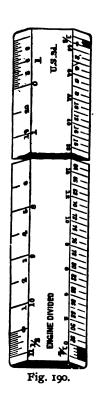




Fig. 191.

the full size of the particular part, or, in other words, is precisely the same as it would appear if viewed through a diminishing glass.

The two-foot rule shown in fig. 192 is the most useful instrument for the comparison of linear dimensions—it can be used as a scale of one-twelfth, or 1 inch equal to a foot, 12 inches—12 feet, it being divided into portions or spaces, each of which is subdivided into halves, quarters, eighths and sixteenths; frequently in the latter class of two-foot rules there are graduations of scales, and it is then also called a draughting scale.

Fig. 190 represents a flat scale, graded so that one inch represents a foot—1 th size—etc., as shown.

Fig. 191 represents a triangular scale (broken). The triangular scale should read on its different edges as follows: Three inches and $1\frac{1}{2}$ " to one foot, 1" and $\frac{1}{2}$ " to one foot, $\frac{3}{4}$ " and $\frac{3}{8}$ " to one foot, $\frac{1}{4}$ " and $\frac{3}{8}$ " to one foot, and one edge read sixteenths the whole 12" of its length.


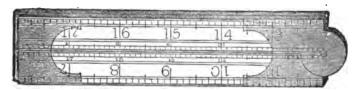


Fig. 192.

Fig. 190 shows such a scale broken. An explanation of the 1" and $\frac{1}{2}$ " side will suffice for all. Where it is used as a scale of 1" to one foot, each large space, as from 0 to 12 or 0 to 1, represents a foot, and is a foot at that scale. There being 12" in one foot, the twelve long divisions at the left represent inches; each inch is divided into two equal parts, so from 0 to one division at the left of 9 is $9\frac{1}{2}$ " and so on. The 1" and $\frac{1}{2}$ " scales being at opposite ends of the same edge, it is obvious that one foot on the 1" scale is equal to two feet on the $\frac{1}{2}$ " scale, and conversely, one foot on the $\frac{1}{2}$ " scale is equal to six inches on the 1" scale; and 1" being equal to one foot, the total feet in length of scale will be 12; at $\frac{1}{2}$ " to 1 foot the total feet will be 24.

In working to regular scales, such as $\frac{1}{2}$, $\frac{1}{8}$, or $\frac{1}{18}$ size, a good plan is to use a common rule, instead of a graduated scale. There is nothing more convenient for a mechanical draughtsman than to be able to readily resolve dimensions into various scales, and the use of a common rule for fractional scales trains the mind, so that computations come naturally, and after a time almost without effort.

The protractor shown in fig. 193 is an instrument for laying down and measuring angles on paper; it is

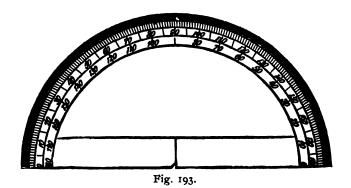

Digitized by Google

used in connecting with a scale to define the inclination of one line to another.

Protractors have the degrees of a half circle marked upon them; as the whole circle contains 360 degrees, half of it will contain 180, one-quarter 90, etc. Hence, protractors showing 180° exhibit all that is needed. To protract means to extend, so this instrument is also useful in "extending" the lines of inclination at the circle.

DRAWING-PENS.

A special pen called a drawing-pen, and also special ink, are required to ink a drawing; figs. 194 and 195 represent two sizes of drawing-pens—one being best adapted for fine work, and the other for coarse or heavy line work. The points, as will be observed in the illustra-

tion, are made of two steel blades which open and close as required for thickness of lines by a regulating screw.

A good drawing pen should be made of properly tempered steel, neither too soft nor hardened to brittleness. The nibs should be accurately set, both of the same length, and both equally firm when in contact with the drawing paper. The points should be so shaped that they are fine enough to admit of absolute control of the contact of the pen in starting and ending lines, but otherwise as broad and rounded as possible, in order to hold a convenient quantity of ink without dropping it. The lower (under) blade should be sufficiently firm to prevent the closing of the blades of the pen, when using the pen against a straightedge.

The spring of the pen, which separates the two blades, should be strong enough to hold the upper







Fig. 196.

blade in its position, but not so strong that it would interfere with easy adjustment by the thumbscrew. The thread of the thumbscrew must be deeply and evenly cut so as not to strip.

An important requisite after the pencil lines have been put in is ink, with which to line the drawing. This should be of the best that can be procured. The pen is filled by dropping the ink between the blades, or nibs, while held in a nearly vertical position, as shown in fig. 196.

Liquid India ink can be procured in bottles with glass tube feeders, which are very good, and keep the

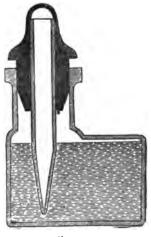



Fig. 197.

hands and fingers free of the ink. Fig. 197 is a sectional view of such a bottle and "filler," or feeder. This generally answers all requirements, but the dry ink of good quality, in sticks or bars, cannot be surpassed, although it requires skill for its preparation. Fig. 198 represents a sloping dish or "tile" for mixing, which should be done with little pressure, in clean, filtered or

distilled water, care being taken to keep the liquid free of dust, which obstructs the free flow of the ink in the pens.

The bars of India ink are shown, as they are imported, in figs. 199 to 202.

Pure India or China ink is only made in those

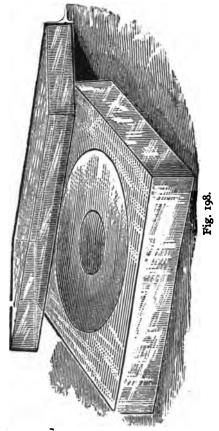



countries, because the special wood from which it is prepared is found only in those regions. So-called India inks, made of lampblack and animal glue, are only imitations; therefore India ink should be purchased from a reliable importing house—shape is little guarantee of quality.


Fig. 202.

Soft gray vulcanized rubber (fig. 203) should be used for cleaning drawing paper; for erasing any portion of a line in pencil, a piece of prepared white vulcanized rubber is the best, small in size and of rectangular shape (see fig. 205).

An ink eraser is made of a composition of rubber and ground glass, and it should be used as sparingly as possible on drawings, as it roughens the paper and removes the gloss from its surface (see fig. 204). Steel ink erasers are useful in removing defects, overrun lines, joint of lines if swollen, etc.; they have a fine point and can be used to advantage with a little practice; they are used with a scratching, not a cutting, motion (see figs. 206, 207).

DRAWING PAPER.

The first thing to be considered in selecting drawing paper is the kind most suitable for the proposed plan. Paper may be purchased in sheets 22 x 30 inches, that make four exercise sheets 11 x 15 inches; this may be of several grades and tints.

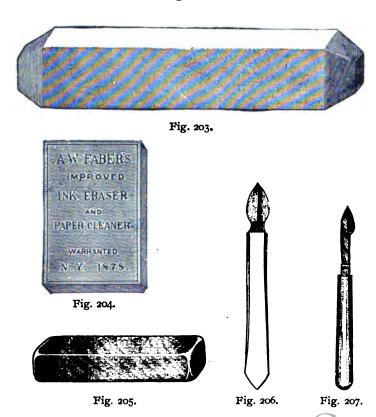

The qualities that constitute good paper are strength, uniformity of thickness and surface, neither repelling nor absorbing liquids, admitting of considerable erasing without destroying the surface, not becoming brittle nor discolored by reasonable exposure or age, and not buckling when stretched, or when ink or color is applied.

The sizes and names of paper made in sheets is as follows:

Cap	13x17	ins.
Demy	15x20	"
Medium	17x22	4.6
Royal	19x24	"
Super Royal	19x27	"
Imperial	22x30	"
Atlas	26x34	"
Double Elephant	27x40	"
Antiquarian	30x53	"


For large drawings paper is made in rolls. "Detail paper" is especially made for marking out new designs; it is made in rolls 36, 42 and 54 inches wide;

it has excellent erasing qualities and takes ink and color with facility.

When working by artificial light it is desirable that the paper be of a light-brown color, which is less trying to the eyes than a pure white.

If it is a shop drawing or sketch not to be preserved, use detail paper, which is the most economical and will stand a great deal of handling without becoming soiled. If it is a detailed plan, finished drawing or a picture, use the best white drawing paper to be obtained, so that your drawings can be preserved indefinitely without danger of fading, which is due either to the paper being poorly made and discoloring with age, or being of poor fiber and absorbing the ink or color, and the drawing consequently losing its brightness.


After deciding on the size of paper most suitable for the work, then carefully select the paper embracing the most qualities of value for the proposed drawing.

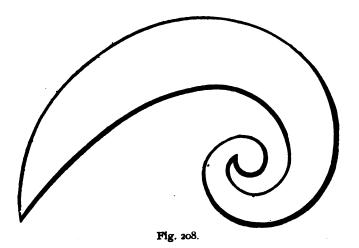



Digitized by Google

Hawkins' Mechanical Drawing.

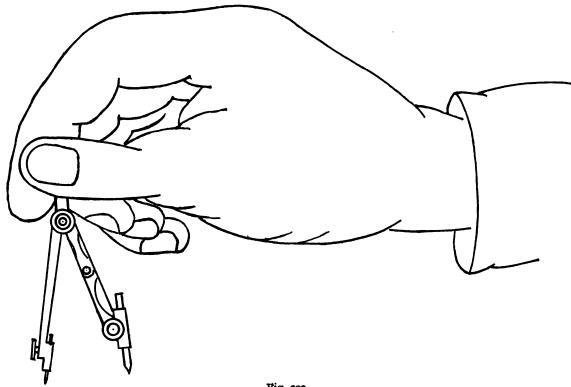

Mechanical Drawing.

In distinction to "free-hand," mechanical drawing is executed almost entirely by the use of the instruments previously described; hence its other term, instrumental drawing. To define it particularly it may be said that,—

Mechanical drawing is the correct reproduction of any figure or part of a machine, whether of full size or reduced in the proportion of one part to another; it also comprises the art of delineating the interior parts which are hidden from view in solid bodies.

A mechanical drawing is the vehicle for conveying the ideas of the designer to those who are to embody them in wood and metal, and the considerations which should govern its production are those which affect its clearness and legibility or those which facilitate reference to it. Drawings consist of plans, elevations and sections; plans being views on the top of the object in a horizontal plane; elevations, views on the sides of the object in vertical planes; and sections, views taken on bisecting planes, at any angle through an object.

Drawings in true elevation or in section are based upon flat planes, and given dimensions parallel to the planes in which the views are taken.

Two elevations taken at right angles to each other fix all points, and give all dimensions of parts that have their axis parallel to the planes on which the views are taken; but when a machine is complex, or when several parts lie in the same plane, three and sometimes four views are required to display all the parts in a comprehensive manner.

A man must have either a natural talent for hand-



drawing or years of experience, before he can produce a sketch and "dimension" it, fit to work from; hence the elementary character of the examples given for practice. A "pretty" drawing is not expected from a beginner; it should always be borne in mind, that correctness of dimensions and general clearness, rather than elaborate finish, are what will save the battle in the days of competition.

Mechanical drawings should be made with reference to all the processes that are required in the construction of the work, and the drawings should be responsible, not only for dimensions, but for adaptation to fitting, forging, pattern-making, moulding, and so on.

Every part laid down should have something to govern it that may be termed a "base"—some position which, if understood, will suggest size, shape and relation to other parts. Searching after a base for each and every part and detail, the draughtsman should proceed upon a regular system, continually maintaining a test of what is done.

A mechanical drawing consists chiefly of three views:

- 1. The plan or top view.
 - 2. The side elevation.
 - 3. The end elevation.

In addition to the above, drawings are used to show interior portions of the figure; these are termed "sections," and they may be taken where any plane crosses another.

NOTE.—The word *elevation*, as applied to mechanical drawings, means simply a view; hence a side elevation is a side view, or an end elevation is an end view.

The word *plan* is employed in place of the word top; hence a plan view is a top view or a view looking down upon the top of the piece.

A general view means a view showing the machine put together or assembled, while a detail drawing is one containing a detail, as a part of the machine or a single piece disconnected from the other parts of the whole machine.





Fig. 211.

Penciling.

It is very nearly true, as has been said, that every mechanical drawing is, in the first instance, penciled; if this is so, then more work is done with the pencil than with the pen; therefore the first attention of the student of mechanical drawing should be directed to the following instructions for penciling a drawing.

With all necessary materials in hand, and in good order for the beginning of a drawing, the first thing to do is to pin the paper on the board quite square.

To do this effectively, lay the paper flat and put on the T-square with its head at the left side of the board; slide the square up nearly to the top, and arrange the paper level with the blade; with the right hand hold the paper still and move the square down a little; now, pin the top of the paper with thumb-tacks.

Next, pressing the square lightly to the paper, slide it down to the bottom and pin that part of the paper to the board. The paper must not project outside or over the edges of the board, and the pins or tack-heads should be forced down flush with the paper, so as not to interfere with the free movement of the tee-square up and down the board as occasion may require.

The accuracy of the work depending upon their condition, it is first needful to see that the pencil and pencil compasses are properly sharpened. Reference is made to valuable directions contained on pages beginning with 55, under the heading of "Free-hand Drawing," to which may be added that—

All lines should be drawn with the pencil slightly inclined in the direction in which it is moved.

Any and all lines not needed in the finished drawing should be erased at one time after the final lines have been determined, for the surface of the paper is soiled very quickly when worked upon after erasures have been made.

The working lines and other lines that are to be removed should be erased when the drawing is ready to finish and before its outlines have been strengthened, in order that the final lines may be left in perfect condition.

To show where the lines meet or terminate it is needful that all pencil lines pass the actual ending place, making a distinct intersection. This does not apply to "inking in" the lines, but rather to prevent the over-drawing of the ink lines, because the edge of the rule and the pen itself obstruct or partly cover the view of the line, it is very liable to pass over or beyond the required point in inking the lines, which must not occur.



In the preliminary operation of producing a regular mechanical or instrumental drawing, it is necessary to make a "sketch," in pencil, of the object to be represented. The AMERICAN MACHINIST has given in a few words the order to be followed, in effecting the best results; we quote, as follows:

"In making a free-hand sketch of an object from the model it is well to observe the following order: Look the model over carefully and determine the number of views necessary to illustrate it fully, drawing the same, free-hand, in their proper relation to each other, on sketching paper. Look the sketch over carefully to see that nothing has been omitted, and put on dimension lines, after which scale the model carefully and put on dimensions. Do not put in the dimensions at the same time the dimension lines are drawn; have all the dimension lines in place before attempting to insert dimensions.

"Follow the same order in making the drawing with instruments as was used in making the sketch;

that is, draw the views in their proper relation to each other, put in dimension lines, then dimensions, and lastly notes and title. If section drawing is made, do not draw section lines in pencil."

POINTS TO BE OBSERVED IN SKETCHING.

- 1. Especial attention is to be paid to outlines—edges of plane surfaces are lines; when a line is made it represents the edge or outside of something.
 - 2. Learn to be accurate before being rapid.
- 3. A sketch should be intelligible to any one, even if they are unacquainted with drawing.
- 4. Horizontal and vertical lines and a few curves will enable one to make almost any simple sketch.
- 5. It must be also remembered in making drawings from actual measurement that the instruments are not in the first place employed; the rough sketch is first made and then it is converted into a drawing. The draughtsman makes a rough sketch entirely by the hand and eye, measures the various parts, and jots



down the measurements in his sketch; after this he reduces the whole to the desired scale, and proceeds to make his mechanical drawing.

- 6. Let the sketch book be the constant companion of the student; it may be advantageously filled with outlines of machine or other work suitable for preservation, to be made into finished drawings, or for reference. Sketches are often valuable for reference as aids in originating new designs.
- 7. A sketch, when possible, should have all the dimensions written upon it, but—
- 8. Sketches in shop practice should not take the place of working-drawings; the latter have a check upon them in being drawn to a scale—hence the figures written upon them and dimensions by scale must agree.
- 9. Place title and date on each sketch—no matter how seemingly unimportant—for future reference.
- 10. Practice sketching at every favorable opportunity. There is no necessity for detail at first—simply the outlines of the article and its parts.

11. Sketch-books, with paper bound in cloth covers, are utilized for bold, off-hand sketches by experienced draughtsmen, but a single sheet of paper, used on both sides, is not unworthy of service in an emergency—or even the blank side of a letter may be available. Sketching-blocks, or paper "pads," 4 x 6, or more, in size, and containing 48 sheets, are sold by stationers, and are found to be most convenient to have in hand and for practical use. Portfolioenvelopes, made of extra length paper (manila) are useful in filing away sketches and drawings. The size 10½ x 15 is used for United States Patent Office drawings.

The function of the pencil—in mechanical drawing—is to make a path for the pen to follow. If it were possible to make a drawing with all its lines ending at the proper place, at the first time, there would be no necessity for using the pencil. One is obliged, however, so to use the pencil that all lines pass beyond the actual ending place, thus making a distinct point for the drawing pen to stop at.



The pencil should be pressed to the paper just enough to make a clean, fine line, and no more; once over the path is sufficient, if the line is visible and true.


To sharpen drawing pencils, I, use a fine file, after taking off enough of the wood with a knife; 2, make a conical point for the free-hand drawing pencils and a chisel point for ruling and marking distances.

Pencil compasses are instruments where one leg is provided with a pencil point. Fig. 209 shows the mode of manipulation of those shown in fig. 180 and fig. 181.

The pencil compass is held by the projection above the joint between the thumb and first finger, which enables it to be rotated by a movement of the finger without causing any undue pressure on the points. Should much pressure be applied, there is a tendency to force the point or center through the paper, making an ugly center mark; at the same time the pressure tends to break off the pencil point.


These few illustrations from fig. 212 to fig. 219 are made designedly simple, so that they may be utilized

in "free-hand" work, for which they are good practice, as well as serving for examples in mechanical drawing.

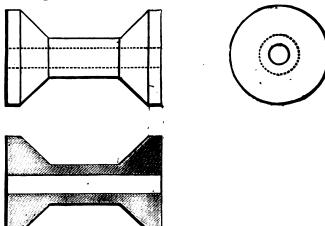

Figs. 212.


Figs. 212, showing a spool or bobbin, exhibit three views, viz.: front elevation or plan, and section; both are drawn with simple lines, the end elevation by circles.

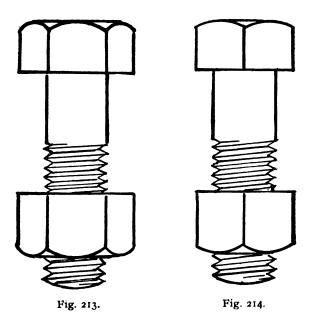


Figs. 213 and 214 are two side views of a hexagon head bolt. Figs. 216 and 217 are a square head bolt—two side views and end view. Figs. 218 and 219 are a front and edge view of a forked or double joint.

Figs. 215 show three views of a file handle; the front view and section are practice for compound curves and curved lines meeting straight ones; all these are capable of being produced by instruments.

Moreover, many of the views and illustrations used to instruct and explain machine tools and other devices in other parts of the volume, are drawn so that they may be used also as examples in advanced instrumental practice. This is a "hint" to the diligent and painstaking student worthy of remembering.

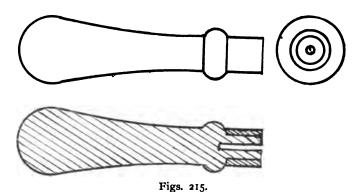




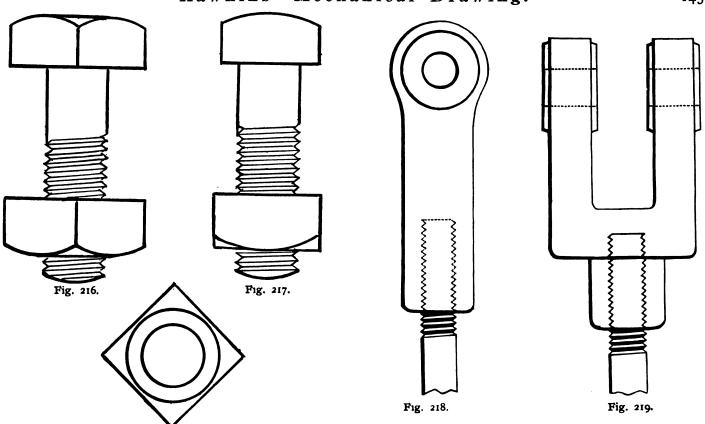

Digitized by Google

The designing and drawing of arcs and whole circles occupy a large proportion of space in nearly all mechanical drawings. The making of a complete circle is a matter of no great difficulty, but the beginning and termination of parts of circles require both judgment and considerable practice.

To aid the student these two illustrations of circles are introduced. To draw fig. 220 with a pencil, using the upper edge of the blade of the T-square as a guide, draw a center line, AB, mark on it a distance of 4 inches, space this into half inches, using the dividers and making the points with it; then with the pencil compasses or bow pencil, which must be held as shown on page 209, and rotated from left to right, or clockwise, draw a series of circles through these points, tangent to one another or all touching at A, care being taken that the pencil lines exactly meet at A, and also cut the divided points as shown in the illustration. For fig. 221 divide the center line as before, and draw the semi-circles on it AB, BC, meeting at B, and CD, DE, etc.

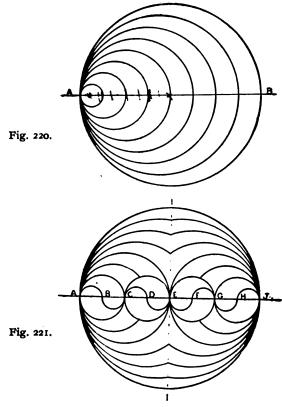



Now from center B draw circles A C, C E, meeting in C, and so on with the circles, arcs or segments; success in drawing this figure depends on the correct spacing of the center line in the first instance into equal parts.

The T-square should be used for drawing horizontal lines only. Its head should always be placed upon the left edge of the board. Vertical lines should be drawn by the use of a triangle placed upon the T-square and not by means of the T-square only; because the edges of a board are seldom at right angles to each other, and the blade of the T-square is often not at right angles to the head, so that lines at right angles to each other will not result from the use of the T-square

upon all edges of the board. Only the upper edge of the T-square should be used, as the edges are often not quite straight or parallel.

The 45° triangle has two angles of 45° and one of 90°. The 30° and 60° triangle has an angle of 30°, one of 60°, and one of 90°. By placing these triangles upon the T-square, lines at any of these angles with a vertical or horizontal line may be drawn.

Drawings finished in ink are much more effective and desirable than pencil drawings; but as a good inked drawing cannot be made except upon an accurate pencil drawing, students should begin with the pencil, and should not use ink until they are able to produce satisfactory results in pencil.

Projection.

The word projection means to throw forward, and in ordinary machine drawing it is the projecting or throwing forward of one view from another view.

In drawings the lines in one view or plan may be availed of to find those of others of the same object, and also to find their shape or curvature as they would appear in the other representations; this is called projection-drawing.

Fig. 222 is the illustration as shown in fig. 212 on page 143, with the addition of dotted projection line, which illustrates the method of throwing forward the section and the end view of the object; these two views are procured from the plan or first figure, as shown in fig. 222.


Fig. 224 represents the square bolt and nut shown

in fig. 216, and the mode of projecting is similarly shown by dotted lines.

Fig. 223 shows file handle shown in fig. 215 and the mode of projecting.

The principles upon which "projection" in drawing is based, are illustrated in the following examples



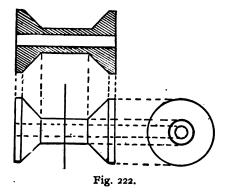

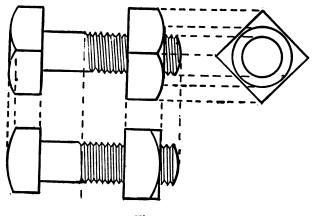


Fig. 224.

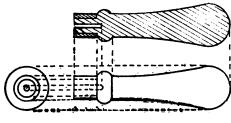


Fig. 223.

and text: As a real object can be scaled with a foot rule, so a drawing must permit of scaling and measuring. This measuring may take place as with the real object in full size or the drawing may, for the sake of convenience, be reproduced and measured in a reduced scale, as half, or in still smaller sizes. Sometimes it

may prove convenient to enlarge the drawing to twice the natural size of the object, as a means of making it stand out more clearly than the real size would accomplish.

For practical purposes, it is productive of economy of time to mark the dimensions of height and width or depth on the drawing in figures, to avoid the scaling. This marking of the dimensions is best done at the time of making the drawing, while the conception of the object is clear.

To convey a correct impression of the object, all lines that are marked to be of equal length should appear equally long on the drawing and be capable of being scaled to such equal length; for this, it must be assumed that the eye of the observer is equally distant from all points of a plane through the nearest point, or one of the axes of the object, and that the lines

of sight are all parallel to each other and square to this plane.

In fig. 225 these lines of sight are seen as directed toward one side of a cube or block; it will be readily understood, however, that in this way nothing is visible and accessible for scaling and dimensioning except this front face of the block, thus, a determination of the dimensions of only height and width would be possible, while the dimension of depth is entirely undetermined.

It is thus necessary to get a view of the block from another side; the direction in which it will be most instructive to obtain additional views is in the direction of the breadth and of the length and square to the lines of sight of the first view.

Fig. 226 shows how the lines of sight would strike the object in the three directions. If these lines should be rays of light, some of them would pass by the body



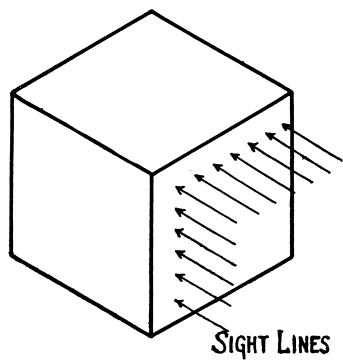


Fig. 225.

until they squarely strike the large plane surfaces, *I*, *II*, *III*; naturally the rays of light on the faces of the object will be retained, and cannot strike the plane surfaces, thus leaving dark shadows of exactly the same outlines as the block; these would be exact drawings of the faces, and if by some means they can be fixed and retained on the plane they can be completely measured and dimensioned.

This throwing forward of the outline of the object in different views on the planes is called projection of the object, and furnishes a highly important means of fixing the outlines and dimensions in the three main directions of height, width and depth; evidently, the light rays passing by the front face may not all reach the plane of projection, but they may be retained by protruding parts of the object behind the front face. These protruding parts naturally would also be projected on the plane in the same manner as the main body of the block.

These projections of the protruding part are plainly visible in plane II and plane III, while the part would not be drawn in outline in plane I. It may be imagined, however, that the greater thickness of the body in the direction of the protruding part would intensify also the shadow, thus outlining the face of the protruding part in plane I.

It is apparent that these three projections are all needed, but as drawing is all done in one single plane, the three projections will for the sake of convenience have to be brought into a single plane. This can be realized if plane II is swung around axis OZ and plane III around axis OY, until all three surfaces are in one single plane, which would then appear as shown in fig. 227.


It is also possible to assume transparent planes in front of the body and extend the parallel lines of sight forward instead of backward. Thus an outline picture will be created on each of the three planes *I*, *II*, *III* in fig. 228, in a manner similar to fig. 226. For drawing

purposes, all three views again have to be brought into a single plane, which is done by swinging II around OZ, and III around OY in the same manner as fig. 227 was evolved from fig. 226.


It will be noted that in fig. 229 plane III is now above I and plane II on the left-hand side of I, while in fig. 227 they were below and at the right-hand side of plane I. As the swinging of the top and side planes takes place around the edges of the front plane I two systems may thus be distinguished, according to the position of plane I in regard to the object. Fig. 226 thus represents the system of backward projection, while fig. 228 represents the system of forward projection.


Either system can have, however, the plane II at the right- or left-hand side edge, while plane III may be attached to the top or bottom edge of plane I; it is readily understood that a number of combinations are possible for each system, as it is not necessary to adhere absolutely to one rule. The system of forward




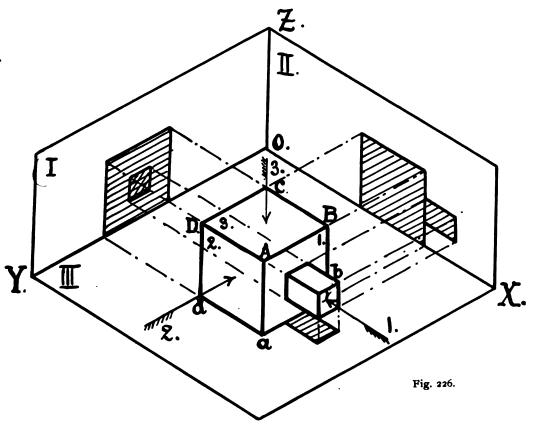

Hawkins' Mechanical Drawing.

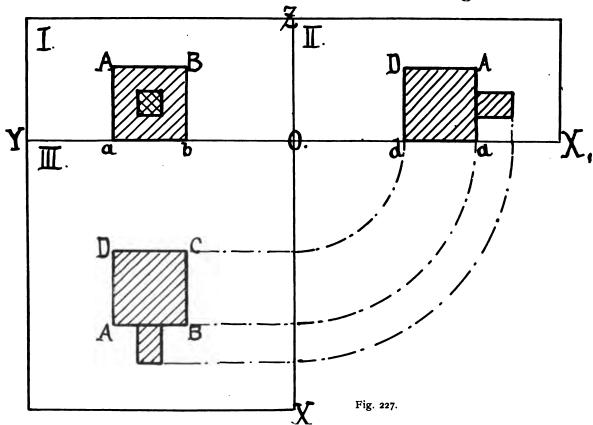

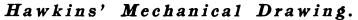

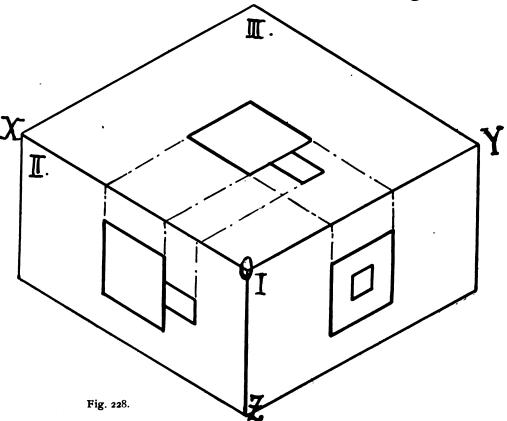

Digitized by Google

projection is the one generally practiced and further examples are all executed by this system, meaning that the planes are always between the observer and the object.

For the clearness of the drawing, it is desirable to have all corners, edges and outlines appear in such solid lines as they appear to the eye. If, therefore, certain sharply defined outlines occur on one side more than on the opposite one, it is most desirable to take the view against the side that has the most definitely marked outlines.

If the opposite side should show a number of wholly different features, it may prove even desirable to show this side also, thus gaining four views instead of the usual three, and so obtain a more complete understanding of the shape of the object, besides giving increased facilities for dimensioning each part of the body.

This additional view may be taken from the sides, as well as up or down, thus making a maximum of five


views possible by which the outside of the object may be delineated.

Fig. 230 shows why it may be desirable to take five views of a block that has a receding space of different outlines in each of the side and top and bottom faces.


It is not necessary, however, to resort to five views in such a case as is represented in fig. 230, as the only differing feature, the circular space in III bottom, might be shown in III top by dotted lines, and the difference of II right might be shown in II left, also by dotted lines. It is desirable to show four or five views only where great complication and consequent lack of clearness through numerous dotted lines would result from having a less number of views.

So far the projections and views have only represented the outlines of the object; it may often be desirable, however, to show central holes or other per-



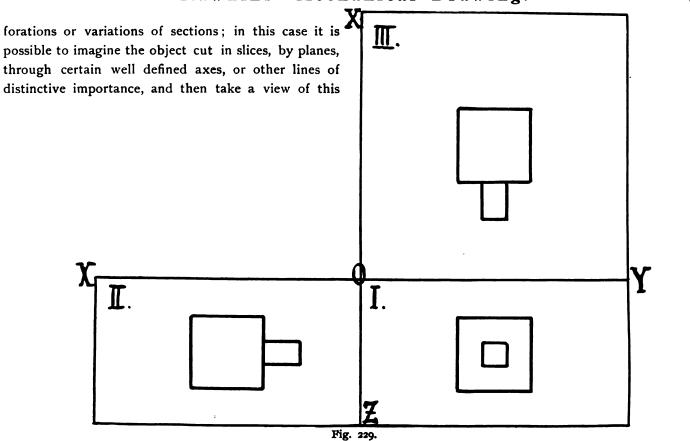

Hawkins' Mechanical Drawing.

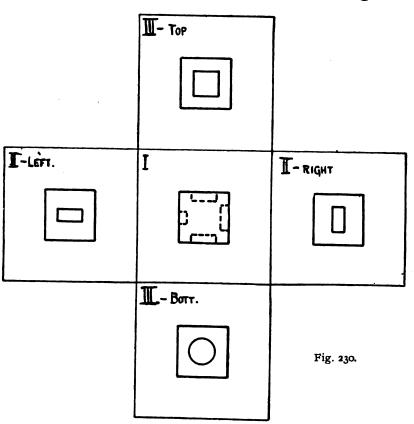

sectional plane with its newly created intersections or sharply marked outlines; thus, a section may often take the place of the third, fourth or fifth view to great advantage.

It is not always possible to get a view against a face or side of the object, but, with irregularly shaped bodies or under special conditions, it may be necessary to take a view of corners, sloping planes, curved or irregularly shaped surfaces.

Fig. 231 shows a hexagonal nut in the three normal projections; from the top view it is readily seen that the front view shows the side of the hexagon in a contracted scale, and that therefore the scaling and dimensioning for the horizontal direction have all to be done in the top or plan view; the front and side views convey, however, the dimension of height correctly,

and these are therefore the right places for scaling and dimensioning in the vertical direction.


Fig. 231 shows how a cylindrical outline appears in the three views; the hole in the nut presents itself as circular in the top view, while it appears in the front and side views as a rectangle. For simple objects, it is unnecessary to show the edges of the planes, and the three views are grouped, as regards distances and positions, as most convenient for the execution of the drawing.

Where sloping surfaces are of irregular form, it may be necessary to employ help lines for their full determination in the three views. Fig. 232 shows how the surface that is produced by a slanting cut through a cylinder would appear in the three views. The help lines are placed in the top view in eight equal divisions around the circumference of the cylinder. These division lines are shown by dotted lines on the cylinder in

.


the front and side views. Their intersections, with the sloping cut in the front view, furnish also the height of the corresponding points for the side view.

By progressive determination of points, lines and surfaces, even the most complicated bodies can be completely represented for their reproduction in any application to mechanical or industrial purposes.

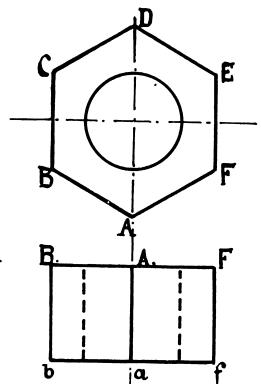



B

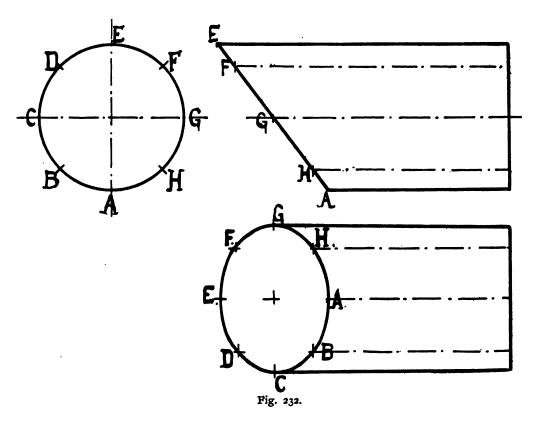

The spur wheel shown on page 163 is an example of projection drawing.

The wheel is illustrated in three views: fig. 235 is a side view, or elevation; fig. 234 is a front elevation; fig. 233 is a section view on CD. The section is projected from the front elevation by drawing parallel lines from the points in front elevation where the lines are intersected by the center line CD, cutting the plane of view and showing the interior shape at CD.

The side elevation, fig. 235, is projected from the front elevation, fig. 234, by drawing parallel lines from the edges in the front view across its face.

In actual drawing practice the figures should be made about three times larger than the example, and as follows:

For the front elevation draw the center lines AB, CD, and from their point of intersection as a center, with the compasses draw the inner circle or hole, also the pitch line EE. With the dividers space this line


into nineteen equal divisions; each point on this line will be the center of a tooth, and the distance from one point to the next one is the pitch of the tooth.

Now, with the dividers mark off the thickness of tooth at each side of these points on pitch line; with the compasses draw the outer circle for points of teeth, the inner circle for the root of teeth, and circles for thickness of rim and hub; also circles representing the fillets at rim and hub. For clearness and to prevent confusion these lines are shown on one-half the wheel only, terminating in center line CD; all the lines of the front elevation are now complete excepting the teeth.

In the drawing office it is unusual to delineate all the teeth in a gear wheel, the lines without the teeth as now completed being deemed sufficient, giving all particulars; however, to prevent the error of mistaking the circles it is well to represent one or two teeth on the drawing.

In the example, proceed and complete the entire



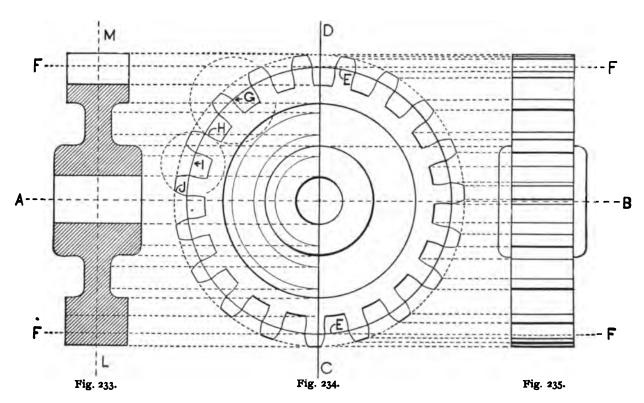



wheel, taking on the compasses a radius equal to the pitch of the tooth; set them on the pitch line at the point G, already spaced for thickness of tooth, draw line H from pitch line to root of tooth; proceed similarly all around the circle, completing one side. Next, reverse the operation and draw the corresponding side of the root of tooth. Now take a radius equal to half the space between teeth and the thickness of tooth on pitch line, and, with center in pitch line, as shown at I, draw the outside or addendum of tooth, J; it will be apparent that the reverse addendum of the tooth next adjoining can be formed at the same time, with one setting of the compasses; finish all the teeth similarly; the front elevation will thus be completed.

Fig. 233 is an excellent example of sectional drawing, to be executed as follows:

First draw the center line L M of fig. 233, lay off

at each side of it half the breadth of face and of the hub; now project, from center line CD, in the front elevation, fig. 234, with the T-square the upper and lower teeth, the fillets, the chamfers, the hub and center hole, also dot in the pitch line FF, take the radii and draw the fillets and chamfers; draw section lines and the view will appear as shown in fig. 233.

Fig. 235 is a side elevation of fig. 234, and is a fine sample of projection, to be executed as follows:

Proceed similarly as for fig. 233, projecting the lines from the outside edges of the front elevation, instead of from the center line $C\ D$ as in last figure, and the end elevation will be as shown in fig. 235.

The student will be assisted in understanding this working drawing by consulting the pages under the heading of "Gearing."





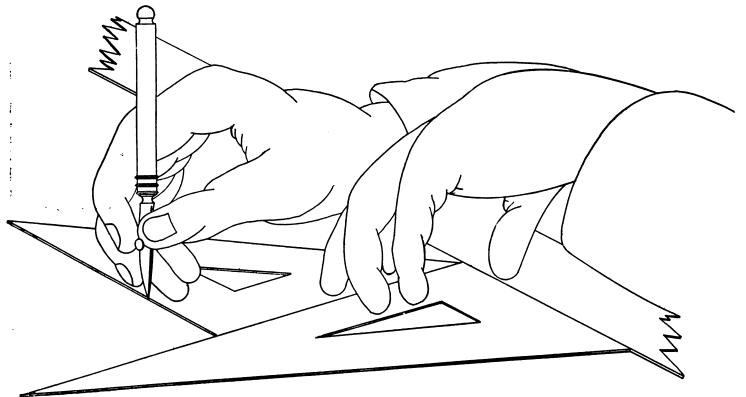


Fig. 236.

"Inking In" Drawings.

When a drawing is completely finished in penciling, it should next be "inked in" for preservation.

Care should be used that the pen may be perfectly clean; the pen should be held nearly vertical, leaning just enough to prevent it from catching on the paper; the pen should be held between the thumb and first and second fingers, the knuckles being bent, so that it may be at right angles with the length of the hand.

The ink should be rubbed up fresh whenever it is about to be used, for it is better to waste a little time in preparing ink slowly than to be at a continual trouble with pens, which will occur if the ink is ground too rapidly or on a rough surface.

To test ink, a few lines can be drawn on the

margin of a sheet, noting the shade, how the ink flows from the pen, and whether the lines are sharp. After the lines have dried, cross them with a wet brush; if they wash readily, the ink is too soft; if they resist the water for a time and then wash tardily, the ink is good.

Care must be exercised not to overload the pen with ink, and, like the pencil, the pen should always be moved from left to right and from the bottom to the top of the board. When inking, both 'nibs" of the pen point must rest evenly on the paper and the pen be pressed only lightly against the T-square. Never ink any portion of a drawing until the penciling is complete



In inking long, fine lines it is well to go over each line twice, without moving the T-square, trying not to widen the line on the second passage; also see that the pen contains ink enough to finish a line, as it is difficult to continue with the same width of line after re-filling.

To produce finished drawings, it is necessary that no portion should be erased, otherwise the color applied will be unequal in tone; thus, when highly finished mechanical drawings are required, it is usual to draw an original and to copy it. Where sufficient time cannot be given to draw and copy, a very good way is to take the surface off the paper with fine sand-paper before commencing the drawing; if this be done, the color will flow equally over any erasure it may be necessary to make afterwards.

The rules of procedure in drawing the lines in "inking" are, I, ink in the small circles and curves; 2, ink in the larger circles and curves; 3, then all

the horizontal lines, beginning at the top of the drawing and working downward; 4, next ink in all the vertical lines, commencing at the left and moving back to the right; 5, draw in the oblique lines; 6, all the center lines and dimension and reference lines. The fig uring and lettering should be always done with India ink, thoroughly black; the last lines to be drawn are the section lines. The reason why irregular curves and arcs of circles are inked in first is, that it is easier to draw a straight line up to a curve than to take a curve up to a straight line.

In practice, the flat side of the drawing-pen is laid against the tee-square or ruler; the taper of the blade of the pen is sufficient to throw the point enough away from the edge to prevent blotting; the pen is drawn from left to right and from the bottom to the top of the board.

This is shown in fig. 237, intended to represent "short work" with the drawing pen. The wrist is shown resting upon the blade of the square.



In a similar figure, 238, the position of the hand holding the pen indicates the best relative posture for inking long lines. In one of these illustrations the work is executed principally by the wrist—in the other by the arms and fingers working together.

The pen should be held with even pressure against the straight-edge or curve. If the pressure varies, the blades will spring and the width of the line will change. The blades should be of such length that both will bear equally upon the paper when the pen is inclined slightly, so as to bring the inner blade near the straight-edge; the angle of the pen should not be changed while drawing any line.

When the inking is finished, the whole drawing may be cleaned by rubbing it with bread which is not greasy or so fresh as to stick to the paper. If the paper is much soiled it may be necessary to use an eraser. A soft pencil eraser should be used and great care taken that the ink lines are not lightened and broken by it.

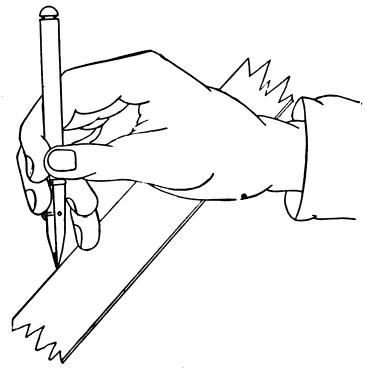



Fig. 237.



To avoid the necessity of using an eraser upon a finished drawing, instruments and paper must be kept free from dust and dirt. The triangles and T-square should be cleaned often, by rubbing them vigorously upon rough, clean paper.

Pounce is a powder used to prevent blotting in rewriting over erasures; it is held in a bag or small box with a perforated lid for convenience in sprinkling on paper; when used it should be distributed evenly with a piece of chamois, and the surplus or loose particles removed before applying the ink.

A drawing is made to be read, and the skill in inking, as in "free-hand" and in penciling, does not consist so much in the fineness of the lines as in their clearness.

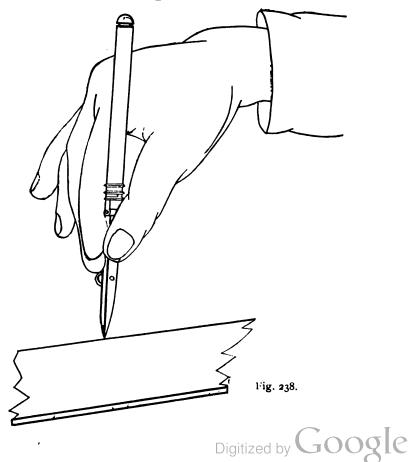

Lettering Drawings.

Lettering is an important part of making drawings, the object aimed at being to identify any portion by reference letter or letters; thus in fig. 239 the line

A C describes the line extending from



Fig. 239.

Any information which cannot be expressed in the drawing is always expressed by lettering, and it is desirable to confine the lettering of drawings to one or two standard alphabets that are plain and distinct, and the principles of which are easily acquired. These conditions are fulfilled in the Gothic fonts shown on page 173.

Both letters and figures must be carefully made and of uniform proportion; it is well to "lay out"

these by regular measurement before permanently inking them. Letters should not be less than one-eighth of an inch in height and penciled carefully before inking.


On page 173 are printed two forms of numerals and letters of the alphabet; it is recommended that these be used both for practice in free-hand and for regular office work.

For easy reference, letters should not be crowded nor allowed to interfere with one another; they should be drawn neatly, avoiding all lines of the drawing; plain letters are always used on mechanical drawings, whether for title, scale, reference, etc.



Arrow-heads, figures and letters should be in black, and made with a writing pen. A pen with a ball point is preferable, giving an equal thickness of line, no matter in which direction the stroke is made.

location, to draw, with a round-pointed pencil, two horizontal lines just the height the letters are to be; the letters are also best made with careful use of the instruments, rather than free-hand.

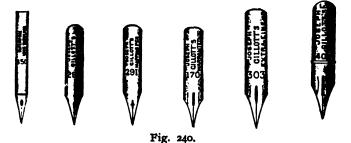

Neat, well-lettered drawings go far towards establishing a high standing for the aspiring draughtsman. All lettering should be done free-hand, first with the pencil, sharpened to a fine round point, and afterwards written in ink. For this purpose common writing pens are best to be used; fig. 240 represents the several numbers of the approved Gillott's pens adapted to this purpose.

In lettering, it is well, for a guide for size and

In order to letter systematically, it is a good plan to start with the middle letter of the inscription and work in both directions; making too prominent letters should be avoided, plain and distinct letters being most desirable.

Finally, with an ordinary writing pen, trace over the penciling in ink; the pencil guide lines being erased after the letters are inked in completes the operation.



Digitized by Google

An important matter in connection with lettering a drawing is the location of the letters; these should be so placed as not to interfere with the lines of the drawing and should clearly point out the part intended to be described. When single letters are used, they should be inked in before the shade or section lines are drawn.


Fig. 241 is an example introduced to show the method of lettering a descriptive mechanical drawing.

The figure shows a "blow-off valve" of approved design drawn in section; the letters designate the several parts; the reading to accompany the lettering is as follows:

A—Inlet communicating with annular passage (C) to admit steam, which blows off scale and sediment from seat (E) before disc (L) comes in contact with same.

- **B**—Plug to permit passage of rod to clean out blow-off pipe.
- **C**—Annular steam passage around casing (D) and communicating with inlet (A).
- D—Removable bronze casing, in which plug (L) fits snugly.
- E—Removable bronze seat ring, which also holds casing (D) in place.
- J—Slot in casing (D) arranged to discharge sheet of steam from C, which, blowing across seat (E), cleans off scale and sediment before contact with disc (L).
- **K**—Non-rotating washer to prevent loosening of locknut (H) when opening valve.
- L—Reversible disc, having two Babbitt-metal seating faces (F) (F).



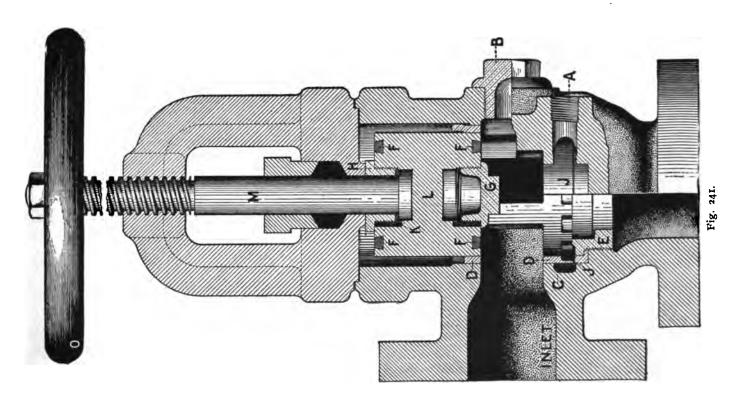



Dimensioning Drawings.


To "dimension" working drawings is to place measurements upon the parts represented, to enable the workman to proceed without measuring the drawing itself.

These dimensions should be placed so as not to interfere with nor crowd the lines of the drawing, nor yet interfere with one another.

Arrow-heads are used at the extreme points of measurement, the figures are generally inserted midway between the arrows; a dot and dash line reaches from the figure to the arrow-heads, as shown below.

When the dimension is short these lines are omitted and the dimension is placed outside the drawing, thus and connected by a curved line; at other times it is found needful to place arrow-heads outside the drawing and the measurement inside.

When the dimension is long and narrow it is usual to carry the dimensions under the drawing by dotted and dash lines, as shown below.

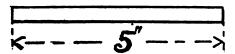



Arrow-heads and figures should be drawn free-hand with a common writing pen.

Usually dimensions are given in inches, up to 24 inches, as it is found less confusing: for instance, if written 1' 1" it may be mistaken for 11"; if written 13" no mistake could be made.


Again, I'O" may be mistaken for 10"; if written 12" it would not; in addition to being more distinct, it occupies less space on the drawing. In large measurements there is more room for the figures, and, therefore, they can be spaced further apart—in feet and inches.

All figures should be made of a fairly large size. Vertical dimensions should read from the right hand, thus, as shown:

Measurements of importance, such as the diameter of a circle, the pitch or distance apart of rivets and bolts, etc., should be marked in figures on the drawing. When rough or unfinished work is mixed with

machined or finished portions, it is usual to mark F, or "fin.," after the latter dimension.

In practice, at times, instead of dimensions reference letters are used, thus:

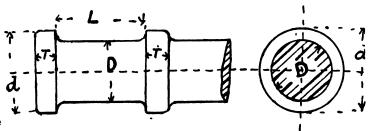

D-diam. of shaft, 21 inches.

L-length of bearing, 3\frac{3}{4} inches.

T-tlickness of collar, $\frac{7}{8}$ inch.

D-diam. of collar, 3½ inches.

Generally it is preferable to give the diameters of turned and bored work on a section, instead of an end drawn separately; confusion is sometimes caused by a number of radial dimensions. Fig. 242 and fig. 243 are introduced to show the principal measurements required in practical work, and the usual way in which such dimensions are marked when ordering parts of machinery.

Fig. 242 is a pedestal, or metal frame; three views are shown, the center figure being an elevation, the lower figure is the plan of the base, the upper figure is a view of the top, on which is bolted the bearing block, it being on the outside of the center figure. The essential measurements are marked by letters. H is the vertical height from base to the seat of bearing block: L being the length, and W the width of the base; P is the length between checks, and B the width of seat for bearing block; C is the distance from center to center of the holding down bolt holes, and T is the depth of the holes in the base; K is the distance from center to center of the bolt holes in the top for bearing block.

Fig. 243 is a hanger, or metal bracket, and shows the center figure or elevation, the plan of the top and the plan of the seat for bearing block, which is bolted on the interior of the center figure. H is the vertical distance from the top to the seat for bearing block; the other measurements required are marked by letters similar to figure 242.

Now, one of the important matters in connection with dimensioning a drawing is the location of the figures. One rule, whose utility cannot be gainsaid, is that they should be so located that they can be altered or erased without damage to the lines of the drawing, as changes may be necessitated either by original errors in writing down the figures or by changes in the design being found desirable during the construction of the machine.



Shading Drawings.

To produce an effect, drawings are shaded; that is, shadow lines about twice the width of the regular line are drawn according to a recognized rule, which always represents the same peculiarity of form in the same way.

In working drawings light lines only are permitted; shade lines are wider than the working lines, and in reading scale measurements the extra thickness of line would make a difference.

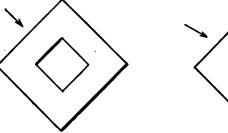


Fig. 245.

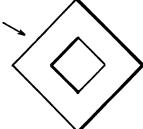


Fig. 246.

180

Instead of representing the shadow as it is really cast by the object, the edges which cast the shadow are determined, and all the views are treated as if the light came from behind and from the left, downwards, at an angle of 45° to the horizontal line, as shown by the arrows in figs. 245 to 248.

The lower and right-hand outlines of projecting parts will cast shadows, and the student should make them of extra width.

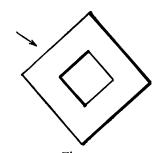


Fig. 247.

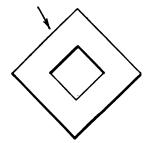


Fig. 248.



Fig. 249: In shading curves, divide the center line as before (see page 146) and describe circles from center, D; these lines are not to be shaded in penciling, but when inking. The figures represent two rings, A and C, and spaces, B and D. The outside of a surface is shaded according to circle 1, and the inside surface according to circle 2. This will give the desired shading, but it makes a drawing incorrect, and therefore shading is not used in working drawings.

This shading is accomplished by inking the circle first with regular width of line; then with the same radius remove the point of compasses from the *truc center*, placing it outside, according to the desired position of the shaded line, and describe an arc of a circle.

In fig. 250 divide center line as before; with the 45° triangle or set square, draw through the center the diagonals shown by dotted lines; and through the points A, B, C, etc., draw the perpendiculars, cutting the diagonals; from the points of intersection draw the horizontal lines, completing the squares.


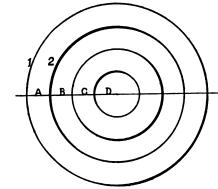


Fig. 249.

Now, take a radius of half an inch, and in the corner of each square draw with the bow-pencil a circular arc meeting the pencil lines exactly; with the bow-pen ink in the arcs first, then ink

carefully the lines joining with the arcs; all lines must be of the same width; put in the shade on arcs and lines as in fig. 249; and, finally, erase the pencil lines at corners, etc.

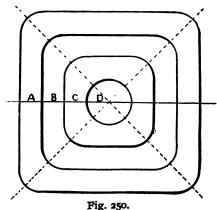


Section-Lining.

Cross-hatching has been defined in the "preliminary definitions" to drawing; this term represents the practice of drawing diagonal lines representing the interior of an object, shown as a piece cut in half or when a piece is broken away. This is done to make more of the parts show, or to exhibit more clearly the nature of the materials; hence section lining and cross-

hatching tell the same thing, i. c., the drawing of diagonal lines, usually at an angle of 45° , to show that the object is broken away and the interior designed to be represented.

Figs. 251 to 258, inclusive, show the section lining and cross-hatching by which it is customary to represent the various materials entering into a construction.

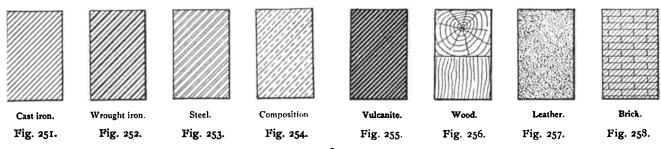

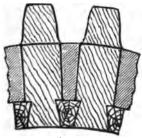


Fig. 259.

In fig. 259 is outlined a representation of a section of a cog-wheel; section I being the wood cogs; 2, the iron wheel, and 3 the wedges at the root of the gear. It would be impossible to convey the same ideas by ordinary plan

or elevation drawing; all the objects on the same page are more clearly represented by the use of section lines or cross-hatching.

Sectioning is executed by drawing a series of parallel lines about $\frac{8}{37}$ inches apart. Lay the 45° triangle or the upper edge of the T-square and draw the topmost line of the sectioning. Then slide the triangle along the T-square for each successive line. The sectioning should be inked in without previous penciling and the lines should be finer than the lines of the general drawing.

Various devices are in use for mechanically equal-

izing the distances in section lining, but the trained eye is the most practical method. When two abutting pieces are sectioned, the section lining on one piece slants in an opposite direction to that on the other.

To draw an object to be sectioned on both sides of its center line, only one side is sectioned, while the other side is drawn in full.

Sections are necessary in nearly all machine drawings; they are usually taken horizontally or vertically, but they may be taken in any direction; the position of a section should be shown by a line upon the object; this line is called the cutting plane.

In fig. 261 is shown the hub of a wheel, it is also a sample of work for practice.


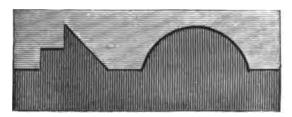


Fig. 260.

Fig. 260 shows the mode of representing two different materials in one plane, or a section may be represented by the darker portion, and the lighter shaded portion being a surface resting on the section.

Fig. 261 shows the section of a shaft surrounded by the surface of a wheel.

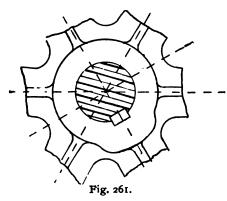

TINTS AND COLORS.

For special purposes of illustration drawings are made which must be tinted. In such cases the paper must be expanded and stretched evenly all over its surface; otherwise when the moist tint is applied the paper will wrinkle and get out of shape; to do this cut the paper at least half an inch less in size than the drawing board; lay the paper face down, turn up a margin or edge of about three-fourths of an inch all round, then dampen the paper with a sponge and clean water; allow it to soak for a few minutes until it is evenly dampened or moistened all over, turn the paper upside down (face up).

Apply strong paste to the under side of the margin all round; rub down, on the drawing-board, working from the center of the board outwards so as to exclude the air and prevent creases or furrows. The board is then inclined and left to dry slowly; make sure that the paper is all well pasted and every part of the edges attached to the board.

If tracings are required to be tinted or shaded, the color may be applied before the tracing is cut off, or what is more usual, the color may be applied on the back of the tracing; then there is no liability to wash out the lines.



Mechanical drawings are seldom tinted, but are mainly produced in India ink. Where, however, a fine effect is desired, working drawings are colored, so as to show at a glance the material of which the different parts are to be made.

The colors required are few but should be of the best quality. Besides India ink the following water-colors are generally used:

1, Neutral-tint. 2, Prussian Blue. 3, Chrome Yellow. 4, Gamboge. 5, Raw Sienna. 6, Carmine. 7, Vermillion. 8, Venetian Red. 9, Sepia. 10, Indigo. These come in hard cakes.

Certain colors and tints represent different metals and materials as follows:

Wrought Iron-Prussian Blue.

Steel—Carmine and Prussian Blue, mixed to give a purple shade.

Steel Casting—Same as the above darkened by Venetian Red.

Cast-Iron—Neutral Tint made of India Ink, indigo, mixed with a little carmine.

Brass-Gamboge or Chrome Yellow.

Babbitt--Emerald Green; sometimes light mixture of India Ink.

Copper—Purple Lake.

It is sometimes found necessary to prepare a highly finished and shaded drawing of the work in hand. Such elaborations, in fact, are much admired by the uninitiated, although the complete shading of the drawing is no criterion as to the scientific value of the machine. An illustration of this is told in the note.

NOTE.—A consulting engineer had to lay before a board of directors plans of horizontal engines for their consideration. One of these drawings was of a very superior machine, but being only depicted lineally was at once rejected by them, for a highly finished representation of a very inferior apparatus. The engineer, wishing to induce the board to decide for the best, suggested that the matter should be postponed to a future day, and in the meantime had the drawing of the superior machine highly colored and finished. At the next meeting the directors unanimously decided that this was the very one which they preferred and had chosen.



Reproducing Drawings.

When once finished, one or more copies of drawings are frequently required; these are produced, 1, by blue printing, as described before; 2, by tracing. A tracing is a mechanical copy of a design or drawing, made by reproducing its lines as seen through a transparent medium—as tracing-cloth or tracing-paper.

Tracing-cloth is a thin linen fabric, coated with size; this is called *tracing-lines*; tracing-paper is so prepared as to be transparent, so that it will receive marks either in pencil or with pen and ink.

Tracing-cloth must be fastened to the board, over the drawing, by pins or other tacks; moisture or dampness should be carefully avoided and the drawing done on the smooth side of the cloth.

When tracing cloth will not take ink readily a small quantity of pounce may be applied to the sur-

face of the cloth and distributed evenly with a piece of cotton waste, chamois, or similar material, but the pounce should be thoroughly removed—by washing—before applying the ink.

In making tracings the same order is followed as described under the section "Inking"—to repeat: I, ink in the small circles and curves; 2, ink in the larger circles and curves; 3, then all the horizontal lines, beginning at the top of the drawing and working downward; 4, next ink in all the vertical lines, commencing at the left and moving back to the right; 5, draw in the oblique lines; 6, all the center lines red (carmine), and dimension and reference lines in blue (Prussian blue) or vice versa. The figuring and lettering should always be done with India ink, thoroughly black.



BLUE PRINTING.

Copics of drawings or parts representing details and measurements are frequently needed for the office, pattern shop, machine and blacksmith shop, etc. These copies are best made by printing on sensitized or specially prepared paper, from tracings drawn on transparent cloth or paper, as hereabove described. The original design may be guarded with the utmost care for long preservation, but the blue prints, so called, are for ready reference and use without much regard to the length of time they are to be in existence.

The usual practice is to carefully trace from the drawing on transparent cloth or paper an exact reproduction of it, filling in all detail lettering and sizes or figured dimensions.

This tracing is fixed in a frame similar to a picture frame, with the side on which the drawing is made next to the glass: I, place the sensitized side of the paper (which has been prepared previously) against the back of the tracing; 2, fix soft padding against the

back of the paper and fasten it up so that both paper and tracing are compressed firmly against the glass, permitting no creases or air spaces between them.

This should be done in a darkened room; 3, expose for three to six minutes, according to the intensity of the sun; 4, take the sensitized paper out of the



Fig. 262.

frame and quickly wash well in clean running cool water, and the drawing will appear in white lines on blue ground; 5, hang the print up by one edge so that the water will run off and the print will soon dry and be ready for use.

TEST-PIECES.

To make good blueprints, being guided only by the appearance of the exposed edge of sensitized paper, requires considerable experience. Very often, especially on a cloudy day, the edge looks just about right, but when taken out of the frame and given a rinsing, it is only to find that the print looks pale because it should have been allowed to remain exposed for a longer period.

Now simply take a small test-piece of the same paper (say about 4 inches square) and a piece of tracing cloth with several lines on its surface and lay these small pieces out at the same time the real print is being exposed, and cover these samples with a piece of glass about 4 inches square. As a general rule, we can find a place on top of the frame for the testing-piece, and by having a small dish of water at hand for testing the print by tearing off a

small bit and washing same to note its appearance, the novice can get just as good results as the experienced hand without danger of failure.

BLACK PROCESS COPYING.

This is accomplished by specially sensitized paper by which a fac-simile of the original drawing can be made; that is, black lines upon white ground. It also avoids the objection to the blue print paper of shaded drawings which show light and shade reversed.

The prints made by the process are said to be absolutely permanent and can be altered, added to or colored the same as original drawings.

The sensitized paper is sold ready for use, but it can be prepared by dissolving two ounces of citrate of iron and ammonium in eight ounces of soft water; keep in a dark bottle, also, one and one-third ounces of red prussiate of potash in eight ounces of water; keep in another dark bottle; when about to use mix an equal quantity of each in a cup and apply in a dark room with a soft brush or sponge to one side of white rag paper, similar to envelope paper, let it dry and put away in a dark place until required for use.





Digitized by Google

Drawing Office Rules.*

There are drawing offices where from ten to nearly one hundred people are busily employed in making new plans and sketches by the hundreds, and where thousands of completed drawings are filed for reference or for changes, as these are needed in the shop management.

To be introduced for the first time into such a company is a trial for the "new man" both of nerve and manners, and a test as well of skill; nothing helps more at such a time than an acquaintance with the rules and routine of the office, for the old saying holds good in a drawing office, of "doing in Rome as the Romans do." The author of this book has felt this strangeness in a new position and so adds the following model-rules for the guidance of the student when first entering a regular position in an office where many are employed and where success depends upon a systematic ordering of the work in hand.

SIZE OF DRAWINGS.

- 1. The standard size shall be 23 inches by 36 inches, subdivided into half, quarter and eighth sheets.
- 2. Full-size drawings shall be reserved, as far as possible, for general views and parts not capable of being shown on smaller sheets.
- 3. All shop detail shall, as far as possible, be shown on quarter and eighth sheets.

CHARACTER OF DRAWINGS.

4. Detail drawings shall, as far as possible, classify the different kinds of works, such as castings, forgings, shafts, levers, piping, etc. Different kinds of work shall not be shown on the same detail drawing.

*Note.—A. W. Robinson, M.E., Montreal, must have all credit for these admirable rules and regulations. They bring into a single focus the whole science and art of mechanical drawing.



- 5. All shop drawings liable to repetition shall be traced and blue-printed. All temporary details, requiring only one copy, may be made on sketch sheets and press copied.
- 6. A shop drawing is to be considered as an order or instruction to the shop, and not merely as a statement or illustration. For this purpose it must convey clearly and distinctly all the information necessary to make the article.
- 7. Every dimension necessary to the execution of the work is to be clearly stated by figures on the drawing, so that no measurements need to be taken in the shop by scale. All measurements to be given with reference to the base or starting point from which the work should be laid out, and also with reference to center lines.
- 8. All figured dimensions on drawings to be plain, round vertical figures, not less than one-eighth inch high, and formed by a line of uniform width and sufficiently heavy to insure printing well. No thin,

- sloping, or doubtful figures, or diagonal-barred fractions will be tolerated. All figured dimensions below two feet to be expressed in inches.
- 9. All center lines to be alternate dot and dash in fine black line. All dimension lines to be double dot and dash, with a central space for the figure, and of such strength as to show on blue-print more faintly than lines of drawing. Lines of drawing to be bold and clearly defined in proportion to the scale, and may be shade-lined by making the right-hand and bottom lines heavier. No ornamental shading or other "frills" allowed on shop drawings.
- 10. Every drawing, whether whole or half-sheet, shall have the title, date, scale and number of the sheet stamped in lower right-hand corner, and the quarter and eighth sheets printed on top.
- 11. The name of the drawing, as given in the title, is invariably to consist of two divisions in one line separated by a hyphen. The first division is to state the general name of the thing or machine, and



the second name is to clearly designate the part or parts represented (or if a general view should so state). The wording of titles should be submitted to the chief engineer or head draughtsman for approval.

- 12. Each drawing shall bear the name of the draughtsman and examiner, the surname being used without initials.
- 13. Drawings of piping details shall be made in diagram form, using standard symbols.
- 14. All detail parts for standard or repetition work shall be shown unassembled as far as possible.

DRAWING SYMBOLS.

- 15. Detail shop drawings should state:
- (a) The pattern number of every casting in plain figures of larger size than the dimension figures.
- (b) The material of which the parts are made, using symbols as follows: C.I.—Cast iron. W.I.—Wrought iron. M.S.—Machinery steel. H.S.—Hammered steel. Bs.—Brass. Bbt.—Babbit. Bz.—Bronze. C.R.S.—Cold rolled steel.

Other materials write full name.

(c) Finished surfaces will be indicated by "f" written on the line or surface to be finished. When not so marked it is understood that the part is to be left black or rough. In cases where finish might be presumed but not required, follow the figured dimensions by the word "cast," if a casting, and "rough," if a forging.

STANDARDS.

- 16. The following standards shall be strictly adhered to as given in the tables noted:
- (I.) Table of standard diameters of shafting and key seats.
 - (2.) Table of standard stock sizes of rounds.
 - (3.) Table of standard stock sizes of flat steel.
 - (4.) Table of standard clearance fits.
- (5.) Table of standard symbols for notation of riveting.
 - (6.) Table of standard symbols for pipe fittings.

Also such other standards as may be adopted from time to time.

NUMBERING OF DRAWINGS.

- 17. Drawers and filing cases shall be numbered consecutively. Drawers shall contain 100 sheets each, and filing cases 200 sheets each, and to be fully indexed. Drawings shall be numbered by a number indicating both drawer number and serial number in the drawer—thus, 7,604 is the fourth sheet in drawer 76, etc.
- 18. Drawing numbers shall be checked off the index as required, and the index posted up in uniform handwriting by the clerk.
- 19. Standard size drawings shall be kept in drawers and quarter and eighth sheets in filing cases. All drawings shall be indexed by an index sheet kept in each drawer or case.

CHECKING.

20. All drawings must be approved before being traced. When tracing is completed it will be given immediately to the chief draughtsman, who will have a preliminary print made and carefully checked, before being used.

PATTERNS.

- 21. All patterns shall bear the number of the drawing on which they are first detailed, followed by a serial letter, according to the number of patterns on the drawing.
- 22. Standard patterns used repeatedly and liable to be ordered from in repairs must not be changed. Other patterns may only be changed when absolutely necessary and by order. When so changed they will bear the original number and letter, followed by A for the first change, B for the second change, and so on thus: 4860 AB is the second change in pattern 4860 A.

SKETCH BOOKS.

23. Each draughtsman will be supplied with a sketch book by the company, in which he shall make all his notes, calculations and data referring to his work, and under no circumstances shall notes of value be made on loose sheets. Each entry should invariably be commenced with the subject and date, and full



notes made of data on which the calculations were based, and the results obtained clearly stated. These books are to remain the property of the company.

IN GENERAL.

- 24. Changes in drawings, sketches or order lists issued to the shop shall only be made when authorized by the chief engineer, or, in his absence, by the chief draughtsman, and when so authorized shall be made by the order clerk.
- 25. The names of all similar parts in order lists and drawings are to be uniform.
- 26. Tracings must be kept in safe, for blue-printing purposes only. Office copies of blue-prints must be used for references.
- 27. No drawing, print or photograph shall be taken from office without permission.

NUMBERING WORKING DRAWINGS.

There are a great many different systems used in indexing drawings, most of which have some good


points, but very few are sufficiently elastic to cover a wide field. A plan based upon the decimal system of notation is very simple, and, as there is no practical limit to the number of subdivisions, it can be expanded indefinitely. Following are the main outline features of the system as adapted to the needs of drawing offices belonging to large works.

The main division numbers, 000, 100, 200, 300, etc., are used respectively for all plans and general sheets referring to the division concerned. 100 includes general plans covering more than one department, and all small-scale plans with cross references to departments covered.

The class or tens divisions contain general drawings of the subdivisions, the subclasses or units divisions being limited to details only. Further subdivisions would probably be necessary in some cases. A card index with cross references and written by someone who knew what to do is an essential part of the system.

Digitized by Google



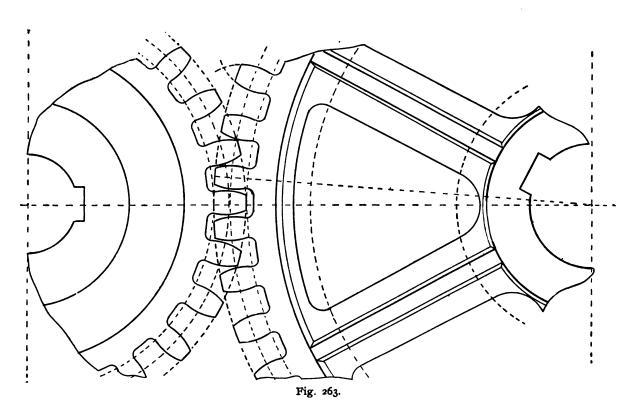

Gearing.

Under this heading the author has grouped some information relating to a subject of wide interest and one sure to interest a student of mechanical drawing.

The diagrams are intended for exercises in drawing, i.e., to be redrawn as parts of practice; the text is to be studied not only for the good to be gained from the study of gearing, but as an example of the way in which written or printed descriptions are necessary to explain a subject illustrated by drawings.

A gear is primarily a toothed wheel; gearing is a train of toothed wheels for transmitting motions; there are two chief sorts of toothed gearing, viz., spur gearing and bevel gearing.

A spur wheel has teeth around the edge pointing to the center; commencing at the center, a spur wheel may be said to consist of a hole, square, octagonal or round, for its axle or shaft; a hub; the web, body or arms; a rim, and the teeth; see fig. 263.

A spur wheel has teeth on its circumference which run parallel to its shaft; wheels as shown in fig. 271 are termed helical wheels; these are similar to spur wheels except their teeth are arranged upon different angles to the shaft.

A bevel is a slant or inclination of a surface from a right line, hence a bevel wheel is one whose teeth stand beveling or at an oblique angle to the shaft, or towards the center; see fig. 267.

Miter wheels are bevel wheels of the same size, working at right angles with one another; see fig. 268.

The diameter of both spur and bevel wheels is measured and calculated neither from the outside nor from the bottom of the teeth, but on the pitch circle. When we speak of the diameter of a spur or bevel



wheel, we mean the diameter of the pitch circle, without any reference to the form of tooth.

The addendum circle of a toothed wheel is as shown in illustration, fig. 264; addendum means "something added," and, as shown in the figure, it is the part added beyond the pitch "line" or circle.

The pitch line is the most important one in gearing; the "pitch line" or "pitch circle" is supposed to be the working circle. This is shown in P—P in fig. 274.

The periphery of a wheel is the extreme circumference, as N in fig. 274.

All parts of gear-wheels consist of portions, to which have been given generally accepted names. Fig. 264 shows the "addendum circle" and the "pitch line" as marked. The teeth and rim are shown in white, and the other portions are indicated by the names.

The circular pitch line, as opposed to the diametral pitch, is the same as the pitch circle. It is a line which bisects all the teeth of a toothed wheel.

The rolling circle is the same as the circular pitch line.

Diametral means pertaining to a diameter or the length of a diameter; hence a diametral pitch is a system of measures or enumeration based upon the

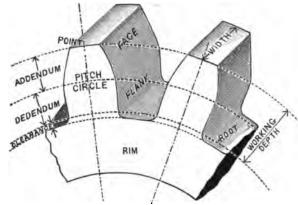


Fig. 264.

diameter instead of the circular pitch line; it is used very generally in spacing for fine tooth gear. Wheels of this description usually have their teeth cut in a gear-cutting machine, *i. e.*, medium and fine tooth gears.



A cog wheel is the general name for any wheel which has a number of cogs placed around its circumference.

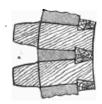


Fig. 265.

When the teeth of a wheel are made of the same material and formed of the same piece as the body of the wheel, they are called *teeth*; when they are made of wood or some other material and fixed to the circumference of the wheel, they

are called cogs; see fig. 265.

A pinion is a small wheel. When two toothed wheels act upon one another, the smaller is generally called the pinion. The terms trundle and lantern are applied to small wheels having cylindrical bars instead of teeth. The teeth in pinions are sometimes termed leaves; in a trundle, staves. See fig. 273.

The wheel which acts is called a *leader* or *driver*; and the wheel which is acted upon by the former is

called a follower or the driven. When a screw or worm revolves in the teeth of a wheel, the latter is termed a worm wheel or worm gear; see fig. 270. When a pinion acts with a rack having teeth, we speak of rack and pinion. When the teeth are on the inside of the rim, and not on the periphery, the wheel is termed an internal gear; see fig. 272.

Two wheels acting upon one another in the same plane are called *spur gear*; the teeth are parallel with the axis. When wheels act at an angle, they are called *bevel gear*.

Friction gear-wheels are those which communicate motion one to the other by the simple contact of their surfaces.

In frictional gearing the wheels are toothless and one wheel drives the other by means of the friction between the two surfaces which are pressed together.

Grooved friction wheels are used to give greater cohesion than can be obtained by the plain surface.




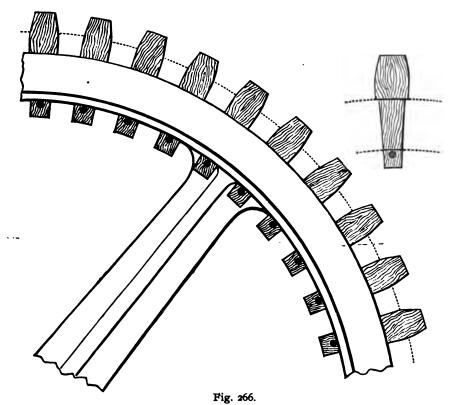


Fig. 263 shows a pair of spur-wheels in gear. The dotted circles which meet are the rolling circles, called the "pitch line" or "pitch circle."


A spur mortise wheel is similarly shown in fig. 266; it is very like in appearance to a spur wheel; it differs essentially in that the teeth are separate cogs, fixed in singly to the rim; see also fig. 265, page 201.

NOTE.—The teeth of spur wheels cast from a pattern must of necessity be larger at one side than at the other, because the teeth must have taper to permit the extraction of the pattern from the mould; therefore, in fixing wheels to gear, the large side of one should meet the smaller side of the other; should the two large sides come together the teeth will meet only at the large side, and the teeth will probably break away from the excessive strain on that point.



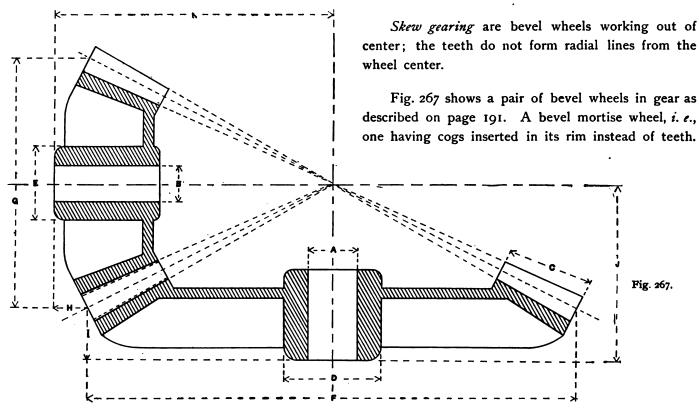

A bevel wheel and pinion must be made to suit one another by both having teeth forming together an angle of 90°, therefore they are pairs, or proportioned

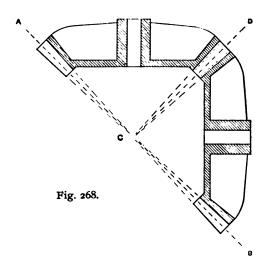

in the number of teeth one to the other. Any other proportion used would not exactly gear and would be termed a "bastard" gear.

Fig. 268 represents a pair of miter wheels in gear; it will be noted that the shafts, when connected, will be at right angles to each other, the wheels being in all particulars of the same dimensions; the figure answers the purpose of a much longer description, if given in words.

A miter-wheel can easily be known by putting a square upon the face of the teeth, which are always at an angle of 45° with one another, irrespective of size.

A miter-wheel is a particular kind of bevel-wheel, the bevel being limited to an angle of 45° in each wheel.

The curve of the teeth in bevel-gears, when correctly formed, changes constantly from one end of the tooth to the other, therefore bevel-gears whose teeth are produced with a forced cutter are not theoretically correct.



Fig. 269 of one are on a circle and represents a on the rack are made on rack and pina straight line. ion: the teeth A flange or addition to the end of a tooth and in this form of gear are shaped the rim connecting them similarly to together is used to those in the spur strengthen the teeth. This extends from the root to wheel, shown on page 198, with pitch line when the wheel the difference and pinion are both that the teeth flanged: if only one is flanged it extends from the root to the addendum. Fig. 269.

Hawkins' Mechanical Drawing.


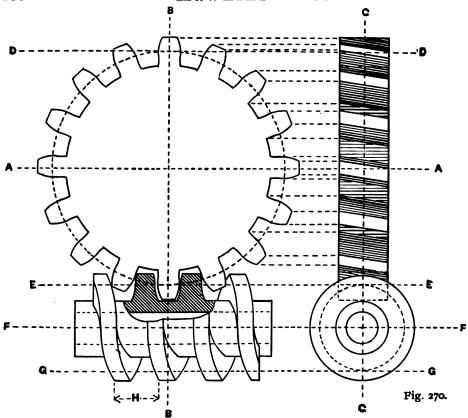


Fig. 270 illustrates a worm and a worm wheel, sometimes called screw gears. This is a slow but powerful method of transmitting power, one revolution of the worm only moving the wheel the distance of one tooth and space.

A worm gear is a spur wheel with teeth at an angle to the axis, so as to work with a worm which is a screw, or has teeth shaped in the form of a spiral wound round its circumference; the screw or worm is called an endless screw, because it never comes to a stopping place in the circumference of the wheel.



Hawkins' Mechanical Drawing.

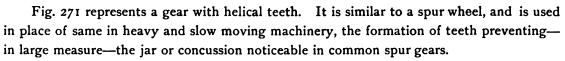

In recent years the speed at which gearing is run has been greatly increased. A striking instance is that of a pair of cast-iron helical wheels, 6 ft. 3 in. diameter, 12 in.

wide, making 220 revolutions per minute, the speed of the pitch line being 4,319 feet per minute; these wheels are running continuously and with little noise. There is also a *cut* gear in a mill in Massachusetts, 30 feet in diameter, and the speed of pitch line is 4,670 feet per minute.



Fig. 272.

An internal or annular gear wheel is one in which the faces of the teeth are within and the flank without the pitch circle, hence the pinion operates within the wheel. See fig. 272.

In internal geared wheels there is almost an entire absence of friction and consequent wear of the teeth, as compared to ordinary spur gearing.



Fig. 273 shows a *crown-wheel* which has pin teeth which are fixed by one end only, on its side face and gear into a trundle wheel.

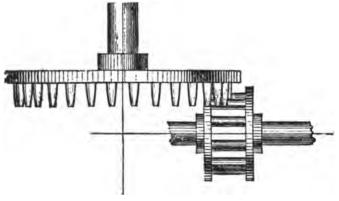


Fig. 273.

A trundle wheel has no teeth, properly speaking. Instead of teeth, it has pins as shown on illustration, fig. 273, arranged like the rungs of a ladder between two walls. See page 201.

Trains of Gears.—When two wheels mesh—that is, engage with each other—as in fig. 263, one axle revolves in the opposite direction to the other; but when internal gears mesh as shown in fig. 272, the shafts revolve in the same direction; three or more gears running together are often called a train of gears.

Maximum speed of gears under favorable conditions for safety is comparatively—

Ordinary cast-iron wheels,		1,800 feet per minute.	
Helical "	"	2,400	"
Mortise wood cog	"	2,400	"
Ordinary cast-steel	"	2,600	"
Helical "	"	3,000	44
Cast-iron machine cut "		3,000	"

It is not, however, advisable to run gears at their maximum speeds, as great noise and vibration are caused.



Designing Gears.

This section is introduced into the work for a double purpose; I, as an exercise in drawing; 2, as a study in accurate measurements. It is a sample of the work that the advanced student in mechanical drawing will be confronted with as he puts in practice the theory of the art of drawing.

Some sample rules are given in the following pages to aid in calculations relating to gears, and still others are given under the section "Useful Rules and Tables" at the end of the volume; these are to be carefully studied.

To accurately divide the pitch circle of a gear wheel by hand requires both patience and skill. On the accuracy of spacing lies the essential requisite of a good gear wheel.

The drawing in plate, fig. 274, illustrates a pair of spur wheels, shown in gear, the office instructions for which being:

"Required, a detail plan of a pair of spur wheels; dimensions: wheel, 76 teeth, 3½ inches pitch, 7-inch eye, 6 arms; pinion, 19 teeth; scale, 1½ inches— 1 foot."

The drawing, as illustrated, is the result of the above instructions, all pencil lines being removed, and this result is worked out as follows:

76 teeth $\times 3\frac{1}{2}$ inches, pitch = 266 inches in circum. = 7 ft. .0 $\frac{1}{16}$ in. diam. = 3 ft. $6\frac{1}{2}$ in. radius; with this measurement as represented on scale, draw line PP on drawing. This is called the pitch line.

Draw next diameter line, produce or extend this diameter line for pinion, and with radius of $10\frac{13}{3}$ (19 teeth $\times 3\frac{1}{3}$) from pitch line of wheel, draw pitch line of pinion.

Take any point in this pitch line of wheel, mark off $3\frac{1}{2}$ inches as represented on scale, mark this around the pitch line, it will be the center of each of the 76 teeth; then the breadth of thickness of each tooth (— pitch \times 0.475) must be marked from these centers, then mark from PL, length of tooth to point (— pitch \times 0.35) and PL to root (— pitch \times 0.4), draw circles for outside of teeth N and root of tooth O; now with compass set to the pitch $(3\frac{1}{2})$ of the wheel, draw the outer portion from pitch line of tooth.

The radius will center in the pitch line of next tooth where thickness of tooth has been marked; after finishing outer portion of both sides of teeth, set the compass from *center* of tooth with radius to the thickness marked on pitch line and draw the portion of tooth from pitch line to root.

Now mark off with dividers and draw thickness of rim (= pitch \times 0.5), divide this line into six parts, draw radii for centers of arms; draw the bore hole 7" and the thickness of metal for hub same as pitch.


On radii lines of arms, draw the breadth of arm at rim (— pitch and thickness of tooth), increase in breadth approaching the center (1" per foot), draw the thickness of feather of arm (— pitch \times 0.35); draw web on inside of rim (— pitch \times 0.375); fill in arcs for the joining of arms in rim and hub (radii — pitch \times 0.8) and feather to rim and hub (radii — pitch \times 0.37).

Proceed in similar manner, completing the teeth of pinion, and when pencil lines are all in, ink the drawing, erasing all needless lines.

PP shows the pitch line; B, thickness of tooth; c, breadth of space; A, the pitch; E, clearance at root; N, the addendum of tooth; O, the root of tooth; H, length of tooth from pitch line to point; I, length of tooth pitch line to root; G, whole length of tooth; F, thickness of rim; I, web or feather on rim; I, breadth of arm; I, thickness of feather: I, hub, or thickness round the eye.

NOTE.—It must be remembered that no fixed standard has ever been agreed upon for these proportions, and workshops differ considerably in practice.



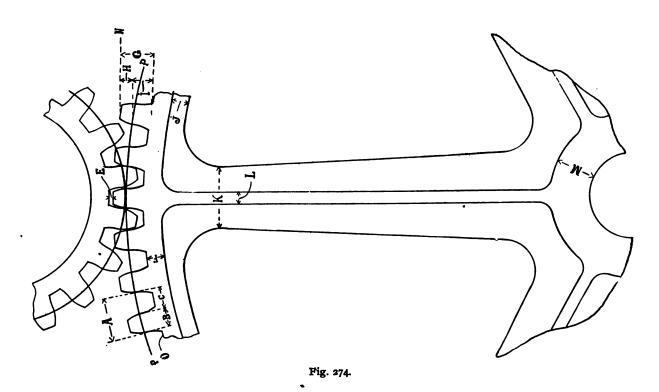

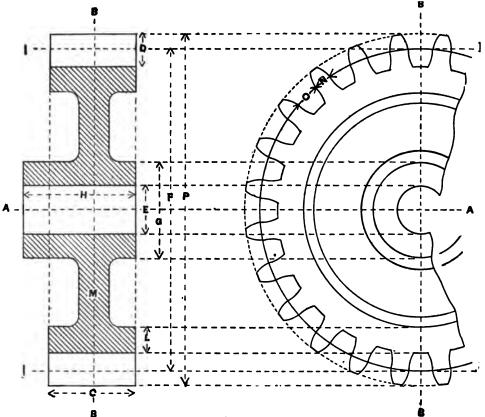


Fig. 275.

The number of teeth, their proportions, pitch and diameter of pitch circle are frequently determined on the "Manchester" principle. This system originated in Manchester (Eng.), and is now generally used in the United States for determining diameters and number of teeth, which, of course, regulate speeds. The principle is not applicable to large wheels, but is limited in its application to small wheels, or wheels having "fine pitch," as will be seen in the following explanation, which is introduced as very useful and indispensable knowledge for the acquisition of the student in mechanical drawing.

The "pitch" of teeth has already been stated to be the distance from center of one tooth to the center of another on the "pitch line," measured on the chord of



the arc. In determining the number of teeth or pitch of wheels on this principle, the pitch is reckoned on the diameter of the wheel, in place of the circumference, and distinguished as wheels of "4 pitch," "6 pitch," "8 pitch," etc. In other words, this means that there are are four, six, or eight teeth in the circumference of the wheel for every inch of diameter.

In designing gears to transmit power the stress on a tooth is calculated; it determines the breadth or width and also the thickness of the tooth on pitch line; the space between the teeth is in proportion to the thickness of tooth, and the thickness of both combined (one tooth and one space), measured on the pitch line or circle, is the pitch of the wheel.

From the pitch all the proportions and measurements for the sizes and strength of the parts of the wheel are taken by rule, and a symmetrical form is produced.

In machine drawing the practice is to represent wheels by circles only; the teeth are never shown except on enlarged details and then only in very rare instances; the circles drawn are always the pitch lines or the rolling points of contact of the wheels.

The addendum circle is seldom if ever used in practical drawing. Should it be necessary to show it in an exceptional case, the circle would be represented by "dotted" line.

The shape of tooth and mode of constructing it, as practiced in drawing offices, differs from the true theoretical curve of the tooth, although very minutely.

In all calculations for the speed of toothed gears the estimates are based upon the pitch line, the latter standing in the same place as the circumference of a pulley.

To find the diameter of a gear-wheel multiply the number of teeth by the pitch, divide by 3.1416.

To find the pitch of a gear-wheel multiply the diameter by 3.1416 and divide by the number of teeth.

To find the number of teeth in a gear-wheel multiply the diameter by 3.1416 and divide by the pitch.

The *breadth of wheels*, where practicable, should be at least three times the pitch.



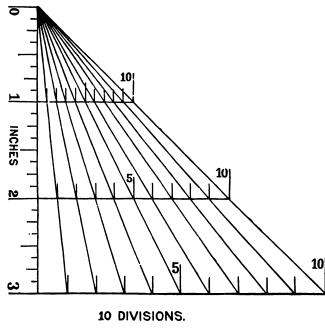


Fig. 276.

Fig. 276 shows a scale for proportions of teeth; it is divided into tenths and used thus:

Say wheel is 2" pitch, then from pitch circle to addendum will be 3½ tenths, and from pitch circle to root of tooth will be 4 tenths measured at the 2' line on scale, and so on.

The decimal proportions already given in example, page 210, are adopted in many workshops. Many others use the proportions approved of by Sir William Fairbairn, which are:

Table of proportion of gears:

Depth of tooth above pitch line		.35 of the pitch.	
" be	low pitch line	.40	"
Working depth of tooth		.70	"
Total depth of tooth		·75	"
Clearance at root		.05	46
Thickness of tooth		.45	"
Width of space		-55	"





Hawkins' Mechanical Drawing.

The diameter of a wheel or pinion is invariably the diameter measured on pitch circle, except it is specially described otherwise, thus the diameter "over all," etc.

The shape of the curved face of the teeth of gears extending from the root to the addendum is the curve conforming to the passage of the teeth described on its fellow entering and leaving, as they rotate or roll together on their pitch circles.

The curve of teeth outside the pitch circle is called "the face," and the curve from pitch circle to root is called "the flank."

The difference between the width of a space and the thickness of a tooth is called clearance or side clearance.

The play or movement permitted by clearance is called the backlash; clearance is necessary to prevent the teeth of one wheel becoming locked in the spaces of the other.

Wheels are in gear or geared together when their pitch lines engage, i. e., when the pitch circles meet.

Wheels to be geared together must have their teeth spaced the same distance apart, or in other words, of the same pitch.

The teeth of spur wheels are arranged on its periphery parallel to the wheel axis, or shaft on which it is hung.

The teeth of a bevel wheel or bevel gears are always arranged at an angle to the shaft.

When the *teeth* of bevel gears form an angle of 45° they are called miter wheels.

Miter wheels to gear must be of equal sizes.

A crown wheel is a disc that has teeth which are on its side face; that is, teeth on a flat circular surface all parallel to the axis of the wheel.

A rack has teeth on a flat surface or plane all parallel to one another.

A gear cut by machine is called a *cut gear*. It has teeth with less clearance than cast wheels, which are not so true or perfect, and therefore require more clearance.



A worm with even a light load is liable to heat and cut if run at over 300 feet of rubbing surface travel. The wheel teeth will keep cool, as they form part of a large radiating surface; the worm itself is so small that its heat is dissipated slowly.

A worm throws a severe end thrust or strain on its shaft.

Steel Gears.—There is great economy in the use of cast-steel over cast-iron in gears; the average life of the former is nearly twice as great as of cast-iron gears. And, apart from their longer life and efficiency, there is less danger of breaking.

The most accurate teeth, strongest and most uniform in wearing, are to be found in steel gears cut from solid stock, or made by cutters of proper shape.

Fig. 275 shows an elevation and a vertical section

of a spur wheel. From these views the various parts in spur gears can be better understood, as they are represented here in combination, and the wheel in its entirety.


AA is the horizontal center line, BB, BB the vertical center lines, II and II the pitch lines, N thickness of tooth, O space of tooth, D total depth of tooth, C breadth of face, F diameter on pitch line, P diameter over all, G diameter of hub, E diameter of hole, H depth of hole, E thickness of rim, E thickness of web.

Much has been and still is being written on gearing. No general rule is followed by the writers; the elementary principles given will enable the student to master spur gearing, and bevel and combinations of many kinds of wheels will afterwards be found easier to delineate than the numerous lines seem to indicate.





Hawkins' Mechanical Drawing.

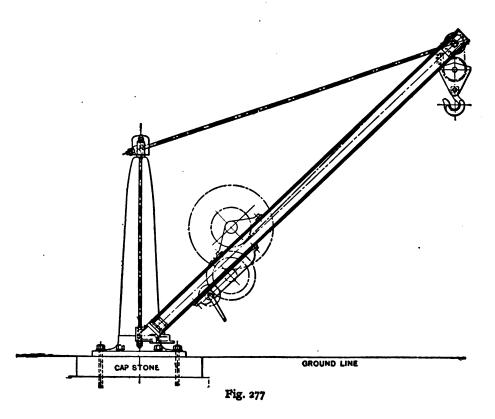

Digitized by Google

Working Drawings.

From the "plans" made in the office are produced "working drawings"—which represent in detail the work to be done to exact measurement and of material, as indicated, by the pattern-maker, the foundry, the forge, the shop, and finally, by the erector of the completed mechanism.


How to satisfactorily fulfill the directions contained in these drawings, representing only a part of the work, so that it will fit, with needed accuracy, to all other parts of the design, is the task before each separate worker.

It is by means of this division of the process of manufacture through these drawings, that scores and hundreds of men can be employed at the same time upon a single engine or machine; thus, while handwork has been superseded by machines in many quarters, the art of drawing has not been narrowed nor diminished, for no drawings or designs have yet been made by machinery, nor are they likely to be.


It is thus that a good designer and draughtsman

"projects" or extends himself, to the advantage of many fellow workers.

The drawing, fig. 277, shows a simple form of pillar crane; it consists of an upright cast-iron pillar, which is bolted on a cap stone, under which is the foundation plate not shown in the drawing; the boom is of rolled steel, supported by steel tie rods, and provided with rollers at the base; the hoisting gear is shown in broken lines and circles; all as seen in the drawing.

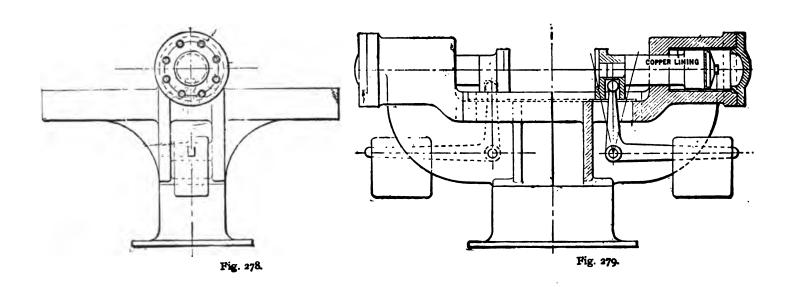




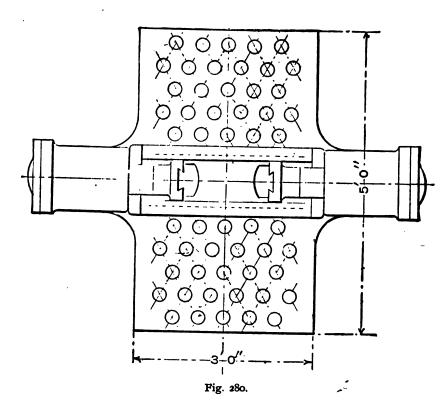

Figs. 278, 279 and 280 show a drawing of a "hydraulic beam bending machine" in three views; fig. 280 is a plan, fig. 278 is an end elevation, and fig. 279 a side elevation, and a portion of the latter in section shows the interior construction.

NOTE.—These three views are a practical illustration of drawings for a machine of the following dimensions: this machine has a bed 3 x 5 feet in area, with 27 holes in each side for the bending pins. The frame and cylinders are made of cast iron, the rams of machinery steel, and the slides for holding the bending blocks, of steel casting. The distance between the bending blocks is 17 inches. The cylinders are copper lined, 8 inches diameter, and the rams have a 6-inch stroke. The rams, which are independent and single acting, are returned by counterweights placed as shown under the table. The cylinders can be operated independently from either side of the machine by an arrangement of valves and levers. The machine complete weighs about 7,500 lbs.

Hawkins' Mechanical Drawing.

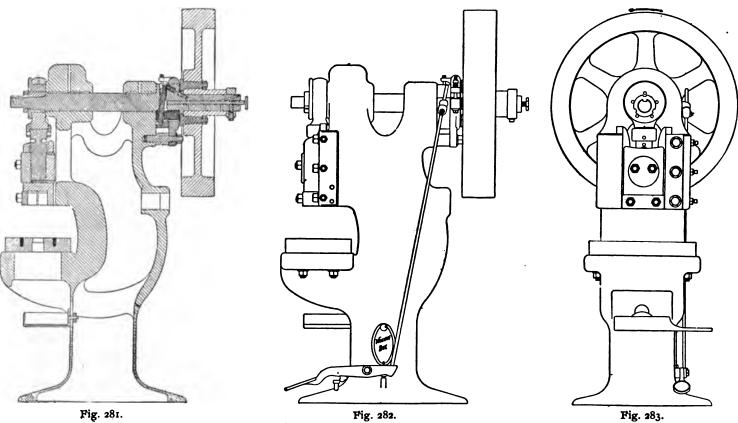

Digitized by Google

The drawing, page 222, shows three views of a power punching press.


Fig. 282 is a side elevation.

Fig. 283 a front elevation.

Fig. 281 a vertical sectional view; from these views the proportion, general arrangement and disposition of the automatic devices can be easily understood; it may be well to call particular attention to the automatic clutch on the top shaft and the tripping device.

This drawing, fig. 284, shows a side elevation in section of a self-adjusting piston-rod packing.

A is the gland, B is the piston rod, C is a brass sleeve which contains the packing D, E is the cylinder cover, F is a coil spring. It will be seen that the spring F abuts on a bushing in the bottom of the stuffing box and is prevented from scoring the piston rod by stepping over the ends of the bushing and follower. All as shown in the drawing.

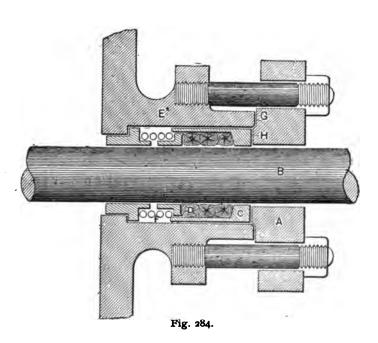

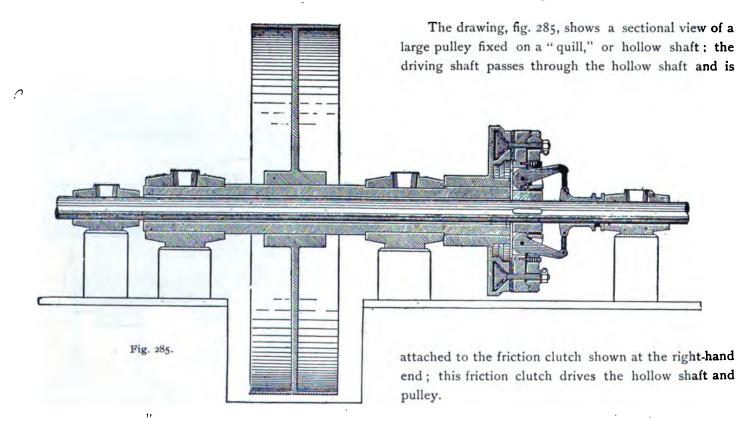


Fig. 286 shows the mechanism, called the link-motion, employed to reverse an engine, or to enable it to be run in either direction. Many forms of link-motion have been devised, but the Stephenson form, as shown in the figure, is, however, the one in almost universal use.


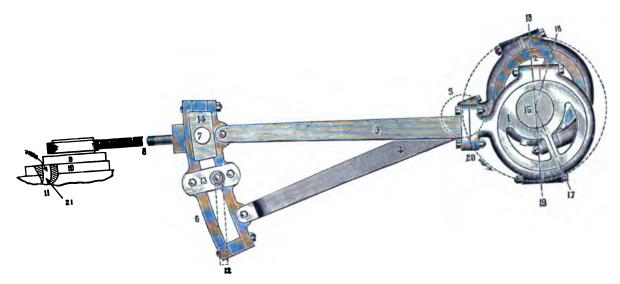


Fig. 286.

This drawing shows shading and the mode of figuring the parts for identification.

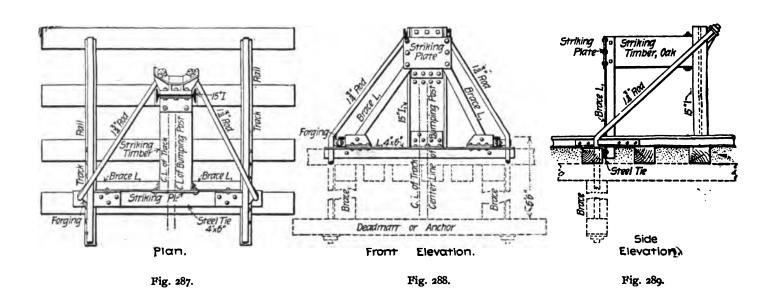

Digitized by Google

Figs. 287 to 289 represent a bumping-post for the end of railway tracks, reproduced on an enlarged scale from the columns of the *Engineering News*.

In addition to the lettering and dimensions, admirably shown in the drawings, the following description is appended to show how printed text and mechanical drawings mutually aid in practical—or commercial—usage.

The unique feature of the arrangement shown, is that the center line of the post does not coincide with the track, thus adapting itself to the nature of the blows of a car-bumper, as received in the single-post style of the mechanism.


BUMPING POST FOR RAILWAY TRACKS.

The post is a 15-in. steel I-beam, resting on a base plate 3/4-in. thick, and supported by anchor rods 13/4 ins.

diameter, with upset ends held by nuts on a heavy forging bolted to the top of the post. These rods extend forward and outward to clear the rails, and then pass vertically through a 4×6-in. angle iron crosstie, and an ordinary wooden tie, extending down to an anchor block or deadman buried in the ground 6½ ft. below the top of the rail.

Vertical braces or spreaders are fitted between the anchor timber and a longitudinal timber under the ties, so as to prevent the loosening of the anchor rods when the post is struck. The rods are held in position against the rails by steel forgings bolted to the rail with 1-in. turned bolts. An oak striking block, 12×12 ins., 3 ft. long, is bolted between angle iron brackets on the face of the post.

Hawkins' Mechanical Drawing.

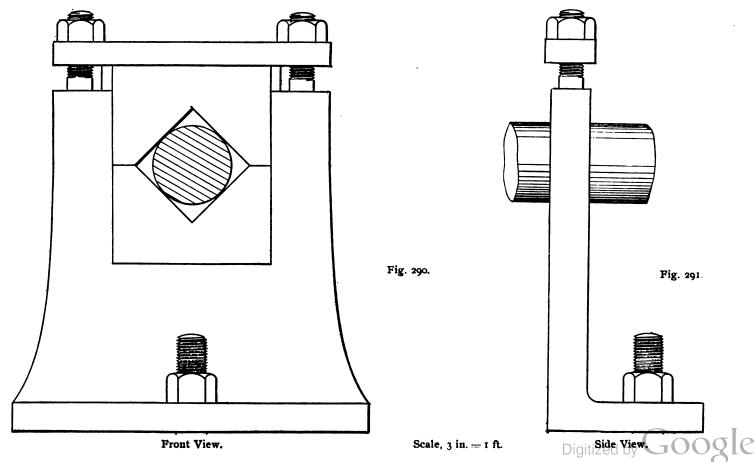

To Read Working Drawings.

One of the advantages resulting from a knowledge of practical draughting is, that it enables a mechanic to read a drawing when given him as a guide for his work. It is getting every day more general among draughtsmen to figure exactly and minutely every part of their drawings which are made to a scale.

Drawings are almost always made "finished size," that is, the dimensions are for the work when it is completed. Consequently all the figures written on the different parts indicate the exact size of the work when finished, without any regard to the size of the drawing itself, which may be made to any reduced and convenient scale.

Even in full size drawings this system of figuring is not objectionable. It is a system which should be followed whenever a drawing is made "to work to," for it allows the workman to comprehend at a glance the size of his work and the pieces he has to get made. Figuring makes a drawing comprehensible even to those who cannot make drawings.



A working drawing should be made, primarily, as plain as possible by the draughtsman; second, the workman should patiently and carefully study it, so that it is thoroughly understood.

In studying a drawing, the object it is intended to represent should be made as familiar as possible to the mind of the student, so that he may fill out in imagination the parts designedly left incomplete—as in a gear wheel where only two or three teeth are drawn in, that he may see, mentally, the whole.

The following is a description of reading drawings when dimensions are not figured. Here we have a piece of machinery represented by fig. 290, and the information we have is that it is to scale, three inches—one foot. Now, with scale and dividers, we can arrive at its actual dimensions.

Measurements should be first taken with the dividers from the drawing, and then the dividers

applied to the scale to which the drawing is made; this scale is always marked on the working drawing; if the dividers are set to the length of the base of the example, fig. 290, they will measure, on an ordinary two-foot rule, three and three-fourths inches, but if applied to the three-inch scale they will read one foot three inches, the actual length of the part; the "reading" is from the scale; thus, in both figures the drawings are "three-inch scale."

Now, 3 inches is one-fourth of a foot, hence $3\frac{3}{4} \times 4 = 1$ ft. 3 in., the full size, and so on for all parts of the drawing.

Fig. 291 shows a side view of the "steady rest," illustrated in front elevation, fig. 290; from the scale as before we get the sizes; the two views combined give length, breadth and thickness of the parts.

In some figures it is necessary to show end views, also section views, to enable all measurements to be read from the drawing.





Digitized by Google

Patent Office Drawing Rules.

U. S. PATENT OFFICE RULES.

AS APPLIED TO PREPARATION OF DRAWINGS.

Each applicant for a patent is required by law to furnish a drawing of his invention whenever the nature of the case admits of it. The drawing must be signed by the inventor or the name of the inventor may be signed on the drawing by his attorney-in-fact, and in either case must be attested by two witnesses. The drawing must show every feature of the invention covered by the claims.

When the invention consists of an improvement on an old machine, the drawing must exhibit, in one or more views, the invention proper, disconnected from the old structure, and also, in another view, so much only of the old structure as will clearly show the connection of the invention with the old machine.

Several editions of the patent-drawings are printed, the smallest of which is about 3x4\frac{3}{4} inches, so that the drawing must be so made that it will stand a reduction of about one-fourth. This work is done by the photo-lithographic process, and therefore the character of the

NOTE.—These rules will be found most useful to many readers of this work—hence their introduction at this point. Nearly 50,000 patents are "applied for" in the United States every year.



original drawing must be brought as nearly as possible to a uniform standard of excellence suited to the requirements of the process.

The following rules are given by the Patent Office for guidance:

- I. Drawings must be made upon pure white paper of a thickness corresponding to three-sheet Bristol board. The surface of the paper must be calendered and smooth. India ink alone must be used, so as to secure perfectly black and solid lines.
- 2. The size of a sheet on which a drawing is made must be exactly 10x15 inches. One inch from its edges a single marginal line is to be drawn, leaving the "sight" precisely 8x13 inches. Within this margin all work and signatures must be included. One of the shorter sides of the sheet is regarded as its top, and measuring downwardly from the marginal line, a space of not less than 1½ inches is to be left blank for the heading of title, name, number and date.
- 3. All drawings must be made with the pen only. Every line and letter, signature included, must be absolutely black. This direction applies to all lines, however fine, to shading, and to lines representing cut surfaces in sectional views. All lines must be clean, sharp, and solid, and they must not be too fine or crowded. Surface shading, when used, should be open. Sectional shading should be made by oblique parallel lines about $\frac{1}{20}$ of an inch apart. Solid black should not be used for sectional or surface shading.
- 4. Drawing must be made of the fewest lines possible, consistent with cleanness. The plane upon which a sectional view is taken should be indicated by a broken or dotted line. Heavy lines on the shade side of objects should be used, except where they tend to thicken the work and obscure letters of reference. The light is always supposed to come from the upper left hand corner at an angle of 45 degrees.
- 5. The scale to which a drawing is made should be large enough to show the mechanism without



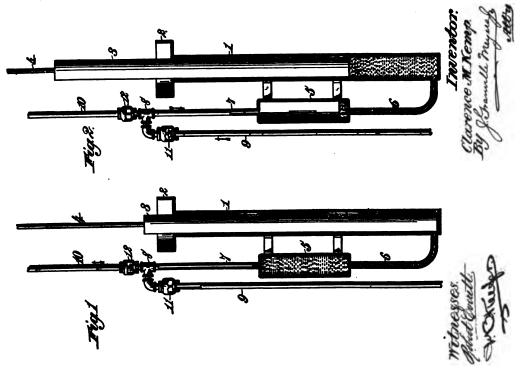


Fig. 292.

crowding. The number of sheets used must never be more than is absolutely necessary.

6. The different views should be consecutively numbered. Letters and figures of reference must be carefully formed. They should, if possible, measure at least one-eighth of an inch in height.

If the same part of an invention appears in more than one view of the drawing it must always be represented by the same character.

7. The signature of the inventor is to be placed in the lower right-hand corner of each sheet, and those of the witnesses at the lower left-hand corner.

The title should be written with pencil on the back of the sheet.

Drawings should be rolled for transmission, never folded.

On page 235, fig. 292 exhibits a reproduction of a patent office drawing, used in connection with specifi-


cation papers in an application for a United States patent.

ENGLISH PRACTICE.

The rules for patent drawings in England are practically the same as in the United States; the paper sizes are, however, different. They must be on sheets of one of the two following sizes (the smaller being preferable), 13 inches at the sides by 8 inches at the top and bottom, or 13 inches at the sides by 16 inches at the top and bottom, including margin, which must be one-half an inch wide.

If there are more figures than can be shown on one of the smaller-sized sheets, two or more of these sheets should be used in preference to employing the large size. When an exceptionally large drawing is required, it should be "continued" on subsequent sheets. There is no limit to the number of sheets that may be sent in.



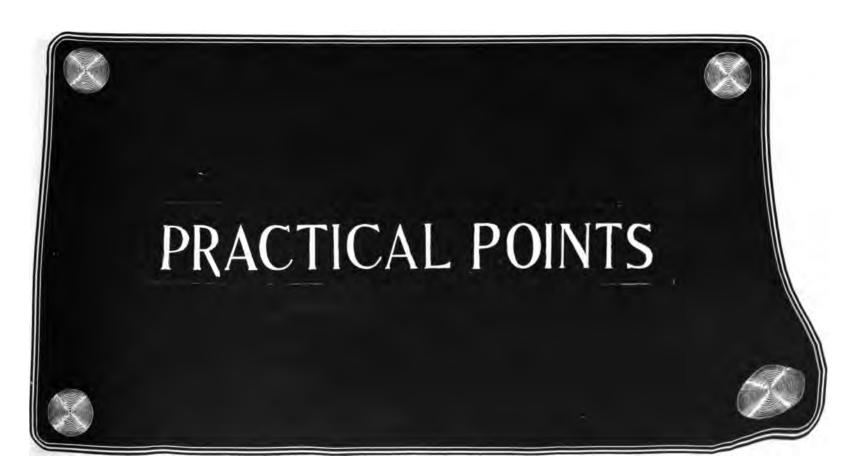

Digitized by Google

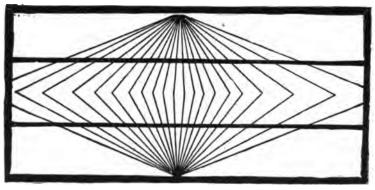


Fig. 293. See page 244.

Useful Hints and "Points."

Many of these "points" are repetitions, with but little variation from the way they have been previously stated; they are thus repeated to emphasize their practical worth.

A good draughtsman leaves his work in such a state that any competent person can without difficulty ink in what he has drawn.

The criterion of a good set of drawings is that with a properly prepared specification they are complete in themselves and require no explanation.

A "break" in a figure or object in a drawing is shown in rough irregular lines, as in fig. 134, on page 131; this is useful when the paper is not large enough to show the whole.

Never use a sloping line in writing fractions on a drawing. The objection arises from the fact that such a dimension as $1\frac{8}{16}$, if written with the inclined line, unless very distinctly executed, may be read as $\frac{14}{16}$.

In inking do not draw the lines further than you wish them to go, but in penciling it is well to extend the lines, free up.

Never use a scale for a ruler.

Do not overload the pen with ink.

Having filled the pen, nearly close the nibs and try the width of the line on a piece of paper or the margin of the drawing.

Never refill or lay the pen aside without first cleaning it.

The application of the science of geometry to the drawing-board is absolutely necessary to success, for the reason that the whole fabric of mechanical drawing rests on the principles of geometry, which is well termed the science of measurements.

Section lines should be the last inked and always without previous penciling.

Center lines are necessary in working drawings.

In choosing T-squares, care should be exercised to see that the head slides up and down the *left*-hand side of the board easily, and that when pressed against the board with the left hand there is no "slogging" of the blade up or down, or in other words, that the head is bearing firmly for its whole length against the board.

The best place for the title of a drawing is said to be the upper left-hand corner; this facilitates the filing of the sheet.

Never use a soft pencil except for finishing in shadow lines.

The rubber should always be kept clean.

Great care should be taken to keep drawing boards out of the way of heat or damp, as these cause the wood to warp.

Circles and curves are to be "inked in" before straight lines. First ink the smallest and afterwards the larger curves.

Do not press heavily on the pencil so as to cut the paper, but draw lightly, so that the mark can be erased and leave no trace, especially if the drawing is to be inked.

The draughtsman should commence his work at the top of the paper, keeping the lower part covered over until he needs to use it.



Shade lines should be avoided in all working drawings, as their use interferes with accurate measurements.

To make ink stick to the tracing cloth, with a woolen cloth rub some powdered chalk or pounce over the surface on which the ink lines are to be drawn, then wipe the surface clean and use a good quality of ink.

For striking small circles a small bow pen should be used.

To fix lead pencil marks on sketches so that they cannot be readily erased, sponge them with milk carefully skimmed, then lay blotting paper over them and iron with a hot flat-iron.

To have the ink preserve its fluidity and to keep out all dirt and dust, keep the cover on the ink slab; the mistake is often made of putting too liberal a supply of water in ink well, which causes a waste of both time and ink; no more should be prepared than to meet immediate requirements.

Always draw on the right side of the sheet, which can be found by holding the sheet up to the light and looking across its surface with the eye nearly in the same plane as the paper; note which side is the smoothest and has the least number of blemishes on it; this is the right side to draw on.

As to sharpening pencils, it is always best to cut a chisel point on the pencil used for drawing, and put a circular point on the pencils in the bow pencil and pencil leg. The chisel point makes a finer line and lasts much longer than a round point.

The varnish used in many large drawing-rooms is simply white shellac dissolved in alcohol; it requires a little experience to mix these to a proper consistency, but this is soon acquired.

Never sharpen your pencil over the drawing.

A center line of a drawing is the line upon which the figure is to be constructed; the center line is the first line to be drawn. The T-square belongs to the left side of the drawing-board, and is operated by the left hand. The right hand should be kept free for the purpose of picking up pencil, pen and bows, adjusting and marking off. The left hand controls the T-square and the triangle that slides along the upper edge of the square; the right hand is for the instruments.

The advantage of a paper rule or scale is that the paper will expand and contract under varying degrees of atmospheric moisture the same as the drawing does.

Avoid rubbing out and constantly cleaning the drawing with India rubber; if wrong lines are made or it is desired to make alterations, the part to be changed should be rubbed out and completely re-drawn.

When using the bows see to it that the steelpointed leg that is put down first on the paper, to secure a center for a curve or a circle, is a trifle longer than the pencil or pen leg.

To clearly indicate the position of a center which is to be used again, lightly pencil a small circle about

it; never put the point of a pencil in the center hole to enlarge or blacken it; the prick point made by the dividers and needle points should be no more than can be just seen, hence the circle to be made as advised above.

Be particular in having the legs of the dividers exactly the same length, and sharp, so that in pricking off distances, and dimensions, and centers, the indent or hole made in the paper is as small as possible.

The term "plane" means a perfectly flat surface; that is, something which has length and breadth but no thickness.

The best way to indicate on the drawing the surfaces which are to be finished is to write on the lines which represent the finished surfaces "finished," tool. finish, or "faced," according to the degree of finish required. The single letter f is frequently used.

Avoid fingering the drawing sheet as much as possible; in pointing to any part of the drawing use a pencil and not the finger.

Remember that a drawing is made to be read.



The skill in inking does not depend on the fineness of the line, but on its clearness.

A soft pencil should never be used on a mechanical drawing unless in rare cases when it is used for pencil shading; the hardness or softness of pencils is denoted by letters.

Never ink any portion of a drawing until the penciling is entirely finished.

Stretching or pasting the paper to the board is very seldom resorted to, for the reason that the mechanical drawings are to scale and the paper is natural when pinned to the board and more correct than if under a strain. Mechanical drawings are always required in practice right away, and time would be wasted and lost in damping and pasting and drying again.

A working drawing, whether made to a scale or not, must have all the dimensions plainly written upon it, for a workman should never be compelled to measure a drawing. In marking off distances, centers, etc., a fine needle point is useful; the hole should not be punctured through the paper, merely a prick point, so that it will leave an impression, which will not be obliterated by the use of rubber; drawing-pens are often equipped with such a needle point in the end of the handle, that is visible only when the pen is unscrewed from the handle; but in the absence of one of this kind the point of the divider leg will be of use.

Mechanical construction drawings represent a large amount of mental and manual work, as well as a considerable cost in money; hence, they are of value quite as much as property which has been acquired by the expenditure of either labor or capital. It is wise to keep copies of original designs and sketches, as well as data and formulæ, for record and comparison.

The best system for keeping drawings is to make them of certain standard sizes, and to keep them flat, unrolled, in drawers, numbered, lettered and labeled.



In an office where space is limited and drawings have to be rolled it is well to use a number of paste-board cases about three feet long and three inches in diameter. These are shown in fig. 204.

A puncture can be made near the top and, when a new drawing or blue-print is inserted in this cylindrical case, a cardboard tag can be looped through the puncture. This label will give the title and number of drawings in that case.

A manuscript book methodically and neatly kept should tell immediately the number of the drawing and the case.

Fig. 293 is good for practice in line drawing and also as an optical illusion. "You look and are deceived. At first glance you say, 'Of course, those two lines are curved.' You are mistaken. They are exactly parallel. In order to prove this hold them up edgewise to the eye. It is, of course, the subsidiary lines which lead the vision astray. It is a case of first impressions being quite wrong."





Digitized by Google

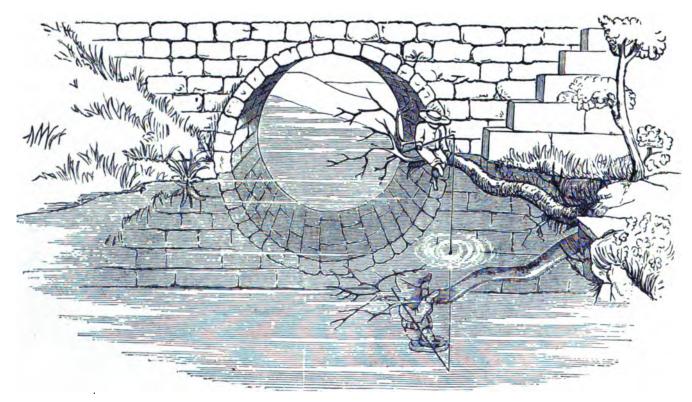


Fig. 295.



Linear Perspective.

It should be mentioned that this subject is outside the limits of mechanical drawing, which only deals with objects that can be measured, projected or dimensioned to an accurate scale.

But, in rounding out the more formal subjects it is well to look a little outside the rigid lines of mechanics into the methods of nature, for no system of teaching drawing is complete that does not include some explanations for sketching from nature—the objects being always around the student, the eye always clear to see and the hand only needing the training to make permanent the impressions received.

The word perspective means to see through; the

word perspective being derived from the Latin word perspicere, to look through, hence, perspective is a science which teaches us to see correctly and enables us to represent the appearance of anything we may wish to draw; care should be taken in perspective drawing, to select objects interesting in themselves, and the best specimens of their class, so as to cultivate taste, while they at the same time afford useful and instructive drawing lessons.

The meaning of the term linear perspective is a line view; the previous examples have been composed of surfaces placed fronting the eye; perspective is the science which treats of the changes of form produced by viewing them in various oblique positions.

The slightest alteration of position will change the appearance of an object; this can be easily shown—for illustration take a coin, the actual shape of which is a perfect round; or, strictly speaking, a circle. If we take the coin between the thumb and the first finger, holding it in an upright position, and exactly facing the



eyes, as in Fig. 296, it appears of its true form, viz., a circle. If we alter its position, balancing it upon the thumb, in a level position, with its edge directly opposite the eye, as in Fig. 297, its appearance is changed, and what we know to be really a circle, appears to us as a straight line.

Now, still balancing the coin upon the thumb, but changing its position with regard to the eye, by holding it a little lower than in the last position, that is slightly beneath the level of the eye, as in fig. 298, we see both the edge and the surface, the coin now appearing neither a circle nor a straight line, but a curved figure of an elliptical form. Thus the same coin held in three different positions has assumed three different shapes.

Let us take two coins of the same size, holding (in the position shown at fig. 296) one in each hand. Now, closing one eye, (which will make the experiment more



clear), hold one coin out at arm's length, and the other at about the distance of a foot from the eye. On comparing them, we find that the coin which

is further from the eye appears less than the nearer one. We know that the coins are really equal in size, yet one appears smaller than the other.



Digitized by Google

We thus see that when we change the position of an object, we have as a consequence a change of appearance; also that the change of appearance may affect both the shape and the size of the object.

These diversities of appearance may be remarked in everything around us. We can observe them in the street by looking at a building from different points of view, or by comparing the apparent sizes of the street lamps; in the railway station, by watching the arriving or departing train; and at sea, by noticing the vessels as they approach, or as they retire, ultimately vanishing from our sight in that line where the sea and sky appear to meet.

All these interesting variations of appearance are in strict accordance with the laws of **GEOMETRY** and **OPTICS**. The former subject has been enlarged upon beginning with page 81 of this work, where a line, a point, an angle, etc., are defined; other terms are explained at page 41 and the following pages; to these we add a few definitions essential to the subject.

A PLANE is a surface which is perfectly even and flat; to use a familiar illustration, a plane is like the surface of a sheet of plate glass; recollect particularly, that a surface which is at all curved, is not a plane.

The **GROUND-PLANE** is the plane on which we stand; the *base-line* is an imaginary line passing


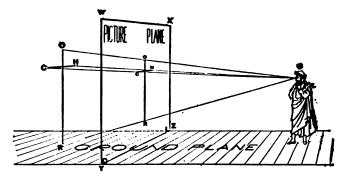


Fig. 299.—See page 255.


through the middle of the feet as we stand square and erect; and the *vertical plane* is supposed to stand on the base-line and perpendicular to it.

Planes are parallel to each other when they are throughout their entire surfaces the same distance apart.

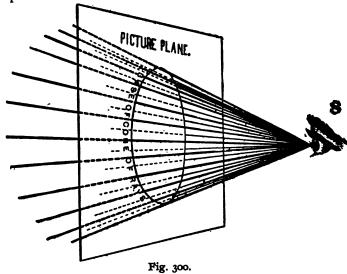

THE PERSPECTIVE PLANE is an upright square of glass, usually framed like a picture, with a base, so that it can stand up alone. This is placed between the eye

of the spectator and the subject to be drawn, and as the drawing is sometimes made directly upon it, it is sometimes called the *Picture* or the *Plane of the Picture*.

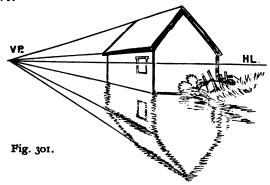

HORIZONTAL means perfectly level, like the surface of still water. We must be careful to understand perfectly the difference between the terms "level" and "even" or "flat." A surface may be even or flat, without being level. Thus the wall is even and flat, but it is upright, not level; level means a fixed, constant position.



In fig. 301 a house is shown in perspective in which the line $H\ L$ is the line of the horizon and $V\ P$ is the,—

VANISHING POINT.—The vanishing point is famil-

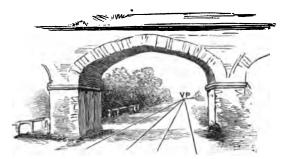


Fig. 302.

iarly represented by the rails on a trolley track on a straight road, which seem to approach each other in the distance, as shown in fig. 302 at VP.

All parallel lines seen in perspective appear to meet in the same vanishing point.

The value of the vanishing point may be seen in the view of a wooden house, fig. 303, where it (VP) gives direction to the retiring lines of the roof, side planks and door.

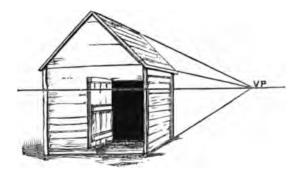


Fig. 303.

POINT OF SIGHT.—This is that point in the eye where the lines or rays from the object cross each other, as shown at P in fig. 305, also in fig. 299 at S.

VERTICAL means perfectly upright. If we attach a piece of thread to a weight, a small piece of lead for

example, and hold the thread with the lead hanging downwards, the thread will fall in an upright or vertical position.

PARALLEL lines are said to be parallel to each other when they are throughout their whole lengths the same distance apart.

PERPENDICULAR. When one straight line, meeting another, makes the angles at the point of contact equal, each of the angles is called a right angle, and the lines are said to be perpendicular to each other. Remember especially that perpendicular and vertical have not the same meaning. Vertical means an unvarying upright position. Perpendicular means that one line or plane meets another line or plane at right angles.

The fig. 295 on page 246 is a study in perspective, showing a water reflection. As rays from every visible part of the object are reflected, all following the same law, the reflection will appear to the eye *inverted*, and of the same size as the object. The arch itself forms

the upper half of a hollow cylinder, and the reflection forms the lower half. The reflection shows much more of the interior of the arch than can be seen directly. The leaning tree, the boy fishing, and the receding banks, all are seen in accordance with the laws of reflection and perspective.

THE HORIZONTAL LINE, THE POINT OF SIGHT AND THE VANISHING POINTS are the principal items. These should be studied in every room and during every walk, and the more pleasing accidents of form stored in the mind or committed to paper for future use.

OPTICS, the science of sight, gives us the following laws:

- 1. That we see by the agency of light.
- 2. That light passes from objects to our eyes.
- 3. That light travels in straight lines, which are called Visual Rays.



The human eye may be briefly described as a chamber of a spherical or globular form, with a circu-



Fig. 304.

lar opening in front. This circular opening is called the pupil, and through it the visual rays pass to the interior of the eye. The visual rays, passing from space in all directions through the small pupil, are

received upon what may be called the interior wall of the globular chamber forming the eye (see fig. 305). This interior wall is called the retina, and upon it the impressions of external objects are received, just as they are received upon a screen in a dark chamber. These impressions are conveyed by the optic nerve from the retina to the brain.

In front of the pupil is a segment of a small sphere, composed of the cornea and the aqueous humor, both of which are transparent, and from their shape and density have a convergent effect upon the rays passing through them.

Behind the pupil is the transparent crystalline lens, which, from its shape and its elasticity, is a powerful agent in aiding the convergence of the rays, and in bringing objects at various distances to a clear focus upon the retina.

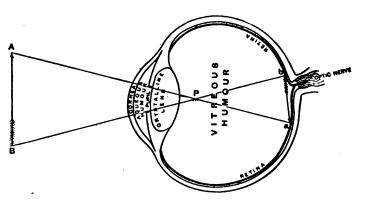


Fig. 305.

The pupil has the power of contraction and dilation, which is influenced by the quantity of light entering the eye, but when it is dilated to the utmost its size is very small in comparison with the great chamber forming the body of the eye.

In fig. 305 we have a rough sectional diagram of the eye and an object in front of it. This object, an arrow, is seen by means of the visual rays proceeding from it, the principal two of which are shown. The visual ray from A passes through the pupil and is received upon the retina at a. In the same way the visual ray from B passes through the pupil and is received upon the retina at b. It will thus be seen that the impressions or images received upon the retina are inverted; but, by long reason and experience, the mind has acquired the habit of determining the real positions of objects, and does not, though the image is so received, imagine them to be upside down.

It will also be observed, in the same way, that that portion of an object which is upon the right will be pictured upon the retina upon the left, and *vice versa*, but the mind, for the reasons before stated, never

imagines the object to be reversed. This fact is another proof that, as mentioned at the commencement of our study, to see accurately is a matter of education and practice.

And first of Optics; it was asserted, page 252, that we see by the agency of light which passes from objects to our eyes in straight lines which are called Visual Rays.

We see by the agency of light, as all objects, except such as may be styled self-luminous, when placed in a dark chamber are not perceivable by us, except by touch, smell or hearing; we cannot see them; they are invisible. But when, by removing a shutter or igniting a flame, we introduce something to the chamber which was not present when the chamber was dark, we become at once conscious of the appearance of the object, we perceive it by the sense of sight.

This something which must always be present to enable us to see, is called Light; all objects are made visible to the sense of seeing by its agency.



Without light, natural or artificial, it would be impossible to distinguish one object from another.

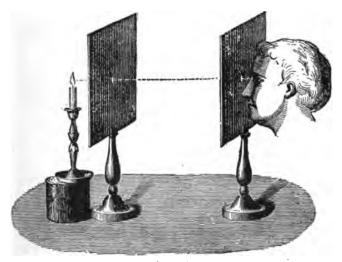


Fig. 306.

That the Visual Rays pass from objects in straight lines to the eye may be proved by the following experiment (see fig. 306):—Pierce two screens with a

large pin, and place them so that the holes are in a straight line with a flame, as the light of a candle or lamp. On fixing the eye to one of these holes we are able to see the flame; but if we slightly move the flame, one of the screens, or the eye, the flame is no longer visible. To be visible, the flame, the holes in the screens, and the eye must all be in the same straight line. See fig. 306.

In fig. 299 the picture plane is represented by the rectangle WXYZ. Although the picture plane is here shown as a rectangle, it may be of any shape or of any size.

The observer is at S, looking through the picture plane at the cross R C O H. The observer is standing upon a horizontal surface, which is called the ground plane. If we are in a room, the window may be called a picture plane and the floor a ground plane.

The picture plane rests, as it were, upon the ground plane, in a line which passes from Y to Z. The

two planes meet or intersect in this line, which is called the ground line. The ground line is sometimes called the picture line, or the measuring line.

The visual rays, by means of which the observer sees the cross, will, in their course from it to the eye, pass through the picture plane. These visual rays will intersect the picture plane in a number of points, and if we mark the true positions of these points the result will be a perspective image of the cross.

The rays are shown passing from the cross to the eye of the observer, and meeting the picture plane in points r, c, o, h; r being joined to o, and c to h, we have the perspective image of the cross as it would appear to the observer at S. Of course an infinite number of rays proceed from the cross to the eye of the observer; but it is quite evident that we need only consider those proceeding from the extremities of the object.

Scale or Approximate Perspective.

Real, or true perspective, represents the object exactly as it is seen in nature, where the parts that are far away from the eye of the observer appear smaller than those nearby. Occasions arise, however, in practical life, with its numerous phases of industrial requirements, where the convenience of showing the complete form of the object in a single view might preferably be coupled with the convenience of scale dimensions.

This has led to a modified perspective, that sacrifices some of the accuracy in the appearance of the object to gain the advantage of scale dimensions; this form of perspective may be distinguished by the name—approximate or scale perspective—which does not represent the object exactly as seen in nature, but where those parts that are afar off are shown of the same size as those that are near by, and where the lines that run out into space are parallel to each other and do not converge into a vanishing point.

To represent an object in perspective, the horizon and the point of vision will have to appear in the drawing as the fundamental starting points. Three dimensions are distinguished for the fixing of an object in space from a certain reference point. They are height, breadth and thickness, and are in their direction square to each other. The height is the fundamental direction, being derived from the direction of gravity, that invariably extends to the center of the earth.

All directions in the perspective determination of an object are parallel to these.


Vertical lines and planes point toward the center of the earth, while horizontal planes, including the directions of breadth and thickness, are square to the vertical direction. In this, the principal visual ray extends in the direction of thickness.




For a clear understanding of perspective, it must be firmly fixed in mind, that for each prominent point of the object behind the picture plane, a corresponding point lies in the picture plane, in that position where a

straight line or ray of sight that is going from the eye to the point of the object, cuts through the picture plane.

Suppose we could replace these rays of sight by thin, visible threads of wire that would go through little holes in the picture plane, we could then walk around this bundle of rays, and by looking at it from three different directions, we would get three different views of it. We may look upon it from the top, from the side or from the end, where the bundle of rays all concentrate in the eye of the observer.

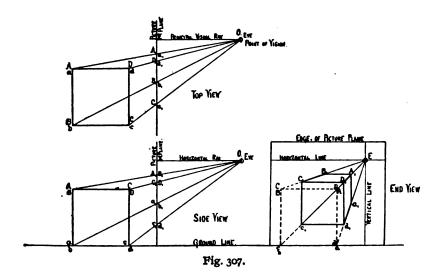


Figs. 307 and 308 show, in two cases, how these three views would appear. The end views are those where the perspective picture appears on the plane, while the top and side views only show where the rays intersect the picture plane. The top view shows how far, for example, point A is distant from a vertical line OZ, while

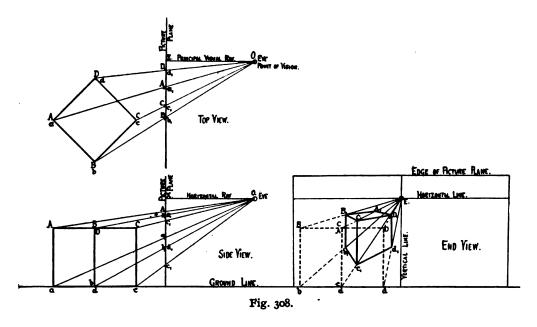

the side view shows how far point A is below horizontal line O X, which is at the same height above the ground as the eye of the observer, O. Thus, all points of the cube can be located on the picture plane, and the outlines of the cube reproduced in perspective.


Modified arrangements are shown in figs. 309 and 310 for parallel and angular perspective.

The views are so arranged in relation to each other that the picture plane in the top view is parallel to the horizon and the ground-line, which latter is the intersection of the picture plane with the level ground of the end or perspective view. At the same time the

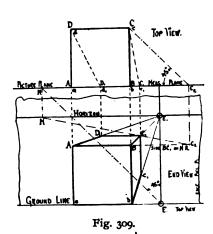

eye of the observer is in one and the same vertical line for both views, two vanishing points may be found in

the horizon outside of the principal visual ray. To find the position of these two vanishing points in

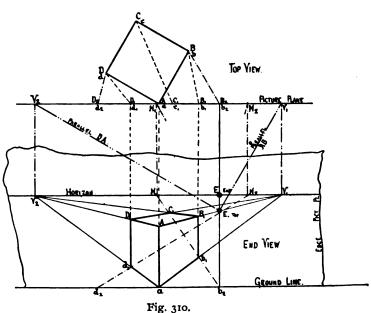

the picture plane, the modified top view, fig. 310, is used.




As all lines that end in a vanishing point must be parallel in reality, this parallelism may be seen in the top view and lines through the eye of the observer, parallel to the directions of the main lines of the object, will cut the picture plane at the vanishing points.

Through these two vanishing points the directions of two sets of lines are found, the starting points of which are determined from the plane of measurement. The third set of lines, being vertical, also appears vertical and parallel in the picture.

The position of each vertical line is found in the top view, where the light rays from the observing eye to the ends of the vertical lines intersect with the picture plane. Projecting these points down upon the rays to the vanishing points produces the vertical lines in the picture.


For example, in fig. 311, the purpose of perspective is entirely defeated by placing the eye of the observer directly in front of the object and arriving at the view

taken in mechanical drawing which needs supplementary views for complete comprehension of the form of the object.

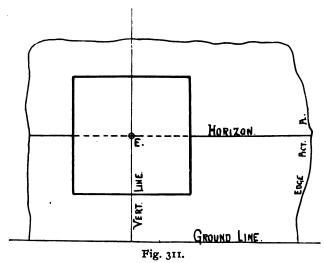

In fig. 312 the eye of the observer is first placed directly opposite the object, then it sees the object to the left but a short distance away, while in the third figure



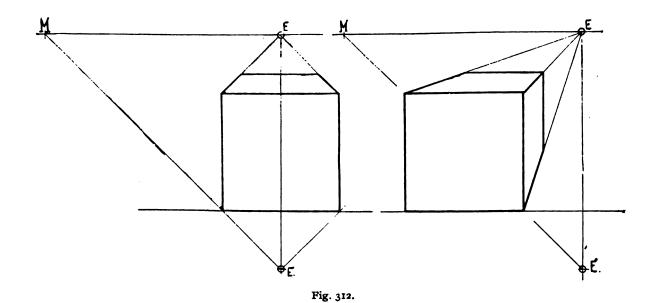

Digitized by Google

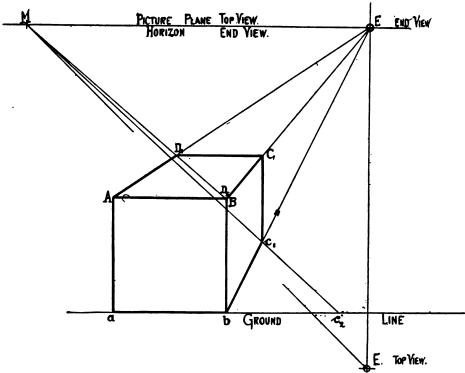


Fig. 312 (second part).

the observer is farther away from the object. In each case the picture plane and plane of measurement is at the front face of the cube.

For such simple objects, it is not necessary to draw the top view at all. The only reminder of the top view is the eye or point of vision, the picture plane that falls together for the sake of convenience with the horizon of the end view and the ray that determines the measurement point M, which is, in this suppressed reproduction, absolutely necessary, in order to find the apparent position of the real corners behind the picture plane.

So far, only square or sharp-cornered objects have been represented in perspective.

It is evident, however, that round objects can also be shown in linear perspective, placing reference lines on the object and representing these as if they were real lines. A cylinder is thus shown in fig. 313 of which the end planes will appear very distinctly in sharp outlines.

Vertically, only the outlines of the cylinder, as contrasted against space, will appear as distinct outlines, while the reference lines will not appear and are therefore shown only as dotted lines.

Fig. 314 shows the approximate or scale perspective with all the axes drawn and the corresponding angles and scales marked. The outlines of the object running in these directions appear all parallel to the axes.

The approximate or scale perspective completely avoids all the difficulties of choosing a point of sight, of having several views, vanishing points and measurement points, and thus offers a representative view, with a great saving of time and labor. Particularly for mechanical purposes, where an artistic impression is not called for, it presents a distinct advantage over the true or real perspective.

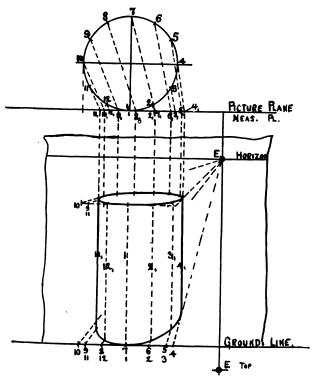


Fig. 313.

Digitized by Google


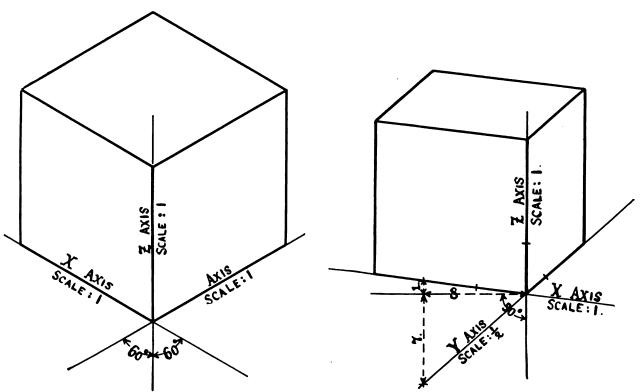


Fig. 314.



Digitized by Google

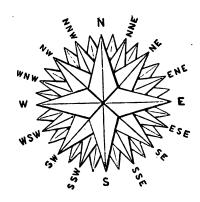

MARINERS' COMPASS.

Useful Tables for Draughtsmen.

TABLE OF DECIMAL EQUIVALENTS.

8ths, 16ths, 32ds and 64ths of an Inch.

8ths.	32nds.	67ths.	83 = .515625
$\frac{1}{8} = .125$	$\frac{1}{3}$ = .03125	$\frac{1}{84} = .015625$	₹ 1 =.546875
1250	* a = .09375	$\frac{8}{84} = .046875$	$\frac{1}{6}$ =.578125
8 = ⋅375	$\frac{5}{88} = .15625$	$\frac{5}{64} = .078125$	1 1=.609375
$\frac{1}{2} = .500$	$\frac{7}{31}$ = .21875	$\frac{1}{64} = .109375$	$\frac{1}{1} = .640625$
$\frac{5}{8} = 625$	$\frac{9}{818}$ = .28125	$\frac{9}{84} = .140625$	$\frac{11}{100} = .671875$
$\frac{1}{4} = .750$	$\frac{1}{3}$ = -34375	11=.171875	\$\$ ≔.703125
$\frac{7}{8} = .875$	13 3 ≔ .40625	$\frac{18}{84} = .203125$	₹₹=·734375
ıóths.	$\frac{15}{3} = .46875$	15×.234375	11 =.765625
$\frac{1}{16} = 0625$	$\frac{17}{33} = .53125$	$\frac{17}{4} = .265625$	11 =.796875
$\frac{3}{16} = .1875$	$\frac{1}{8} = .59375$	$\frac{1}{6}$ = .296875	\$\$=.828125
$\frac{6}{16} = .3125$	$\frac{2}{3}$ = .65625	{ }=.328125	1 = .859375
1 ⁷ 6=-4375	$\frac{22}{33} = .71875$	₹ = ⋅ 35937.5	₹₹=.890625
$\frac{9}{16} = .5625$	$\frac{25}{32} = .78125$	$\frac{35}{64} = .390625$	11=.921875
$\frac{11}{16} = .6875$	$\frac{87}{88} = .84375$	$\frac{1}{64} = .421875$	{1 =.953125
$\frac{18}{18} = .8125$	\$\$=.90625	11 =.453125	\$\$ =.984375
1 8=⋅9375	#1=.96875	11 =.484375	

TABLE OF DECIMAL EQUIVALENTS Of Millimeters and Fractions of Millimeters.

mm. Inches.	mm. Inches.	mm. Inches.	mm. Inches.	mm. Inches
$\frac{1}{50}$ =.00079	 = .01260	} 102441	\$\$=.03622	12= .4724
♣ =.00157	17 =.01339	₹ 8 = 02520	17 =.03701	13= .5118
$\frac{3}{10}$ = .00236	$\frac{16}{60}$ = .01417	} = .02598	$\frac{10}{10} = .03780$	14= .5511
4 =.00315	18 =.01496	₹ {02677	18 =.03858	15= .5905
1 0=.∞394	$\frac{30}{50}$ = .01575	85 =.02756	1=.03937	16= .6299
6=.00472	} }=.01654	$\frac{35}{6} = .02835$	2=.07674	17= .6692
1 =.00551	##=.01732	\${\bar{6}} = .02913	3=.11811	18= .7086
<u>\$</u> 0=.00630	11810.=	18 =.02992	4=.15748	19= .7480
\$ 0=.00709	88 =.01890	₹ 8=.03071	5=.19685	20= .7874
18=.00787	##=.01969	10 =.03150	6=.23622	21= .8267
$\frac{11}{6}$ =.00866	₹ § =.02047	##=.03228	7=.27559	22= .8661
18=.00945	$\frac{27}{60}$ = .02126	18 =.03307	8=.31496	23= .9055
12=.0I024	88 =.02205	18 =.03386	9=-35433	24= .9448
11=.01102	3 3=.02283	\$ \$ =.03465	10=.39370	25= .9842
18110.=	₹8=.02362	##=.03543	11=.43307	26=1.0236

10 mm. = 1 Centimeter = 0.3937 inches. 10 cm. = 1 Decimeter = 3.937 " 10 dm. = 1 Meter = 39.37 " 25.4 mm. = 1 English Inch.



RULES RELATIVE TO THE CIRCLE.

The circle contains a greater area than any other plane figure bounded by an equal perimeter or outline.

```
TO FIND CIRCUMFERENCE-
                                                    TO FIND SIDE OF AN EQUAL SQUARE-
    Multiply diameter by 3.1416.
                                                        Multiply diameter
                                                                                 by 0.8862.
   Or divide "
                     " 0.3183.
                                                        Or divide
                                                                                  " 1.1284.
                                                        Or multiply circumference " 0.2821.
                                                        Or divide
                                                                                  " 3.545.
TO FIND DIAMETER-
   Multiply circumference by 0.3183.
                                                    SQUARE-
    Or divide
                          " 3.1416.
                                                        A side multiplied by 1.4142 equals diameter of its circumscribing circle.
                                                                         " 4.443
                                                                                        circumference of its circumscribing circle.
TO FIND RADIUS-
                                                           "
                                                                         " 1.128
                                                                                         diameter
                                                                                        circumference of an equal circle.
                                                                         " 3.545
   Multiply circumference by 0.15915.
                                                          "
                                                                         " I.273
                                                                                        circle inches
    Or divide
                          " 6.28318.
                                                    TO FIND THE AREA OF A CIRCLE-
TO FIND SIDE OF AN INSCRIBED SQUARE-
                                                        Multiply circumference by one-quarter of the diameter.
    Multiply diameter
                            by 0.7071.
                                                        Or multiply the square of diameter
                                                                                             by 0.7854.
    Or multiply circumference " 0,2251.
                                                                                circumference ".07958.
                                                        Or
    Or divide
                             " 4.4428.
                                                                                1/2 diameter
                                                                                            " 3.1416.
                                                        Or
```

Contents of cylinder = area of end × length. Contents of wedge = area of base × ½ altitude. Surface of cylinder = area of both ends × length × circumference. Surface of sphere = diameter squared × 3.1416, or = diameter × circumference. Contents of sphere = diameter cubed × .5236. Contents of pyramid or cone, right or oblique, regular or irregular = area of base × ½ altitude. Area of triangle = base × ½ altitude. Area of parallelogram = base × altitude. Area of trapezoid = altitude × ½ the sum of parallel sides.



ROMAN TABLE.

	I. dei	otes	One.	XVII.	denotes	Seventeen.
I	I.	"	Two.	XVIII.	"	Eighteen.
H	I.	"	Three.	XIX.	44	Nineteen.
I	V .	"	Four.	XX.	"	Twenty.
7	V.	"	Five.	XXX.	"	Thirty.
V	I.	"	Six.	XL.	"	Forty.
VI	I.	"	Seven.	L.	"	Fifty.
VII	I.	"	Eight.	LX.	6	Sixty.
12	ζ.	"	Nine.	LXX.	"	Seventy.
2	ζ.	"	Ten.	LXXX.	"	Eighty.
X	I.	"	Eleven.	XC.	"	Ninety.
ΧI	I.	"	Twelve.	C.	"	One hundred.
XII	I.	"	Thirteen.	D.	"	Five hundred.
XIV	J.	"	Fourteen.	. M.	44	One thousand.
X	V.	"	Fifteen.	$\overline{\mathbf{X}}$.	"	Ten thousand.
XV	I.	• •	Sixteen.	$\overline{\mathbf{M}}$.	"	One million.

SOLID MEASURE, OR CUBIC MEASURE.

This is used in measuring bodies, or things having length, breadth and height or depth.

TABLE.

```
1728 cubic inches (cu. in.) make I cubic foot (cu. ft.).
27 cubic feet, "I cubic yard (cu. yd.).
128 cubic feet, "I cord (C.).
```

CIRCULAR MEASURE.

```
60 seconds (") make I minute (').
60 minutes " I degree (°).
360 degrees " I circum. (C.).
```

The circumference of every circle whatever, is supposed to be divided into 360 equal parts, called degrees.

A degree is $\frac{1}{360}$ of the circumference of any circle, small or large.

A quadrant is a fourth of a circumference, or an arc of 90 degrees.

A degree is divided into 60 parts called minutes, expressed by the sign ('), and each minute is divided into 60 seconds, expressed by ("); so that the circumference of any circle contains 21,600 minutes, or 1,296,000 seconds.

LONG MEASURE-MEASURES OF LENGTH.

```
12 inches = I foot. 40 rods = I furlong.

3 feet = I yard. 8 furlongs = I common mile.

5½ yards = I rod. 3 miles = I league.
```

The mile (5,280 feet) of the above table is the legal mile of the United States and England, and is called the statute mile.



Tables of Diameters, Gircumferences and Areas of Gircles.

Diam.	Area.	Circum.	Diam.	Area.	Circum.	Diam.	Area.	Circum.	Diam.	Area.	Circum.
0.0 .1 .2 .8	.007854 .081416 .070686	.81416 .62882 .94248	2.0 .1 .2 .8	8.1416 8.4686 8.8018 4.1548	6.2882 6.5978 6.9115 7.2257	4.0 .1 .2 .8	12.5664 18.2025 18.8544 14.5220	12.5664 12.8805 13.1947 13.5068	6.0 •1 •2 •8	28.2743 29.2247 30.1907 81.1725	18.8496 19.1687 19.4779 19.7920
.4	.12566	1.2566	.4	4.5289	7.5898	.4	15.2058	18.8230	.4	82.1699	20.1062
.5 .6 .7 .8	.19785 .28274 .38485 .50266 .68617	1.5708 1.8850 2.1991 2.5188 2.8274	.5 .6 .7 .8 .9	4.9087 5.8098 5.7256 6.1575 6.6052	7.8540 8.1681 8.4823 8.7965 9.1106	.5 .6 .7 .8	15,9048 16,6190 17,8494 18,0956 18,8574	14.1872 14.4518 14.7655 15.0796 15.8938	.5 .6 .7 .8	88.1881 84.2119 85.2565 86.8168 87.8928	20.4204 20.7845 21.0487 21.8628 21.6770
1.0 .1 .2 .8	.7854 .9508 1.1810 1.8278 1.5894	8,1416 8,4558 8,7699 4,0841 4,8983	8.0 .1 .2 .8 .4	7.0686 7.5477 8.0425 8.5580 9.0792	9.4948 9.7889 10.0581 10.8678 10.6814	5.0 .1 .2 .8 .4	19.6850 20.4283 21.2872 22.0618 23.9023	15.7090 16.0221 16.8868 16.6504 16.9646	7.0 .1 .2 .8 .4	88.4845 89.5919 40.7150 41.8589 48.0084	21.9911 22.8058 22.6195 22.9836 28.2478
.5 .6 .7 .8	1.7671 2.0106 2.2698 2.5447 2.8858	4.7124 5.0265 5.3407 5.6549 5.9690	.5 .6 .7 .8 .9	9.6211 10.1788 10.7521 11.8411 11.9456	10.9956 11.8097 11.6289 11.9881 12.2522	.5 .6 .7 .8	28.7588 24.6801 25.5176 26.4208 27.8897	17.2788 17.5929 17.9071 18.2213 18.5854	.5 .6 .7 .8	44.1786 45.3646 46.5663 47.7886 49.0167	28.5619 28.8761 24.1908 24.5044 24.8186

Diam.	Area.	Circum.	Diam.	Area.	Circum.	Diam.	Area.	Circum.	Diam.	Area.	Circum.
	50,2655	25.1827	11.0	95,0882	84.5575	14.0	153,9390	43,9828	17.0	226,9801	58.4071
8.0	51.5800	25.4469	11.0	96.7689	84.8717	.1	156.1450	44.2965	1.1	229.6588	53.7212
.1	52.8102	25.7611	.2	98,5208	85.18 58	.2	158.8677	44.6106	.2	282.8522	54.0854
.2	54.1061	26.0753	:8	100.2875	85.5000	.8	160.6061	44.9248	.8	235.0618	54.8496
.8	55.4177	26.8894	.4	102.0708	85.8149	.4	162.8602	45.2889	.4	287.7871	54.6687
.5	56.74 50	26.7035	.5	103.8689	86.1288	.5	165.1800	45.5581	.5	240.5282	54.9779
.6	58.0880	27.0177	.6	105.6883	86.4425	.6	167.4155	45.8678	.6	248.2849	55.2920
.7	59.4468	27.8819	.7	107.5182	86.7566	.7	169.7167	46.1814	.7	246.0574	55.6063
.8	60.8213	27.6460	.8	109.8588	87.0708	.8	172.0886	46.4956	3	248.8456	55.9203
.9	62.2114	27.9602	.9	111.2202	87. 8850	.9	174.8662	46.8097	.9	251.6494	56.9845
9.0	68.6178	28.2743	12.0	118.0978	87 6991	15.0	176.7146	47.1289	8.0	254,4690	56.5486
.1	65.0888	28.5885	.1	114.9901	88.0188	.1	179.0786	47.4380	.1	257.8048	56.8628
.2	66.4761	28.9027	.2	116.8987	35.8274	.2	181.4584	47.7522	.2	260.1558	57.1770
.8	67.9291	29.2168	.8	118.8229	86.6416	.8	188.8589	48.0664	.8	263.0220	57.4911
A	69.897 8	29.5310	.4	120.7628	88.9557	.4	186,2650	48.8805	.4	265.9044	57.8058
.5 .6 .7	70.8822	29.8451	.5	122.7185	89.2699	.5	188.6919	48.6947	.5	268.8025	58.1195
.6	72.8828	80.1598	.6	124.6898	89.5841	.6	191.1845	49.0088	.6	271.7164	58.4886
.7	78.8981	80.4784	.7	126.6769	89.8983	.7	198.5928	49.8280	.7	274.6459	58.7478
.8	75.4296	80.7876	.8	128.6796	40.2124	.8	196.0668	49.6872	.8	277.5911	59.0619
.9	76,9769	81.1018	.9	180.6981	40.5265	.9	198,5565	49.9518	.9	280.5521	59.8761
10.0	78,5898	81.4159	18.0	182.7828	40 8407	16.0	201.0619	50.2655	19.0	283.5287	59.6908
.1	80.1185	81.7801	.1	184.7822	41.1549	.1	208,5881	50.5796	.1	286.5211	60.0044
.2	81.7128	82.0443	.2	186.8478	41.4690	1 3	206.1199	50.8988	.2	289.5292	60.8186
.8	83.8229	82.8584	.8	188.9291	41.7889		208.6724	51.2080	.8	292,5530	60.6827
.4	84.9487	82.67 26	.4	141.0261	42.0978	.4	211.2407	51.5221	.4	235.5925	60,9469
.5	86,5901	82.9867	.5	148.1888	42.4115	.5	218.8246	51.8868	.5	298.6477	61.2611
.6	88.2478	88.8009	.6	145.2672	42.7257	.6	216.4248	52.1504	.6	301.7186	61.5759
.7	89.9202	88.6150	.7	147.4114	48.0898	.7	219.0897	52.4646	.7	804.8052	61.8894
.8	91,6088	88.9292	.8	149.5712	48.8540	.8	221.6708	52,7788	.8	807.9075	62.2085
.ě	98,8182	84.2484	.9	1 51 .7468	48.6681		224.8176	58.0929	.9	811.0255	62.5177

Diam.	Area.	Circum.	Diam.	Area.	Circum.	Diam.	Area.	Circum.	Diam.	Area.	Circum.
20.0	814,1598 817,8087	62.8819 63.1460	28.0	415.4756 419.0998	72.2566 72.5708	26.0	580,9299 585,0211	81.6814 81.9956	29.0	660.5199	91.1068 91.4908
.2	820.4789	68,4602	.1 .2	422.7827	72.8849	.2	589.1287	82.8097	.1	665.0630 669.6619	91.7845
.8	828.6547	68.7748		426.8848	78, 1991	.8	548.2521	32.6289	.2 .8	674.2565	92.0487
.4	826.8513	64.0885	.4	430.0526	78.5188	.4	547.8911	63.9990	.4	678.8668	92,8626
.5 .6 .7	830.0636	64.4026	.5	483.7861	78.8274	.5	551.5459	88.2522	.5	683,4928	92,6770
.6	888.2916	64.7168 65.0810	.6 .7	487.4854	74.1416	.6	555.7168	88,5664	.6	688.1845	92.9911
-7	836.5858 889.7947	65.8451	.7	441.1503	74.4557	.7	559.9025	88.8905 84.1947	.7	692.7919	98.8058
.8 .9	848.0698	65.6598	.8	444.8809 448. 6 273	74.7699 75.0841	.8 .9	564.1044 568.8220	84.5068	.8	697.4650	98.6195
	020.0000	1	.9	440,0273	70,0041	.8	000.0280	02,0000	.9	709.1588	98.9886
21.0	846.8606	65.9784	24.0	452.8898	75.8982	27.0	572.5558	84.8280	80.0	706.8588	94.9478
.1	849.6671	66.2876 66.6018	.1	456.1671	75.7424	.1	576.8048	85.1879	.1	711.5786	94.5619
.8	852.9894 856.8278	66.9159	.8	459.9606	76.0265	.2	581.0690 585.8494	85.4518 85.7655	۶.	716.8145	94.8761 95.1908
.4	859.6809	67.2801	.8	468.7698 467.5947	76.8407 76.6549	.8 .4	589,6455	86.0796	.8	721.0662 725.8836	95,5044
,•=	000,000		.4	401.0841	10.0039		000.0300	00.0.50	4	120.0000	\$0,0022
.5 .6	863.0508	67.5442	.5	471.4852	76.9690	.5	598.9574	86.898 8	.5	780.6167	95.8186
.6	8 66.4854	67.8584	.6	475.2916	77.2889	.6	596.2849	86.708 0	.6	785.4154	96.1897
.7	869.8861	68.1726 68.4867	.7	479.1686	77.5978	.7	602,6282	87.0221	.7	740.2299	96.4469
.8 .9	878,2526 876,6848	68.8009	.8	488.0518	77.9115 78.2257	.8	606.9871 611.8618	87.8868 87.6504	.8	745.0601 749.9060	96.7611 97.0752
••	1 210.0020		.9	486.9547	78.2207	٠.٧	011.0010	67.00UA	ē.	749.9000	91.0103
2 3.0	880.1827	69.1150	25.0	490,8789	78.5898	28.0	615.7522	87.9646	31.0	754.7676	97.8894
.1	883.5963	69.4292	.1	494.8087	78.8540	.1	620.1582	88.2788	.1	759.6450	97.7085
.2	887.0756	69.7484	.9	498.7592	79.1681	.8	624.5800	88.5929	.3	761.5880	98.0177
.8	890.5707 894.0814	70.0575	.8	502.7255	79.4828	.8	629.0175	88.9071	.8	769.4467	98.8819
A	994.0014	10.5111	. 4	506.7075	79.7965	.4	688.4707	89,2213	A	774.8718	98.6460
.5	897.6078	70.6858	.5	510.7052	80,1106	.5	687.9897	89.5854	.5	779.8118	98,9608
	401.1500	71.0000	.6	514.7185	80.4248	.6	642.4248	89.8495	.6	784.9679	99.2748
.7	404.7078	71.8142	.7	518.7476	80.7889	.7	646.9246	90.1687	.7	789.2888	99.5885
.6 .7 .8	408.2814 411.8707	71.6288 71.9425	.8	522.7924	81.0531	.8	651.4407	90.4779	.8	794,9960	99.9096
	411.0707	11.9420	اقرا	526.8529	81.8672	.9	655.9794	90.7920	.9	799.2290	100.2168

Diam.	Area.	Circum.	Diam.	Area.	Circum.	Diam.	Area.	Circum.	Diam.	Area.	Circum.
32.0 .1 .2 .3	804.2477 809.2821 814.8822 819.8980 824.4796	100.5810 100.8451 101.1598 101.4784 101.7876	85.0 •1 •3 •8	962.1128 967.6184 978.1897 978.6768 984.2296	109.0557 110.2699 110.5841 110.8982 111.2124	38.0 .1 .2 .8 .4	1184.1149 1140.0918 1146.0844 1152.0927 1158.1167	119.8905 119.6947 120.0068 120.8230 120.6372	41.0 .1 .2 .8	1820.2548 1826.7024 1883.1668 1889.6458 1846.1410	128.8058 129.1195 129.4396 129.7478 180.0619
.5 .6 .7 .8	829,5768 884,6898 839,8185 844,9628 850,1229	102.1018 102.4159 102.7801 108.0442 108.8584	.5 .6 .7 .8	989.7980 995.8822 1000.9821 1006.5977 1012.2290	111.5265 111.8407 112.1549 112.4690 112.7882	.5 .6 .7 .8	1164.1564 1170.2118 1176.2880 1182.8698 1188.4724	120.9518 121.2655 121.5796 121.8988 122.2080	.5 .6 .7 .8	1852,6520 1859,1786 1865,7910 1872,2791 1878,8529	180.8761 180.6908 181.0044 181.8186 181.6227
88.0 .1 .2 .8 .4	855.2986 860.4902 865.6978 870.9202 876.1588	108.6726 108.9867 104.8009 104.6150 104.9292	36.0 .1 .2 .8 .4	1017.8760 1023.5887 1029.2172 1084.9118 1040.6212	118.0978 113.4115 113.7257 114.0898 114.8540	89.0 .1 .2 .8 .4	1194.5906 1200.7246 1206.8742 1218.0896 1219.2207	122.5221 122.8868 128.1504 128.4646 128.7788	42.0 .1 .2 .8 .4	1885.4424 1892.0476 1898.6685 1405.8051 1411.9574	181,9469 182,2611 182,5759 182,8894 183,2085
.5 .6 .7 .8	881.4181 886.6881 891.9688 897.2708 902.5874	105.2484 105.5575 105.8717 106.1858 106.5000	.5 .6 .7 .8 .9	1046.8467 1052.0880 1057.8449 1068.6176 1069.4060	114.6681 114.9823 115.2965 115.6106 115.9248	.5 .6 .7 .8	1225.4175 1281.6800 1287.8582 1244.1021 1250.8617	124.0929 124.4071 124.7212 125.0854 125.8496	.5 .6 .7 .8	1418.6254 1425.8092 1482,0066 1488.7288 1445.4546	188.5177 188.8818 184.1460 184.4609 184.774
84.0 .1 .9 .8	907.9208 918.2688 918.6881 0.4.0181 929.4088	106.8142 107.1288 107.4425 107.7566 108.0708	87.0 .1 .9 .8 :4	1075.2101 1081.0299 1086.8654 1092.7166 1098.5835	116.2889 116.5581 116.8672 117.1814 117.4956	40.0 .1 .2 .8 .4	1256,6871 1262,9281 1269,2848 1275,5578 1281,8955	125.6687 125.9779 126.2920 126.6069 126.9208	48.0 .1 .2 .8 .4	1452,2012 1458,9685 1465,7415 1472,5852 1479,8446	185.0885 185.4026 185.7168 186.0810 186.8451
.5 .6 .7 .8	934.C202 940.2478 945.6901 951.1486 956.6228	108.8849 108.6991 109.0188 109.8274 109.6416	.5 .6 .7 .8	1104.4662 1110.8645 1116.2786 1122.2063 1128.1588	117.8097 118.1289 118.4380 118.7522 119.0664	.5 .6 .7 .8	1288,2498 1294,8189 1801,0042 1807,4052 1818,8219	127.2845 127.5487 127.8628 128.1770 128.4911	.5 .6 .7 .8	1486.1697 1498.0105 1499.8670 1506.7898 1518.6279	186.6598 186.9784 187.2876 187.6018 187.9159

Digitized by Google

Diam.	Area.	Circum.	Diam.	Area.	Circum.	Diam.	Area.	Circum.	Diam.	Area.	Circum.
44.0	1520,5808	188,2801	47.0	1784.9445	147.6550	50.0	1968,4954	157.0796	58 .0	2206.1884	166,5044
.1	1527.4502	188,5442		1742,8851	147.9690	.1	1971.3572	157, 8988	.1	2214.5165	166.8186
.2	1584.8853	188,8584	.3	1749.7414	148,2832	.2	1979.2848	157.7080	.2	2222.8653	167, 1827
.8	1541.8860	189.1726	.8	1757.1685	148.5973	.8	1987.1280	158.0221	.3	2231.2298	167.4469
.4	1548.8025	189.4867	.4	1764.6012	148.9115	.4	1995.0870	158.8868	.4	2289.6100	167.7610
.5	1555.2847	189.8009	.5	1772.0546	149.2257	.5	2002.9617	158.6504	.5	2248.0059	168.0752
.6	1562.2826	140,1158	.6	1779.5287	149.5898	.6	2010.9020	158.9646	.6	2256.4175	168.8894
.7	1569.2963	140.42 9 2	.7	1787.0086	149.8540	.7	2018.8581	159.2787	.7	2264.8448	168.7035
.8 .9	1576.8255	140.7484	.8	1794.5091	150.1681	.8	2026.8299	159.5929	.8	2273.2879	169.0177
.9	1583,8706	141.0575	.9	1802.0254	150.4828	.9	9084.8174	159, 9071	.9	2281.7466	169 .8818
45.0	1590.4818	141.8717	48.0	1809.5574	150.7964	51.0	2042.0206	160,2212	54.0	2290.2210	169.6460
.1	1597.5077	141.6858	.1	1817.1050	151.1106	.1	2050.8 89 5	160.5854	.1	2298.7112	169.9602
.2	1604.5999	142.0000	.2	1824.6684	151.4248	.2	2058.8742	160, 8495	.2	2807.2171	170.2743
.8	1611,7077	142.8142	.8	1882.2475	151.7889	.8	2066.9245	161.1687	.3	2315.7886	170.5885
.4	1618.8313	142.6288	.4	1889.8428	152.0581	.4	2074.9905	161.4779	.4	2824.2759	170.9026
.5	1625.9705	142.9425	.5	1847.4528	152.8672	.5	2083.0728	161.7920	.5	2332.8289	171.21 6 8
.6	1688.1255	148.2566	.6	1855.0790	152,6814	.6	2091.1697	162.10 6 2	.6	2841.3976	171.5810
.7	1640.2962	148,5708	.7	1862.7210	152.9956	.7	2099.2829	162,4203	.7	2349.9820	171.8451
.8	1647.4826	148.8849	.8	1870.3786	153.8097	.8	2107.4118	162.7845	.8	2358.5821	172.15 9 8
.9	1654.6847	144.1991	.9	1878,0519	158,6239	-9	2115,556 8	163.0487	.9	2867.1979	172,4785
46.0	1661.9025	144.5188	49.0	1885.7409	158,9380	52.0	2123.7166	168.8628	55.0	2375.8294	172.7876
-1	1669.1860	144.8274 145.1416	.1	1898.4457	154.2522	.1	2131.8926	163.6770	.1	2384.4767	178.1017
.9 .8 .4	1676.8858		.9 .8	1901.1662	154.5664	.2	2140.0848	163.9911	.2	2393, 1396	178.4159
-8	1688.6502	145.4557	.8	1908.9024	154.8805	.8	2148.2917	164.8058	.3	2401.8183	178.7801
-4	1690.9808	145.7699	.4	1916.6548	155.1947	.4	2156 5149	164.6195	.4	2410.5126	174.0442
-5	1698.2272	146.0841	.5	1924.4218	155.5088	.5	2164.7587	164.9886	.5	2419.2227	174.8584
.6	1705.5892	146.3983	.6	1982.2051	155.8280	.6	2178.0082	165.2479	.6	2427.9485	174.6726
.7	1712.8670	146.7124	.7	1940.0042	156.1872	.7	2181.2785	165.5619	.6	2436.6899	174.9867
.8	1720.2105	147.0265	.8	1947.8189	156.4518	.8	2189.5644	165.8761	.8	2145,4471	175.8009
ر د.	1727.5697	147.8407	ě.	1955.6498	156.7655	.9	2197.8661	166.1908	.9	2454.2200	175.6150



Hawkins' Mechanical Drawing.

UNITED STATES STANDARD SIZES OF WROUGHT IRON WELDED PIPE.

Inside diaméter nom.	Actual outside Diameter.	Thick- ness.	Actual inside Diameter.	External circum- ference.	Internal circum- ferencs.	Length of pipe per square foot of outside surface	Length of pipe per square 100t of inside surface.	External area,	Actual lotorual area.	Leagth of pipe containing one cubic foot.	We'ght per foot of length.	No. of threads per luch of scrow.	Length perfect screw
*	.405	.068	0.269	1.272	0.848	9.440	14.15	.129	.0572	2500.	.243	27	0.19
i	.54	.088	0.364	1.696	1.144	7.075	10.50	,229	.1041	1385.	422	18	0.29
ì	.675	.091	0.493	2.121	1.552	5.657	7.67	.358	.1916	751.5	.561	18	0.30
ž	840	.109	0.622	2.652	1.957	4.502	6.13	.554	.3048	472.4	.845	14	0.39
1	1.050	,113	0.824	3.299	2.589	3.637	4.635	.866	.5333	270.0 .	1.126	14	0.40
1 1	1.315	.134	1.047	4.134	3.292	2,903	3.679	1.357	.8627	166.9	1.670	111	0.51
11	1.660	.140	1.38	5.215	4.335	2.301	2.768	2.164	1.496	96.25	2.258	111	0.54
14.	1.90	.145	1.61	5.969	5.061	2.010	2.371	2.835	2.038	70.65	2.694	111	0.55
2 .•	2.375	.154	2.067	7.461	6.494	1.611	1.848	4.430	3.355	42.36	3. 667	111	0.58
21	2.875	.204	2.467	9.032	7.754	1.328	1.547	6.491	4.783	30.11	5.773	8	0.89
3	3.50	.217	3.066	10.996	9.636	1.091	1.245	9,621	7.388	19.40	7.547	8	0.95
31	4.0	.226	3.548	12.56 6	11.146	.955	1.077	12.566	9,837	14.56	9.055	8	1.00
4	4.50	.237	4.026	14.137	12.648	.849	0.949	15.904	12.730	11.31	10,728	8	1.05
41	5.0	.247	4.506	15.708	14.153	765	0.848	19.635	15.939	9.03	12.492	8	1.10
5	5.563	.259	5.045	17.475	15.849	629	0.757	24.299	19.990	7.20	14,564	8	1.16
6 :	6.625	.280	5.065	20.813	19,054	.577	0.630		28,889	4,98	18.767	8	1.26
7	7.625	.301	7.023	23.954	22.063	.505	0.544		38.7 87	3.72	23.410	8	1.36
8 .	8.625	.322	7.981	27.096	25.076	.444	0.478		50.039	2.88	28.348	8	1.46
9	9.688	.344	9.00	30.433	28.277	.394	0.425	73.715	63 -633	2.26	34.677	8	1.57
10	10.750	.366	10.018	33.772	31.475	.355	0,381	90,762	78,838	1.80	40.641	8	1.68

Thread taper three-fourths inch to one foot.

All pipe below 1½ inches is butt-welded, and proved to 300 pounds per square inch; 1½ inch and above is lap-welded and proved to 500 pounds per square inch.

Digitized by Google

STANDARDS FOR WIRE GAUGES IN USE IN THE UNITED STATES.

Number of Wire Gauge.	000000000000000000000000000000000000000
L. S. Stand.	46875 4025 4025 315 3125 28126 285626 284375 28126 28126 283126 171875 171
sedura eniw leeta	20000000000000000000000000000000000000
Imperial Wire Gauge.	444.45.33.45.33.45.45.00.00.00.00.00.00.00.00.00.00.00.00.00
Woen Mig. Co., Worcester, Ms.	28888888888888888888888888888888888888
Birminghém, or Stubs' Wire.	
American or Brown & Sharpe.	
Number of Wire Gauge.	00000 00000 00000 00000 00000 00000 0000

UNITED STATES STANDARD SIZES OF BOLTS.

DIAMETER,	DISTANCE ACROSS FLATS, SQUARE AND HRX.	DISTANCE ACROSS CORNERS, HEX.	THICKNESS OF HEAD.
¼ "	1/2"	9"	*"
3∕8	18	25 82]]
1/2	3/8	1	7 18
. 5 ∕8	116	$1\frac{7}{32}$	17
34	11/4	1 7 16	5/8
- <i>3</i> ⁄8	1 7 1 6	$1\frac{21}{32}$	31
1 .	15/8	1 3/6	18
1 1/8	1 8	$2\frac{3}{32}$	2 9 3 2
i ¼	2	2,5	1
13%	$2^{\frac{3}{16}}$	21/2	$1\frac{3}{82}$
1 1/2	23/8	2¾	1 36
15/8	2 2 3	215	1 3 2
13/4	23/4	318	13/8
1 3/8	215	313	$1\frac{1}{3}\frac{5}{2}$
2	31/6	35/8	1 18
21/4	31/2	418	13/4
21/2	376	4 1/2	115
23/4	41/4	4 3/8	21/8
3	45/8	$5\frac{1}{3}\frac{1}{2}$	$2\frac{5}{15}$

UNITED STATES STANDARD SCREW THREAD GAUGE.



Fig. 316.



Some Things Personal.

In the preparation of this work the idea of self-help has never been forgotten; nothing has been held back or omitted which would, in the author's opinion, tend to advance the student in the draughtsman's art.

The volume contains the experience in practical drawing, as related to engineering and mechanics, of over one hundred years, i. e., the author's, Mr. Perrott's and Mr. Lucas' experiences added together exceed that period.

Hence, the work should be really helpful; it has been aimed also to be entertaining and with easy tasks; all the illustrations of the book are recommended as models for practice—they have been selected with that view.

Moreover, as between author and publishers, the latter have agreed to issue the work in the most thorough style possible—as to paper, printing and binding—and to sell it at a very generously low price, considering all things.

With the closing words "hail and farewell," the author bids adieu (God be with you) to the reader and the student.







Fawkins' Belf Mechanical Drawing.

Index.

PAGE	PAG
Acute Angle, def	Angular Perspective Drawing, illus260, 26
Acute-Angled Triangle, def 50	Apex, def 4
Addendum Circle, illus 200	Apex of an Angle, def
Alphabets, Gothic, desc 171	Arc, def 4
Altitude , def	Complement of an
Altitude of a Polygon, def	Cosecant of an
American Machinist, Quotation from 141	Cotangent of an 9
Angle, def 41, 83	Sine of an
To bisect an	Supplement of an9
To draw an 89	Tangent of an 9
Angle-Iron , illus 75	Versed Sine of an
Angle-Plate, illus 75	Arc of Circle. To find the center of an

PAGE .		PAG
Arcs, Drawing 146	Bisector, def	4
Illus 146	Blackboard, illus. and desc	2
Arrow-Heads, how made172, 176	Blackboard Drawing	2
Axiom , def 83	Blue Printingdesc. 186, illus.	18
Axis, Conjugate, def	Test pieces	18
Of a Figure, def	Blue Prints, Office rules for	196
Of a Solid, def 42	Black Process Copying	18
Transverse, def 96	Boiler-Plate, Riveted, illus	7
	Bolt, Square-head, illus	76
Backlash in Gearing 215	Bolt and Nut, Square-headdesc. 144, illus.	14
Backward Projectiondesc. 152, illus. 152-3	Hexagondesc. 144, illus. 76,	, 14
Base , def	Bow-Dividersdesc. 123, illus.	I 2
Of a Polygon, def	Bow-Pencil, desc	12
Beacon Light, illus 282	Bows, Use of	24:
Beam Compasses desc. 124, illus. 124	Brick, Section-Lining, illus	18:
Bending Machine, Hydraulicdesc. 221, illus. 220-1	Broken Lines, How to Draw	3.
Benjamin, Prof. Chas., "How and What to Study" 23	Def	4
Bevel-Gear, desc 201	Bumping Post, illus	22
Bevel Mortise Wheel, desc 203	•	
Bevel Wheel,desc. 199, illus. 203	Calipers, illus	V
Theory dof	Cast-Iron. Section-Lining, illus	18:



Hawkins' Mecha	anical Drawing. 2	285
PAGE Caulking Tool, illus	Classifying Drawings, Office Rules for	PAGE
Center Line, def	Clearance in Wheel Teeth	
Center Lines, In Drawings	Cog-Wheeldef. 201, illus.	201
In Shop Drawings 192		183
Chalk-Crayondesc. 27, illus. 27, 37	Coin, Perspective View of a, illus.	248
Chalk-Work 27	Color and Tints	185
Instruments for Drawing, illus	Compass, Mariners', illus	268
Channel-Iron, illus	Compasses, Beam, desc. and illus	
Checking Drawings 194	Desc. and illus	121
Circle, def 43	For holding chalk, illus	29
To describe about a square	How to hold, illus	136
about a triangle	Complement of an Arc	99
through two points 90	Composition, Section-Lining, illus.	182
through three points 90	Concave, def	44
To find the center 90	Cone, def	44
To inscribe in a square 94	Conjugate Axis, def	96
in a triangle 94	Construction, def	44
Circles, Drawing desc. 146, illus. 146	Line, def	46
Circumference of a Circle	Contents, Table of	24
Circumscribe, def	Contour, def	44
Cincular Ditch I inc. illus	Convergence def	44

	PAGE		PAGE
Convex, def	44	Curved Surface, def	49
Copying Drawings, Black Process	188	Curve or Scroll, illus	117
Blue Printing	186	Cut Gears, desc	215
Tracing	184	Cylinder, def	44
Copyright	. vii	Cylindrical, def	44
Corner, def	44	Cylindrical Projection, illus	161
Corollary, def	83		
Co-secant of an Arc, def	99	Dash Line, def	40
Co-sine of an Arc, def	99	Decimal Equivalents, Table of	269
Co-tangent of an Arc, def	99	Dedication	iz
Crane, desc	219	Definitions, Preliminary	41
Working drawing of, illus	218	Degree , def	41, 44
Cross-Hatches, def	44	Describe, def	44
Cross-hatching Drawings	182	Design, def	44
Crown Wheel, illus	208	Symmetry in, def	50
Curve , def	44	Designing Gears	20
Curved Line, def	46	Detail Drawings, Office Rules for	19
Curved Lines, Drawing, desc	69	Develop, def	45
Drawing Figures of70,	7 2 , 73	Diagonal, def	45
How to Draw	35	Diagonals of a Polygon, def	4:
Illus	70	Diameter, def	4



Hawkins' Mecha	nical Drawing. 287
Diameter, Of a Circle	Drawing, Parallel Perspective
Diameters of Wheels, How to Measure 199	Projection, desc
Diametral Pitch, desc 200	Scale Perspective
Of Gears	Spur Gear, illus
Dimensioning Drawingsdesc. 176, illus. 177, 179	Spur Wheel, desc
Dimension Line, def 46	Straight Line Figuresdesc. 65, illus. 66-7-8
Dimensions on Drawings, Office Rules for 192	Symbols
Dividers and Compasses, desc	The Pitch Line 200
Dividers, illus	To Scale, desc
Bisecting, desc	Working, def
Bow, illus	Drawing-Board desc. 107, illus. 102, 106, 108
"Point"	Expansion and Contraction of
Proportionaldesc. 119, illus. 120	How to Construct
Spring Bow, desc	Trestles, illus
Dodecahedron, def	Drawing Instruments, desc 103
Dot-and-Dash Line, def	How to Select
Dotted Line, def	Illus
Draughtsmen, Useful Tables for	Outfit Recommended
,	•
Drawing, Blackboard	Drawing Materials, desc
Free-hand 55	Drawing Office Rules 191
Linear Perspective 247	Drawing Paper, desc



Hawkins' Mechanical Drawing.

Drawing Paper, Erasing Lines	PAGE I40	Drawings, Shadingdesc. 180, illus. 180	PAGI
Fixing of, illus	102	Size of, Office Rules	
Fixing on the Board	139	Tint and Color, desc	184
Pasting	184	Drawing-Table, desc	111
" Points "	24 3	Folding Legs, illus	10/
Patent Office Sizes	234		
Sizes of	133	Edge, def	45
Drawing Pencils, desc. and illus	118	Elevation, def	45
How to Use	56	Elevation and Section, Spur Wheeldesc. 216, illus.	217
Drawing Pen, Filling with ink, illus	130	Ellipse, An, desc96,	118
Drawing Pens, desc. and illus	129	To describe when length and breadth are given	96
Drawing-Pins, desc	110	Envelopes, Portfolio, desc	142
Drawing Scales, desc	126	Equiangular Triangle, def	45
Drawings, Cleaning, desc	169	Equilateral Triangle, def	50
Color and Finish, note	185	Erasing, "Points" on	242
Dimensioning, desc	176	Eye, illus and desc	253
Inking in, desc	167	Effect of Light on	253
Letteriug, desc	171		
Patent Office Rules for	233	Face, def	45
Reproducing	186	Faced Surfaces, Points, etc	242
Section-Lining, desc	182	Figures, Drawing Straight-line	65



Hawkins' Me	chanical Drawing.	289
Figures, Numerals, examples of	GE	PAGE
	•	
	66 Gearing, desc	
File Handle, desc. and illus	Drawing	. 163
Finger and Thumb Lines, illus	64 Gearing and Design	. 197
Finished Surfaces, How to indicate 1	93 Gears, A Train of, desc	. 208
"Points" 2	Speed of	. 208
Finishing, def	Gear-Wheels, Spur, illus	. 198
Flanged-tooth Wheel, desc 2	Concreted def	45
Flat Pattern, def	Conmetrie def	• 45
	Geometrical Axioms	. 84
Foreshortening, def	Geometrical Drawing, desc	. 81
Forward Projectiondesc. 151, 152, illus. 1	55 Problems in	
Free-hand, def	45 Geometrical Signs	
Free-hand Drawing55,	78 Geometry , defs	. 249
First Lesson in.	30 Elements of	. 81
Penciling, illus	54 Gothic Letters, illus	173
Free-hand Illustration, a Water Wheel	Grooved Friction Wheels, desc	201
Friction-Clutch and Pulley, desc 2	Ground-Planedef. 249, 255, illus.	. 249
Friction Gear-Wheels, desc 2	OI Half-Tint, def	. 45
Full Line, def		77

	PAGE		PAGI
Hanger, illus	179	Ink Eraser, Steel, desc. and illus	13:
Helical Wheeldesc. 199, illus.	207	Inking, illus166	, 169
Hemisphere, def	45	Long Lines, illus	170
Heptagon, def	47	Rules of Procedure	168
Hexagon, def	47	Short Work, illus	169
To Construct a	95	"Inking in" Drawings, desc	167
Hexagon-Head Bolt, illus	144	"Points," etc	, 243
Hexahedron, def	48	Patent Office Drawings	234
Horizontal, def45	, 250	Inscribe, def	45
Horizontal Line, in Drawing, illus	250	Instrumental, def	45
How to Draw	32	Instruments for Chalk-work, illus	29
In Perspective	252	Internal Gear, desc	201
Hypothesis, def	83	Internal-Gear Wheel, illus	207
		Introduction	15
Icosahedron, def	48	Isosceles Triangle, def	50
India Ink, desc. and illus	131		
Dish or Tile, illus	131	Lantern-Wheel, desc	201
India Rubber Eraser, illus	132	Lathe-Dog, illus	76
Use of	240	Lemma, def	83
Ink, Preparing, for Drawings, desc	167	Lettering, Blow-Off Valve, illus	175
Test for Good, desc	167	Drawings, desc	171



Hawkins' 1	Mech	anical Drawing. 2	291
Light, and Sense of Seeing	PAGE 254	Nonagon, def	PAGE 47
Experiment with, illus	255	Numbering Drawings, Office Rules for19	
Laws of	252	Numerals, illus	173
Line, def	82		
To Divide into Equal Parts	89	Oblique, def	46
Linear Perspective Drawing	247	Oblique Lines	
Lines, def	45	Oblong, def	
Note	65		42
Parallel, def	83	Obtuse-Angled Triangle, def	50
Link Motion, Stephenson's, illus	225	Octahedron, def	48
Longitudinal, def	46	Octagon, def	47
Lucas, Theo., Acknowledgement	23, 266	To Describe on a given straight line	95
Marking Measurements on Drawings	. 243	To Inscribe in a circle	96
Mechanical Drawing	37, 247	Oil Can, illus	77
Elevation	138	Optic Nerve, illus	253
Examples	143	Optics, in Drawing, def	252
Procedure	. 141	Outline Picture, desc	152
Minerva, Free-hand Sketch of	iii	Oval, def	46
Miter-Wheeldesc. 199, 204, illus	s. 204	How to Draw an	71
Wadal def	46	Overall def	. e

PAGE Paper, Fastening Drawing on 184	Pencil, How to Cut, illus5
Rule or Scale	How to Hold, illus54, 59, 6
Sensitized, desc	How to Use5
The Right Side of 241	Pencil-Compasses, desc
Parallel, def 46	How to Hold
Parallel Lines, def	Penciling, desc. and illus
To Draw	"Points"143, 24
In Perspective 251	Pencil Lines, How to Make
Parallei Perspective Drawing, illus 260 to 263	Pencils. Sharpening Points of
Parallel Ruledesc. 115, illus. 114-5	Penknife, illus 5
Parallelogram , def	Pens, Drawing, illus
To Construct 93	Lettering and Figuring, illus
Pasting Drawing Paper, "Points" 243	Pentagon, def
Patent Office Drawings235, illus. 236	To Inscribe in a circle
Rules of Great Britain 236	Perimeter, def
Rules of U. S 233	Of a Polygon, def4
Patterns, def 46	Periphery of a Wheel, def 20
Numbering, from drawings	Perpendicular, def
Pedestal, illus	Perpendicular Lines, How to Draw
Pen, Hand holding, illus	Perrott, Geo., Acknowledgement23, 26
Peneil, Function of a 142	Personal, Note from the Author 20



Hawkins' Mec	hanical Drawing. 293
Perspective Drawing def. 47, illus. 250	-
Definitions of Terms used in 249	
Geometrical Terms used in 24	
Of a Bridge, illus 249	Points, relating to Chalk Drawings
Scale or Approximate	7 To be observed in Sketching
Vanishing Point, illus 251	Useful Hints and 170, 239
Water Reflection, illus 246	Polygon, def
Perspective, Linear, def 247	Polyhedron, def 48
Perspective Plane, def 250	Postulate, def 83
Picture Plane, desc255	Pounce, How to Use, desc
In Drawing, illus	Preface
In Perspective, illus	Preparatory Practice in Drawing 30
Pinion-Wheel, desc 201	Prism, def 49
Piston Rod, desc 223	3 Problems, def
Pitch Circle in Gearing 200	Geometrical 86
Pitch Line, Drawing the 200	Produce, def 49
In Gearing 200	Profile, def
Plan, def	Projection, Backward, illus153-4
Plan of the Work 2	Def
Plane, in Perspective, def 249	Cylindrical Outline, desc 159
Plane of the Picture, def 250	Cylindrical Surface, illus

	PAGE		PAG
Projection, Forwarddesc. 152, illus.	155	Rack and Pinion, desc	20
Hexagon Nut, illus.,	160	Radius of a Circle	4
Marking Dimensions	150	Reading Working Drawings, desc	22
Lines of Sight	150	Rectangle, def	4
Scaling and Measuring in	149	To Construct a	
Sight-Lines, illus	151	Reproducing Drawings, desc	18
Sloping Surface, desc		Reverse Curve, def	
Spur-Wheel, desc	162	Rhomboid, def	
Projection Drawing, desc	148	Rhombus, def	
Illus 149, 151, 153, 154, 155, 157, 158, 160, 161	, 163		
Principles of	148	Right-Angle, def	
Spur-Wheel, illus 163	. 212	Triangle, def	5
- · · · · · · · · · · · · · · · · · · ·		Robinson, A. W., M. E., note, Office Rules	19
Proportional Dividers, illus		Rolling-Circie in Gear-Wheel	20
Proportions of Teeth of Wheels		Rule, Area of a Circle, To find the	27
Proposition, def	83		
Protractor, desc	128	Circumference of a Circle, To find the	
Pulley and Friction Clutch, illus	224	Cylinder, To find the contents of a	27
Punching Pressillus. 222, desc.		Diameter of a Circle, To find the	27
Functing 1 ress	223	Illus	8
Quadrant, def	49	Inscribed Square, To find side of an	27
Quadrilateral, def	47	Parallelogram, To find the area of a	27
Quadrisect, def	49	Pyramid or Cone, To find the contents of a	27



Hawkins' M	Techa	nical	Drawing. 2	95
muse not be a located	PAGE	Samall am		AGE
Rule, Radius of a circle, To find the			Curve, desc	117
Sphere, To find the contents of a	271	Uni	versal Curve, illus	134
Square, To find the side of an equal	271	Secant of	f an Arc	99
Trapezoid, To find the area of a	271	Section,	lef	49
Triangle, To find the area of a	271	Dra	wingillus. 163, desc.	160
Two-footdesc., 127, 128, illus.	128	Sectional	, def	49
Wedge, To find the contents of a	271	Section-L	iner, illus	116
Rules for Drawing Office	191	Section I	ines in Drawings	240
Wheels, To find proportions of	219	Section-L	ining, Cast-iron, etc., illus	182
		Cog	-Wheel, illus	183
Sand Paper, Removing surface of paper	168	Section-L	ining Drawingsdesc. 182, illus.	183
Scale, Drawing to, desc	126	Wh	eel Hub, illus	184
Scale Drawings, To read	230	Selecting	Drawing Instruments103,	240
Scale, Flat, illus	127	Semi-Circ	ele, def	43
Triangular, illus	127	Sensitize	d Paper, desc	188
Scalene Triangle, def	50	Set-Squar	re, illus102,	114
Seale or Approximate Perspective	257	Shading	Curves, illus	181
Scale Rule, for Proportions of Teeth	214	Shading	Drawings	180
Scales, Drawing, desc	126	Shadow,	def	49
Scholium, def	83	Shadow	Line, def	46
Screw-Thread, U. S. Standard Gauge	280	Shadow	Lines, "Points"	241

	.ge 57	Spur Mortise-Wheel, illus	AGE
Shop Drawings, Office Rules		Spur-Wheel, desc	
Sight, Point of, in Perspective Drawing	52	How to Draw	209
Sight Lines in Projection, illus	57 99	Projectiondesc. 162, illus.	163 202
Skew-Gearing, desc 20 Sketch Books, desc 14 Office Practice 15	42	To Convert into an Octagon	95 94
Sketches, details	55	Standards, for U. S	278
Points to be observed in	-2	Straight Line, def To Draw a Perpendicular to a	46
Solid, def49,		Drawing Figures of	7-8
	49	To Bisect a Steel, Section-Lining, illus	182
Spiral Curve, def		Surface, def	, 82



	Hawkins'	Mech	anical	Drawing.	297
Table	of Areas of Circles	PAGE	Tec-San	Bre, Points about	PAGE
	Bolts, Standard Sizes of			Bevel Gears, desc	
	Circular Measure			nd Definitions, Preliminary	•
	Circumferences of Circles	•		ces, Use of, in Blue Prints	
	Contents	••		dron, def	
	Decimal Equivalents	•		n, def	•
	Diameters of Circles	-		rackillus 109, desc.	110
	Land Measure			d Colors, desc	184
	Metric Equivalents	270		d Date, on Sketches.	
	Pipe, Standard Sizes of Welded	•		atc, Scale, etc., Office Rules for	
	Roman Figures			vre	
	Solid Measure		Tracing	-Cloth, desc	186
	Wire Gauges	278	Tracing	, Office Rules for Keeping	195
	Useful for Draughtsmen		Ti	nted and Shaded, desc	184
Tange	ent of an Arc, def		Tramme	els, desc. and illus	125
	To Draw a, to a Circle			um, def	
Tee-I	ron, illus	-	Trapezo	oid, def	48
	quare, Adjustable, desc. and illus		Trestles	Drawing-Board, desc. and illus	110
	Desc	-	Triangle	e, def	50
	How to Use, illus		_	Describe a Circle about a	_
	Illus	• • •	Triangle	e, or Set-Square, desc. and illus	

	PAGE		PAGE
Triangle, or Set-Square, How to Usedesc. 147, illus.	166	Vertex, Ot an Angle, def	42
Triangles, illus	102	Vertical, def51	, 251
To Construct	92	Vertical Lines, in Perspective	257
Trigonometry, principles and def	98	Vertical-Plane, def	249
Trisect, def	50	View, def	51
Trundle Wheeldesc. 201, illus.	208	Visual Ray in Perspective Drawing	256
Two-foot Rule, illus		Visual Rays of Lightdesc. 252, illus.	255
		Vulcanite, Section-Lining, illus	182
U. S. Standards, Pipes Upright Lines, How to Draw Useful Tables for Draughtsmen		Water Reflection in Perspective Drawing, illus Wheel, Bevel, A, illus	
Cociai 2001co 101 Diangaromomini in incocia	200	Crown, illus	
Valve, Blow-offdesc. 174, illus.	175	Hub, Section-Lining, illus	184
Valve Gear, or Link Motion, illus	225	Internal Gear, desc201	, 207
Vanishing Point, def. and illus	251	Miter, A, illus	204
In Drawing, illus	250	Proportions of the Teeth of a	210
In Perspective Drawing	252	Spurillus. 198, desc. 199	, 201
Varnish, Shellac, for Drawings	24 I	Worm, desc	201
Versed Sine of an Arc	99	Wood, Sectiou-Lining, illus	182
Vertex def	5 1	Working Drawing, Bending Machine	220-1



Hawkins' Me	e c h a n	iical	Drawing. 2	99
-	PAGE			AGE
Working Drawing, Def	51	Working	g Drawings, desc219,	227
Illus218, 220, 221, 222, 223, 224, 225, 226,	228	Worm-G	ear, desc	206
Bumping Post, illus	226	Worm-V	Vheeldesc. 201, illus.	206
Points, etc	243	Sp	eed of a	216
Power Punching Press	222	Wreneh	, illus	75
Numbering a, Office Rules for	195	Wrist-Li	nes, illus	64
To Read a	229	Wrough	t-Iron, Section-Lining, illus	182



Digitized by Google



Digitized by Google

Engineering and Electrical Works.

I.
Hawkins' New Catechism of Electricity, price post-paid, \$2.00
п.
Hawkins' Aids to Engineers' Examinations, price post-paid, 2.00 (With Questions and Answers.)
III.
Hawkins' Maxims and Instructions for the Boiler Room, price post-paid, - 2.00
· IV.
Hawkins' Hand Book of Calculations for Engineers, price post-paid, - 2.00
V.
Hawkins' New Catechism of the Steam Engine, price post-paid, 2.00
VI.
Hawkins' Indicator Catechism (a practical treatise), price post-paid, 1.00

Each volume is provided with a carefully arranged reference index, which places at ready command the information contained in the book on any special subject upon which immediate help is needed.

Publishers' Announcement.


THE Hawkins Series of Books for Engineers are to-day the most approved works for practical Engineers ever published; they have been used by engineers, firemen, electricians, machinists and superintendents, and found helpful in the highest degree. The books are just as described in the following pages, and that they are found serviceable and satisfactory to those who have already purchased them, the two pages of testimonials will prove. Many such letters of approval have been received, of which those printed are selections.

Hawkins' works are up-to-date, and strictly educational, each book beginning with simple and easily understood principles and practices and leading up to subjects useful and helpful to the most advanced.

To the list of six books described in the following pages is now added the volume Self-Help in Mechanical Drawing, price \$2.00, delivered free to any part of the world.

A Catalogue of these books is sent free upon request; correspondence and patronage is solicited by



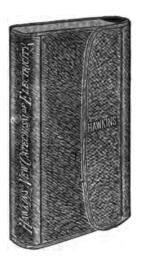

New Catechism of Electricity A Practical Treatise

THIS book has been issued in response to a real demand for a plain and practical treatise on the care and management of electrical plants and apparatus—a book to aid the average man, rather than the inventor or experimenter in this all alive matter.

Hence the work will be found to be most complete in this particular direction, containing all the (book) information necessary for an experienced man to take charge of a dynamo or plant of any size.

So important is the subject matter of this admirable work that there is only one time to order it and that is **NOW.**

Every Volume is Complete in Itself

HIS volume contains 550 pages of valuable information, 300 diagrams and illustrations, handsomely bound in heavy red leather, with gold edges, making a handy pocket companion; size $4\frac{1}{2} \times 6\frac{1}{2}$ inches.

The Dynamo: Conductors and Non-Conductors; Symbols, abbreviations and definitions relating to electricity; Parts of the Dynamo; The Motor; The Care and Management of the Dynamo and Motor.


Electric Lighting; Wiring; The rules and requirements of the National Board of Underwriters in full; Electrical Measurements.

The Electric Railway; Line Work; Instruction and Cautions for Linemen and the Dynamo Room; Storage Batteries; Care and Management of the Street Car Motor; Electro Plating.

The Telephone and Telegraph; The Electric Elevator; Accidents and Emergencies, etc., etc.

No less than 25 full-page illustrations have been given of various dynamo machines, and an equal number of part-page illustrations.

A full one-third part of the whole work has been devoted to the explanation and illustrations of the dynamo, and particular directions relating to its care and management;—all the directions are given in the simplest and most kindly way to assist rather than confuse the learner. The names of the various parts of the machine are also given with pictorial illustrations of the same.

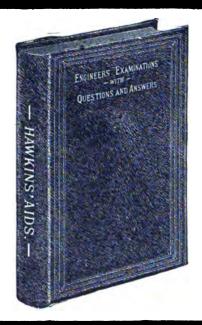

Engineers' Examinations Questions and Answers

THIS volume has over 200 pages of practical "pointers" showing the path of advancement, so much desired by aspiring engineers and firemen. It is printed on excellent paper and handsomely bound in heavy red leather, with gold title and edges. It is strongly bound for continuous study; the size is 5 x 7 1/2.

The work is a most important aid to all engineers, and is undoubtedly the most helpful ever issued relating to a safe and sure preparation for examination.

It presents in a condensed form the most approved practice in the care and management of Steam Boilers, Engines, Pumps, Electrical and Refrigerating Machines.

On the following page is a list of its "helpful" contents.

Each Volume Complete in Itself

HIS book embraces information not elsewhere obtainable. It tells exactly what an engineer will have to go through in getting a license, with much kindly and helpful advice to the applicant for a license.

It gives a short chapter on the "Key to Success" in obtaining knowledge necessary for advancement in engineering.

It contains the annual report of the superintendents of "Steam Boiler Inspection and Certification of Engineers" for New York; it contains various rules, regulations and laws of cities for the examination of boilers and the licensing of engineers.

It contains the laws and regulations of the

United States for the examination and grading of all marine engineers.

The book gives the underlying principles of steam engineering in plain language, with specimen questions and answers likely to be asked by the examiner.

It gives a few plain rules of arithmetic with examples of how to work the problems relating to the safety valve, strength of boilers and the horse power of the Steam Engine and Steam Boiler.

The main subjects treated, upon which are given detailed information with questions and answers, are as follows:—The Steam Boiler, Boiler Braces, Incrustation and Scale, Firing of Steam Boilers, Water Circulation in Boilers, Construction and Strength of Boilers, The Steam Engine, Engine and Boiler Fittings, Pumps, the Injector, Electricity and Electric Machines, Steam Heating, Refrigeration, Valve Setting, etc., etc.



Maxims and Instructions for The Boiler Room

THIS is, of all the Hawkins books, perhaps the most useful to the Engineer-incharge, to the Fireman, to the Steam user or owner, and to the student of Steam Engineering.

It is uniform in binding and size with "Calculations for Engineers" and the "New Catechism of the Steam Engine, the size is 6 x 8½ inches, 1½ inches thick; weight 2 lbs., it is bound in green silk cloth, gilt top and titles in gold; it has 331 pages with 185 diagrams and illustrations.

See next page for further particulars relating to the practical subjects embraced in this valuable volume.

Each Volume Complete in Itself

HE plan followed in this work is the same as that so generally approved in "Calculations"; it proceeds from the most simple rules and maxims to the highest problems; it is both a book of instruction and a book of reference. The carefully prepared Index contains nearly one thousand references, thus making it almost a dictionary of terms.


This work is arranged according to the following order of subjects:

Materials; Evaporation; Fire Irons and Tools; Firing of Steam Boilers; Points relating to Fuels; Foaming; Chapter of Don'ts; Full descriptions of the Locomotive, Upright, Water Tube, Horizontal, and Marine Steam Boilers; Parts of a Boiler; Various Specifications for Construction of a Boiler; Riveting; Bracing.

Various Repairs; Grate Bars; Boiler Cleaners; Boiler Scales; Boiler Tests; Scumming; Chemical Terms; Inspection of Boilers; Mechanical Stokers; Pumping Machinery; Feed Water Heaters; Steam Heating; Plumbing; Safety Valve Rules.

And many hundreds of other valuable "pointers."

No Engineer, Fireman or Steam User can afford to be without this valuable book, as it contains the pith and vital "points" of economical and safe steam production.

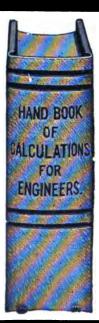

Hand Book of Calculations for Engineers

THIS is a work of instruction and reference relating to the steam engine, the steam boiler, etc., and has been said to contain every calculation, rule and table necessary to be known by the Engineer, Fireman and steam user.

It is thus a complete course in Mathematics for the Engineer and steam user; all calculations are in plain arithmetical figures, so the average man need not be confused by the insertion of the terms, symbols and characters to be found in works of "higher mathematics," so-called, yet the book is a complete treatise.

It is bound uniform with the "New Catechism of the Steam Engine" and the "Instructions for the Boiler Room" (size 6 x 8% inches, weight 2 lbs.), in green silk cloth; printed on heavy, fine surface paper; gold titles, gilt top; with 330 pages and 150 illustrations.

Each Volume is Complete in Itself and the Price Named (\$2.) Includes Free Delivery to Any Part of the World

HE work comprises the elements of Arithmetic, Mensuration, Geometry, Mechanical Philosophy, with copious notes, explanations and help rules useful to the Engineer.

The following are but a few of the several hundred subjects to be found clearly and helpfully contained in the volume:

Mechanical Powers; Natural or Mechanical Philosophy; Strength of Materials; Mensuration; Arithmetic; Description of Algebra and Geometry; Tables of Weights, Measures, Strength of Rope and Chains, Pressures of Water, Diameter of Pipes, etc.

The Indicator, How to Compute; The Safety Valve, How to Figure; The Steam Boiler; The Steam Pump; Horse Powers, How to Figure for Engines and Boilers; Steam, What It Is, etc.; Index and Useful Definitions.

And for reference, Tables of Squares and Cubes, Square and Cube Roots, Circumferences and Areas of Circles, Tables of Weights of Metals and Pipes, Tables of Pressure of Steam, etc.



New Catechism of the Steam Engine

THIS is a rarely fine book, handsomely bound in green silk cloth, gilt top, titles in gold; 440 pages; 325 illustrations; size 6 x 8 3/4 inches, 1 1/4 inches thick; weight 2 lbs. It is bound uniform in style and size with the "Hand Book of Calculations" and "Maxims and Instructions for the Boiler Room."

The work is gotten up to fill a long-felt need for a practical book. It gives directions for running the various types of steam engines that are to-day in the market. A list of subjects which are fully yet concisely discussed is found on the next page.



HE subject matter of the New Catechism of the Steam Engine is not arranged in chapters, but according to the more natural order best designed to explain at greater or less length the different themes discussed. The following are the leading divisions of the 480 pages of the book:

Introduction; The Steam Engine; Historical Facts Relating to the Steam Engine; Engine Foundations; The Steam Cylinder; Connecting Rods; Eccentric; Governor; Materials; Workmanship; Care and Management; Lining up a Horizontal or Vertical Engine; Lining Shafting; Valve Setting; Condensers; Steam Separators.

Air, Gas and Compressing Engines; Compounding; Arithmetic of the Steam Engine; Theory of the Steam Engine; Construction.

There is also a description of numerous types of the Engines now in operation, such as the Corliss, Westinghouse, etc.

The book also treats generously upon the Marine, Locomotive and Gas Engines.

This will prove a valuable book both for study and reference, being finely illustrated and indexed.



Price, \$1.

Indicator Catechism A Practical Treatise

THIS is a new book on an important subject. It is designed to thoroughly instruct the buyer upon the practical use of the Indicator, the Planimeter, the Pantagraph, Reducing Motions, etc. It contains nearly 200 pages with 120 valuable illustrations and diagrams, with questions and answers.

Contents.—Preparing Indicator for Use; Reducing Motions; Piping up Indicator; Taking Indicator Cards; The Diagram; Figuring Steam Consumption by the Diagram; Revolution Counters; Examples of Diagram; Description of Indicators; Measuring Diagram by Ordinates; Planimeters; Pantagraphs.

Properties of Steam; Calculations from Diagrams of the Water Consumption; Computation from Diagram of the Indicated H. P.; Tables, etc.

The book is handsomely bound in silk (red) cloth, gilt edges, gold titles; it is 5 ½ x 8 ½ inches and weighs 1 ½ lbs.

Each Volume Complete in Itself

Testimonials.

Stapleton, Staten Island, N. Y.

"Received your books O. K. Feb. 11, and was highly pleased with them. I am sorry I did not send for them long ago, but did not think that they were what they are. I will do all in my power to get my friends to buy them."

WM. KENNEDY, Jr., Merritt & Chapman Wrecking Co.

Lonaconing, Md.

"I am well pleased with the six Hawkins books I own. They are worth their weight in gold to me."

R. L. SIGNOB.

Dunlevy, Pa.

"I am glad to write to you that your books are just what you recommend them to be, and I have found more information in them than I have found in any other books of their kind.

Taylor, Pa.

"Your books were received in good condition, and I was greatly surprised when I saw what a good bargain I had made."

JAMES W. THOMAS.

CLARENCE BOOKER.

Rochester, Minn.

"You may use my name as one who has used Hawkins' works and can recommend them to every one as a set of books that will teach them something."

CLARENCE LEE STEWART.

Haddam, Kan.

"The books are O. K. The best of their kind I have ever studied, and by far the cheapest."

J. A. McGREGOR.

Hagerstown, Md.

"Am very much pleased with your books. They are worth five times your price to every Engineer."

Westfield, Mass.

"Every fireman and engineer, whether he be an experienced one or one just starting in, should possess your works. I also find in Hawkins' works many things useful in a thousand ways outside the engine room."

CHAS. HEYNIGER.

S. H. SWAYNE, Chief Eng.

Testimonials.

Lincoln, Neb.

"Hawkins' educational works are the most complete set of books I have ever seen. I have been in the engineering business for twenty years and have read everything about mechanical literature I could find."

GEORGE W. AILLS.

Purishville, N. Y.

"I have quite a library of works on mechanical and electrical engineering but I would not return your books if they cost twice as much. I have examined them quite thoroughly, and find that they are written in a practical manner for a busy man."

E. E. SMITE.

London, Ont.

"I am the possessor of many books upon mechanical engineering, but yours are the best I have ever read. The more I study them the more I want to. They are practical and easy to understand. Every engineer should possess them."

THOMAS R. SHAW.

Fountain Park, Ohio.

"Your books are just as you represent them to be, and are worth more to the engineer than you charge for them. If I could not get another set I would not take fifty dollars for them."

T. J. WOODRON.

New Haven, Conn.

"I think they are the best books published. I have studied many engineering books, but none rival yours."

GEORGE M. KALMER. Engineer N.E. Dairy Co.

Canton, Ohio.

"I can recommend Hawkins' works very highly, as they are most practical, and are especially to be commended for the clear, concise manner of expressing the ideas contained therein. Any ordinarily educated man can easily and thoroughly grasp their contents."

D. S. WEAVER.

Directions.

All Books are
Shipped to Subscribers, Post or
Express Charges
Paid, Upon
Receipt of Order.



Remittances can
be Sent by Post
Office or Express
Money Orders,
Payable to Our
Order.





Digitized by Google

Digitized by Google

1.4/2

THIS BOOK IS DUE ON THE LAST DATE STAMPED BELOW

IAN 18 1915

MAY &.

MAY 8 1915 OCT 22 1915

> NOV 5 1915 MAR 17 1917

> > DEC 5 1917

OCT 28 1920

Digitized by Google

Y D 04328



Digitized by Google

